


# MONOBLOCK<sup>®</sup>

INTEGRATED X-RAY SOURCES

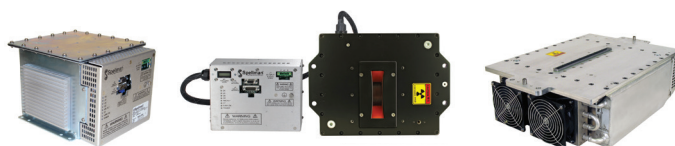


# 2025



[spellmanhv.com](http://spellmanhv.com)

07.08.2025

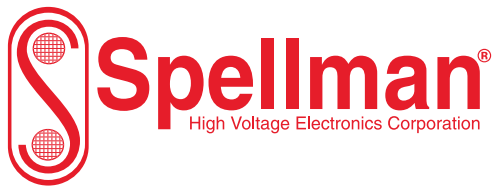

Plastics Sorting

Mineral Analysis

Crystal Inspection

X-Ray Fluorescence

Plating Measurement

X-Ray Diffraction

Thickness Gauging

Cargo Screening

Food Inspection

NDT Analysis

Undersea Telecom

Security Applications

Radiography

Fluoroscopy

Extraoral Dental X-Ray

Bone Densitometry

Mammography

Mass Spectrometry

Capillary Electrophoresis

Electrostatic Printing

Ion Beam Implantation

Semiconductor Processing

Electron Beam Welding

Capacitor Charging

High Power RF Transmitters

## Spellman High Voltage. Powering the Future of Advanced Technologies



For over 75 years, Spellman has been helping technology companies grow by providing standard and custom high voltage power converters, X-Ray generators and Monoblock® X-Ray sources of exceptional value and

performance and by aligning our procedures, processes and infrastructure to support our customers' goals – a process we call homologation. At Spellman, homologation is in everything we do. From initial product concept through final delivery, we dedicate a team of experts to work with each customer.

### Your Vision is Our Mission

Spellman advances medical care, industrial processes, quality control, scientific research, security and telecommunications by providing innovative high voltage power conversion solutions that enable equipment manufacturers to improve their systems' performance, reliability, cost and bottom line.

### Innovation & Quality

With over 75 years of high voltage innovation, world-class ISO certified production facilities and global support network, Spellman can meet the needs of discriminating global OEM's system manufacturers

### Compliance and Safety

Safety and Regulatory Agency approvals such as: UL, CSA, and IEC can be provided. In addition, Spellman is authorized to conduct UL sanctioned testing

### Risk Management

Consistent processes across multiple facilities ensures a secure supply chain. Products can be manufactured at multiple Spellman sites. With standardized manufacturing, training and equipment, you can be assured of quality products and service for years to come

### Support and Service


Our globally situated technical support centers are strategically located to provide rapid local response to customer needs. Support Centers are linked through a common ERP system and real-time data reporting so information is always available about your product and delivery status

[spellmanhv.com](http://spellmanhv.com)



# MONOBLOCK®

## THE INTEGRATED X-RAY SOURCE

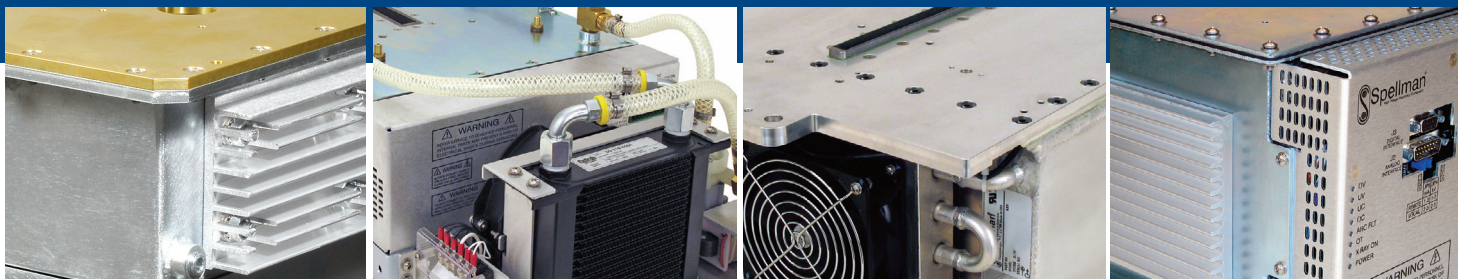

Spellman has set the standard in development of integrated X-Ray sources with its Monoblock® series.

Our custom OEM designs are used in baggage screening, explosive detection, medical imaging, food inspection, non-destructive testing and many other applications.

A Monoblock® is typically a single assembly containing both high voltage generation components and an X-Ray tube. The physical compactness and inherent elimination of cabling reduces cost and the risk of breakdown making these products extremely reliable. Monoblocks® can be designed in a wide variety of geometries, with beam shape, focal spot size and other critical parameters customized for the application. Digital control via RS-232, Ethernet or USB is available.

- ✓ **Internal X-Ray tube eliminates maintenance issues with external HV cables/connectors**
- ✓ **Power Factor Correction minimizes input power requirements**
- ✓ **Universal Input circuitry accepts a wide variety of worldwide input voltages**
- ✓ **Sealed, leak-free tank can be mounted in any physical orientation**
- ✓ **Unique radiation shielding minimizes weight while ensuring very low X-Ray leakage**
- ✓ **Standard digital interface simplifies communication and system integration**

MODEL	MAX. VOLTAGE	MAX. POWER	PAGE
XRB011	80kV	20W, 50W	4-7
uXRB130P65	130kV	65W	8-12
XRB80N100	80kV	100W	13-16
XRB80PN100HR	80kV	100W	17-22
XRB100N100	100kV	100W	18-25
XRBHR	80kV–100kV	100W–500W	26-33
XRBD	160kV	100W–500W	34-41
XRB180PN200	180kV	200W	42-44
XRB80PN300	80kV	300W	45-49
XRB80PN320	80kV	320W	50-52
XRB200PN400/CT	200kV	400W	53-55
XRB160PN480/1	160kV	480W	56-58
XRB160PN480/2	160kV	480W	59-61
XRB160PN480/CT	160kV	480W	62-64
XRB200PN500	200kV	500W	65-67
XRB150PN600	150kV	600W	68-70
XRB160PN688/CT	160kV	688W	71-73
PDM90PN900	90kV	900W	74-76
MMB125PN3.5	125kV	3.5kW	77-79



+1.631.630.3000

[www.spellmanhv.com](http://www.spellmanhv.com)

email: [sales@spellmanhv.com](mailto:sales@spellmanhv.com)



- **Integrated HV Supply, Filament Supply, X-Ray Tube, Beam Port and Control Electronics**
- **Compact & Lightweight**
- **Can be Mounted in Any Physical Orientation**
- **Analog or Digital Control Interface**

Spellman's XRB011 Series of Monoblock® X-Ray sources are designed for OEM applications powering its internal X-Ray tube up to 80kV at 20W and 80kV at 50W. Features like 24Vdc input voltage, small package size, standard analog interface and RS-232/Ethernet digital interface simplify integrating the XRB011 into your X-Ray system. Proprietary emission control circuitry provides excellent regulation of X-Ray tube current, along with outstanding stability and performance.

## TYPICAL APPLICATIONS

Medical X-Ray: Fluoroscopy and Radiography for Extremities, Specimen Radiography.  
Pulsed Fluoroscopy (contact Spellman sales)  
Industrial X-Ray: Component inspection and Non-Destructive Testing

## SPECIFICATIONS

### X-Ray Characteristics:

Tube Type: Micro focus tube  
Focal Spot: 33 $\mu$ m Nominal, 50 $\mu$ m max. (IEC 336)  
Beam Filter: Ultem 0.060" (1.5mm)  
Oil 0.175" (4.4mm)  
Beam Geometry: Symmetrical 40° cone

### Input Voltage:

20W: 24Vdc  $\pm$ 1V @ 2.5A  
50W: 24Vdc  $\pm$ 1V @ 4A

### X-Ray Tube Voltage:

Nominal X-Ray tube voltage is adjustable between 35kV to 80kV

### X-Ray Tube Current:

20W: 0-250 $\mu$ A over specified tube voltage range  
50W: 0-700 $\mu$ A over specified tube voltage range

### X-Ray Tube Power:

20/50W maximum continuous

### Voltage Regulation:

Line:  $\pm$ 0.5% for a  $\pm$ 1V change of nominal input line voltage  
Load:  $\pm$ 0.1% for a load change of 25 $\mu$ A to maximum rated current

### Voltage Accuracy:

Voltage measured across the X-Ray tube is within  $\pm$ 1% of the programmed value

### Voltage Risetime:

Ramp time shall be  $\leq$ 250ms from 10% to 90% of maximum rated output voltage

### Voltage Temperature Coefficient:

$\leq$ 100ppm/°C

### Over Temperature Fault:

Indicates that the internal oil temperature has exceeded 65° C. The high voltage output will be disabled. Toggling the X-Ray ON Command OFF and ON will reset the fault.

### Over Voltage Fault:

An overvoltage (OV) fault is detected when the output voltage exceeds 82kV. The high voltage output will be disabled. Toggling the X-Ray ON Command OFF and ON will reset the fault.

### Voltage Ripple:

1% peak to peak

### Current Regulation:

Line:  $\pm$ 0.5% for a  $\pm$ 1V change of nominal input line voltage  
Load:  $\pm$ 0.5% for a voltage change of 35kV to 80kV

### Current Accuracy:

Current measured through the X-Ray tube is within  $\pm$ 2.5% of the programmed value

### Over Current Fault:

An overcurrent (OC) fault is detected when the emission current exceeds 275 $\mu$ A (20W model) and 710 $\mu$ A (50W model). Toggling the X-Ray ON Command OFF and ON will reset the fault.

### Arc Intervention:

One arc fault. The high voltage output will be disabled. Toggling the X-Ray ON command OFF and ON will reset the fault.

### Filament Configuration:

Internal high frequency AC filament drive with closed loop filament emission control

### Analog Interface:

Ground referenced 10kV/V, 25 $\mu$ A/V (20W model) and 70 $\mu$ A/V (50W model) for programming and monitoring analog interface signals. Open collector, active low digital signal interface. Internal jumper is needed to be configured for analog interface.



#### Digital Interface:

RS-232: standard  
Ethernet: optional

#### Control Software:

A demo GUI is available for engineering evaluations

#### Interlock/Signals:

A hardware interlock functions in both analog and digital programming modes.

#### Operating Temperature:

0°C to +40°C

#### Storage Temperature:


-20°C to +70°C

#### Humidity:

10% to 95% relative humidity, non-condensing

#### Cooling:

20W and 50W option: Customer provided, external cooling fan, 50cfm, minimum

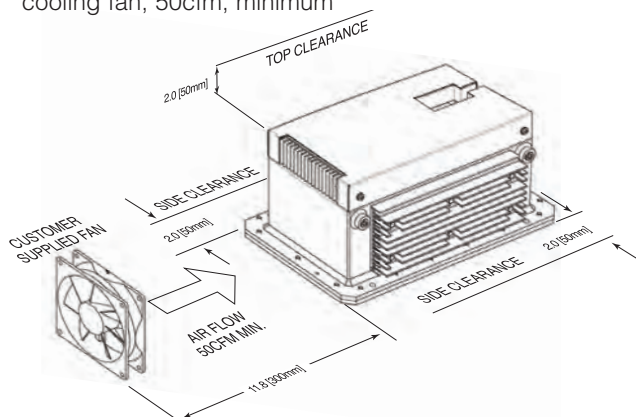

#### Analog Interface and Input Line Connector:

25 pin D connector, male

#### Digital Interface Connector:

RS-232: 9 pin D connector, female  
Ethernet: RJ45 connector

#### Grounding Point:

6-32 ground stud provided on chassis

#### Dimensions:

20W: 5.81"W x 5.0"H x 10.81"D  
(147.57mm X 127mm X 274.57mm)  
50W: 6.00"W x 5.0"H x 10.81"D  
(152.4mm x 127mm x 274.57mm)

#### Weight:

20W: 18lbs (8.165kg)  
50W: 20lbs (9.072kg)

#### Orientation:

Can be mounted in any orientation.

#### X-Ray Leakage:

Less than 1mR/hr at 1 meter

#### Regulatory Approvals:

Compliant to UL/CUL recognized file E242584.  
CE to EN 61010-1 for non-medical applications.

#### RS-232 DIGITAL INTERFACE— J5 9 PIN FEMALE D CONNECTOR

PIN	SIGNAL	PARAMETERS
1	NC	No Connection
2	TX Out	Transmit Data
3	RX In	Receive Data
4	NC	No Connection
5	SGND	Signal Ground
6	NC	No Connection
7	NC	No Connection
8	NC	No Connection
9	NC	No Connection

#### ETHERNET DIGITAL INTERFACE— RJ45 8 PIN CONNECTOR

PIN	SIGNAL	PARAMETERS
1	TX +	Transmit Data +
2	TX -	Transmit Data -
3	RX +	Receive Data +
4	NC	No Connection
5	NC	No Connection
6	RX -	Receive Data -
7	NC	No Connection
8	NC	No Connection

#### ANALOG INTERFACE— J1 25 PIN MALE D CONNECTOR

PIN	SIGNAL	PARAMETERS
1	+24V	+24Vdc±1Vdc @ 4A
2	+24V	+24Vdc±1Vdc @ 4A
3	+24V	+24Vdc±1Vdc @ 4A
4	NC	No Connection
5	+24V RETURN	+24V RETURN
6	+24V RETURN	+24V RETURN
7	+24V RETURN	+24V RETURN
8	Signal Ground	Signal Ground
9	Interlock Input	Input, Active low, Interlock is low safe to enable high voltage. Connect to +24V Return
10	kV Monitor	Output, 0 to 8V = 0 to rated output voltage. Zout=100Ω
11	μA Monitor	Output, 0 to 10V = 0 to rated output current. Zout=100Ω
12	X-Ray Ready status	Output, Active Low, Open Collector, 24Vdc @ 10mA max
13	X-Ray ON status	Output, Active Low, Open Collector, 24Vdc @ 10mA max
14	Filament Standby status	Output, Active Low, Open Collector, 24Vdc @ 10mA max
15	Over Voltage Fault	Output, Active Low, Open Collector, 24Vdc @ 10mA max
16	Over Current Fault	Output, Active Low, Open Collector, 24Vdc @ 10mA max
17	ARC Fault	Output, Active Low, Open Collector, 24Vdc @ 10mA max
18	Filament Current Limit Fault	Output, Active Low, Open Collector, 24Vdc @ 10mA max
19	Signal Ground	Signal Ground
20	Interlock Output	Output, Active Low, Open Collector, 24Vdc @ 10mA max
21	μA Program	Input, 0 to 10V = 0 to rated output current. Zin=10kΩ
22	kV Program	Input, 0 to 8V = 0 to rated output voltage. Zin=10kΩ
23	X-Ray ON Command	Input, Active low Low (short) = X-Ray ON High (open) = X-Ray OFF Internal pull up resistor to +15V
24	Signal Ground	Signal Ground
25	Over Temperature	Output, Active Low, Open Collector, 24Vdc @ 10mA max

### 20W Model ORDERING INFORMATION

#### Medical Applications:

XRB011-80PN20	80kV, 250uA, 20W, Analog Interface, RS-232
XRB011-80PN20E	80kV, 250uA, 20W, Analog Interface, RS-232, Ethernet
XRB011-80PN20A	80kV, 250uA, 20W, Analog Interface


#### Non-Medical Applications:

XRB011-80PN20/CE	80kV, 250uA, 20W, Analog Interface, RS-232, CE
XRB011-80PN20E/CE	80kV, 250uA, 20W, Analog Interface, RS-232, Ethernet, CE
XRB011-80PN20A/CE	80kV, 250uA, 20W, Analog Interface, CE


### XRB011 20W Model

DIMENSIONS: in.[mm]


#### FRONT VIEW

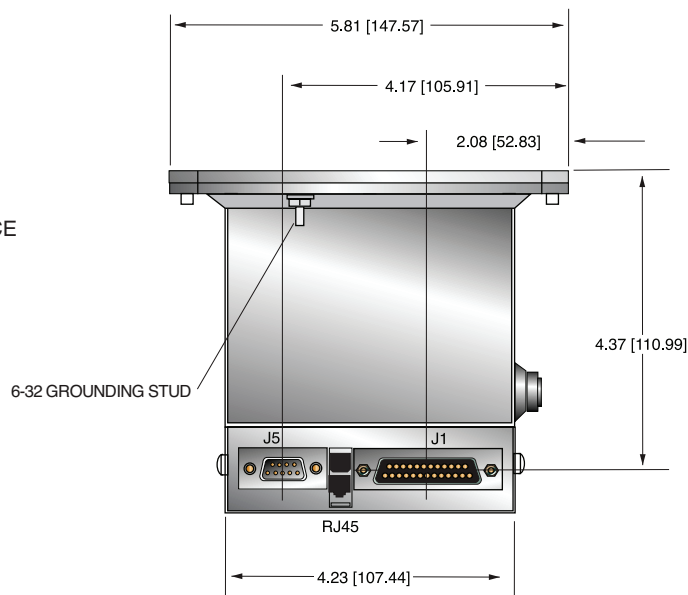

#### SIDE VIEW

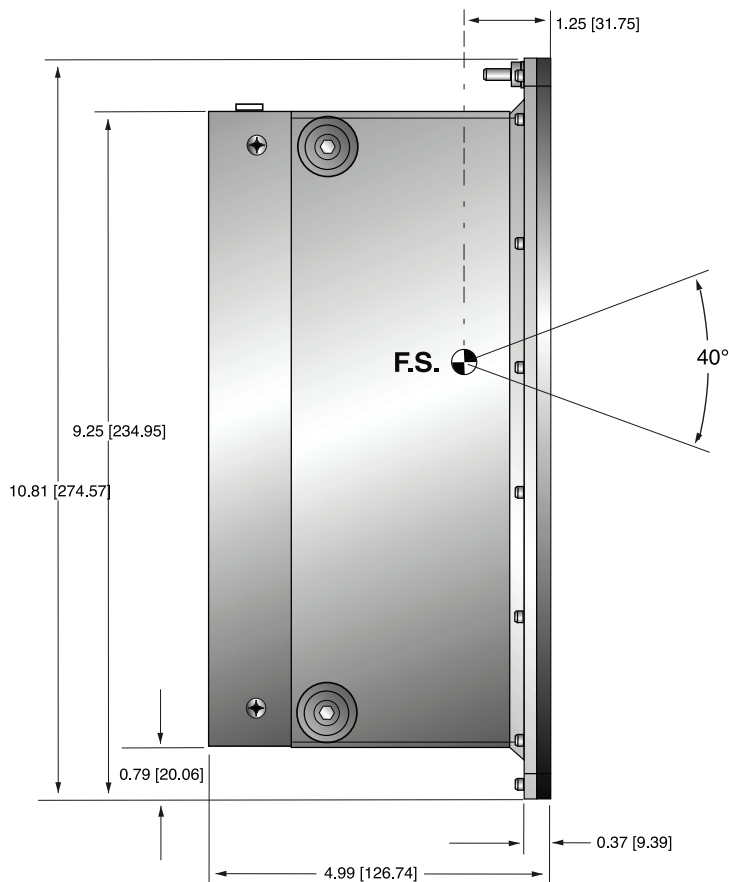

#### TOP VIEW

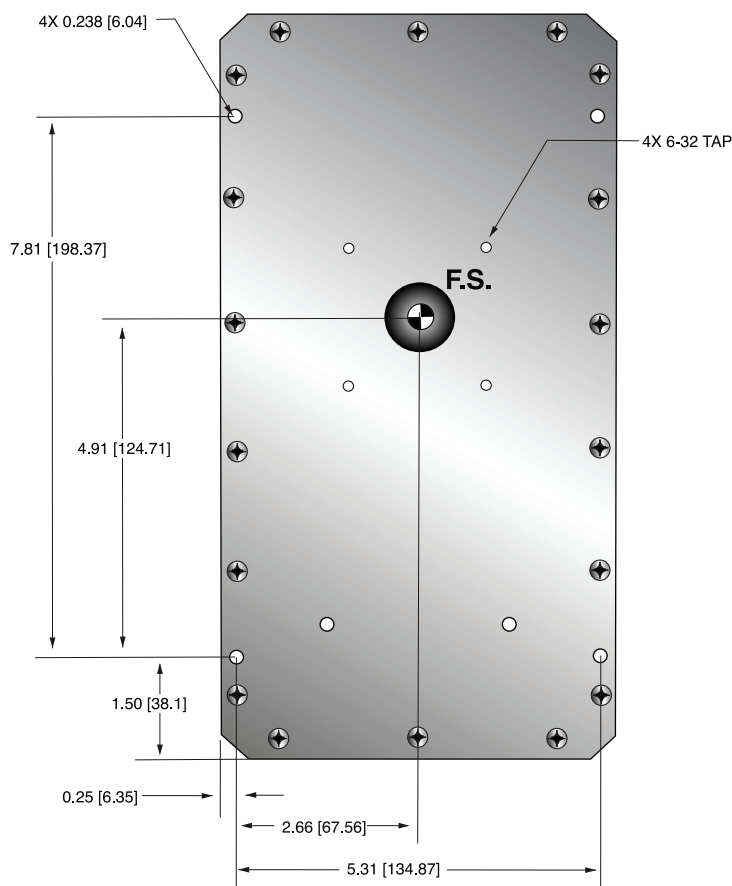



#### 50W Model

#### ORDERING INFORMATION

##### Medical Applications:

XRB011-80PN50	80kV, 700uA, 50W, Analog Interface, RS-232
XRB011-80PN50E	80kV, 700uA, 50W, Analog Interface, RS-232, Ethernet
XRB011-80PN50A	80kV, 700uA, 50W, Analog Interface


##### Non-Medical Applications:

XRB011-80PN50/CE	80kV, 700uA, 50W, Analog Interface, RS-232, CE
XRB011-80PN50E/CE	80kV, 700uA, 50W, Analog Interface, RS-232, Ethernet, CE
XRB011-80PN50A/CE	80kV, 700uA, 50W, Analog Interface, CE


#### XRB011 50W Model

DIMENSIONS: in.[mm]


#### SIDE VIEW

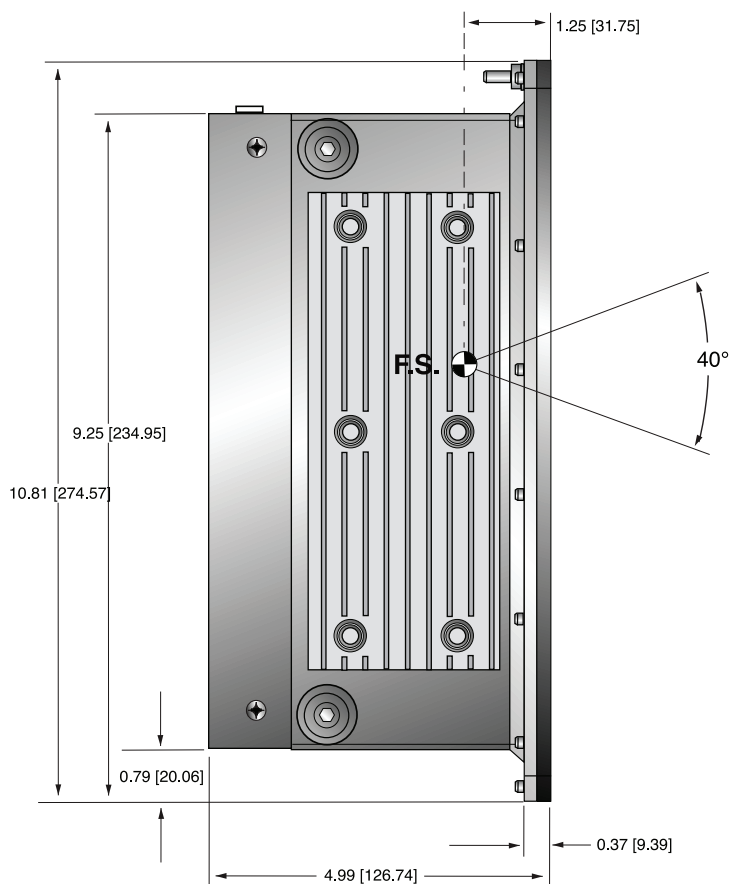

#### FRONT VIEW

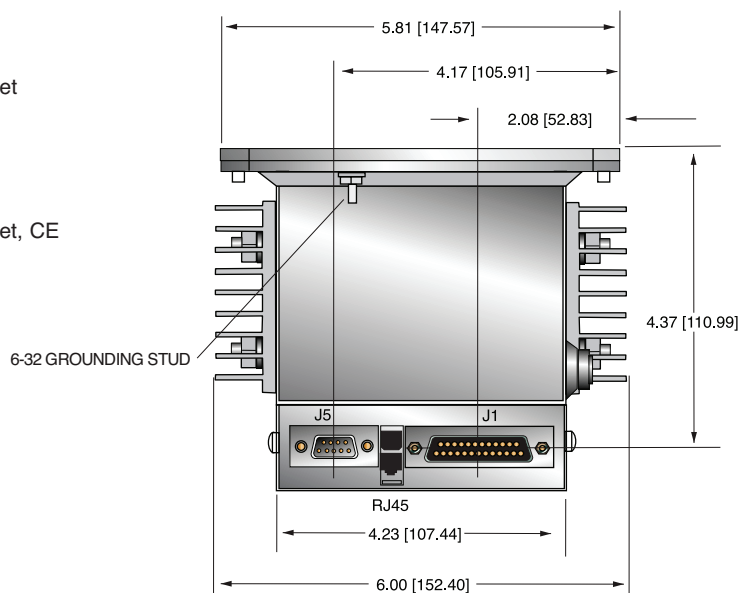

#### TOP VIEW

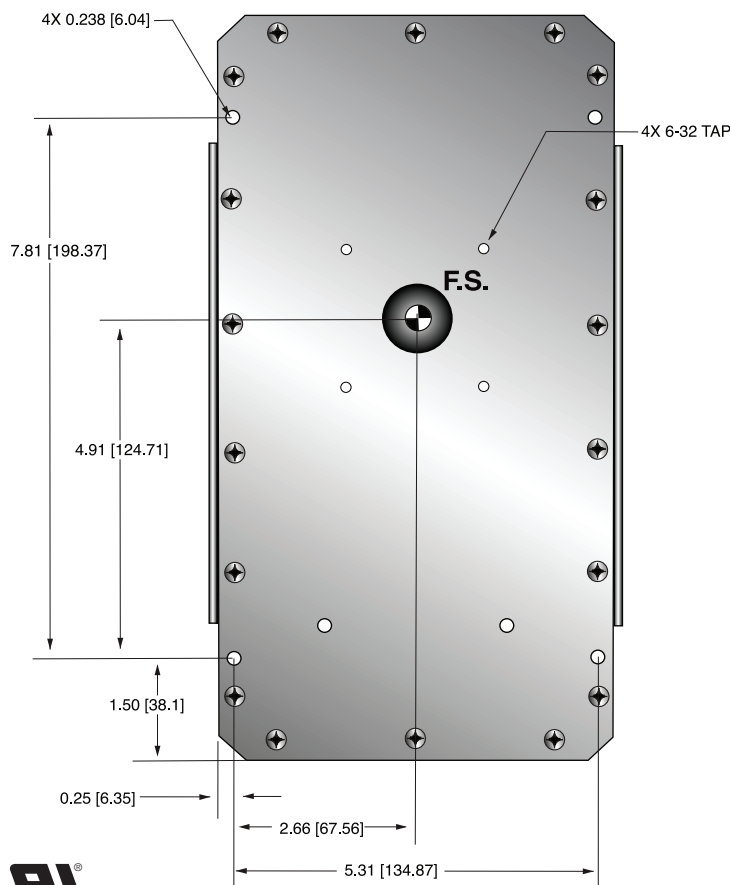



Spellman's  $\mu$ XRB130P65 microfocus Monoblock® X-Ray sources are designed for high resolution imaging applications powering its internal microfocus X-Ray tube up to 130kV @ 65W. Features like 24Vdc input voltage, small package size and standard RS-232 digital interface simplify integrating the  $\mu$ XRB130P65 into your X-Ray system. The small, round focal spot size, optimized over the range of operating voltage, and high magnification, combined with stable high intensity output provides distortion free, superior quality 2D and 3D images.

### TYPICAL APPLICATIONS

#### Industrial X-Ray:

- Circuit board and electronic component inspection
- High resolution Non Destructive Testing of metal and plastic parts
- Micro CT for Industrial applications
- Battery inspection


#### Medical X-Ray:

- Micro CT for life sciences applications

### OPTIONS

**WB** Wide Beam  
**ET** Extended Tube (wide beam only)  
**LW** Light Weight

The uXRB130P65 is ideal for applications such as printed circuit board inspection, battery inspection and industrial/medical micro CT.

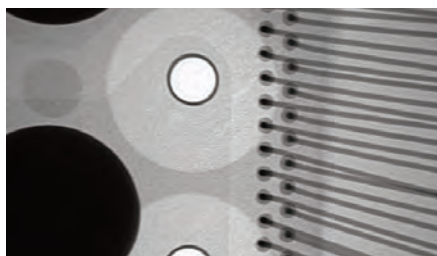

Photos provided by ThermoFisher Scientific

- **Integrated X-Ray Tube and Control Electronics in One Compact Assembly**
- **Standard RS-232 Digital Interface Offers Access to Diagnostics and Operating Logs**
- **Standard Windows Test GUI**
- **7 Micron Focal Spot for Narrow Beam**
- **8 Micron Focal Spot for Wide Beam**
- **10mm/14mm Spot to Window Spacing Provides High Geometric Magnification**

### SPECIFICATIONS

#### Narrow Beam Benefits (Standard):

The small round spot is optimized over the range of kV and power to provide distortion free images. Operated at 4 watts yields a 6 micron spot for high resolution imaging. The 14mm spot to window spacing offers high geometric magnification.

#### Narrow Beam X-Ray Characteristics (Standard):

Spot Ellipticity:  $\pm 20\%$  @ 16 watts, 130kV  
 (either axis referred to average)  
 Beam Geometry:  $\geq 53^\circ$ , round beam, uniform beam profile in any direction  
 Spot to Window Spacing: 14mm  $\pm 0.5$ mm  
 Window Diameter (uncollimated):  $\approx 19$ mm  
 Window Material and Thickness: Beryllium, 0.25mm  
 Target Material: Tungsten

#### Wide Beam Benefits (WB Option):

The 115 degree round beam is well suited for automated inspection where a large field of view is required for maximum throughput or off angled views. The 10mm spot to window spacing provides superior high geometric magnification.

#### Wide Beam X-Ray Characteristics (WB Option):

Spot Ellipticity:  $\pm 20\%$  @ 16 watts, 130kV  
 (either axis referred to average)  
 Cone of Illumination:  $115^\circ$ , round beam, uniform beam profile in any direction  
 Spot to Window Spacing: 10mm  $\pm 0.5$ mm  
 Window Diameter (uncollimated):  $\approx 38$ mm  
 Window Material and Thickness: Beryllium, 0.51mm  
 Target Material: Tungsten  
 X-Ray Leakage: Behind X-Ray tube is  $\leq 0.5$ mR/hr at 2.55cm

**Input Voltage:**  
 +24-27Vdc

**Input Current:**  
 <6 amps



#### Anode Supply:

Output Voltage:

20kV to 130kV (referenced to Cathode Gun Supply)

Output Current:

up to 0.5mA, from 20kV to 130kV

#### Environmental:

Operating Temperature:

0°C to +32°C

Storage Temperature:

-20°C to +70°C

Humidity:

0 to 95%, non-condensing

Altitude:

Up to 5,000 feet (1524 meters)

#### Cooling:

Internal fan is incorporated. Adequate air circulation around unit must be provided.

#### Digital Interface:

RS-232

#### Mechanical:

See drawings

**Weight:** Standard: 30lbs. (13.60kg)

Standard/Extended Tube: 34lbs. (15.40kg)

Light Weight (LW option): 23lbs. (10.43kg)


Light Weight/Extended Tube: 27lbs. (12.24kg)

#### Regulatory Approvals:

Compliant to EEC EMC Directive.

Compliant to EEC Low Voltage Directive.

#### Graphical User Interface

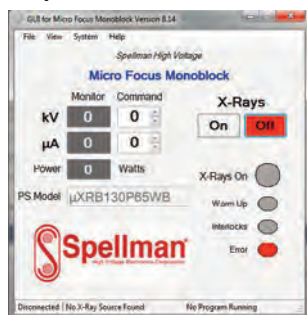

Spellman provides an example of a Graphical User Interface (GUI) for the convenience of the user but most customers implement their own software.

<Main System Screen



Diagnostics Screen

#### J1 INPUT/OUTPUT — 16 PIN AMP #206036-1 CONNECTOR

PIN	SIGNAL	PARAMETERS
1	Chamber Interlock Out	To close Chamber Interlock connect pin 1 to pin 2, R<2Ω
2	Chamber Interlock In	To close Chamber Interlock connect pin 2 to pin 1, R<2Ω
3	X-Ray ON Lamp Out	120Vac @ 3A/250Vac @ 1.5A rated contacts. Close at X-Ray ON
4	X-Ray ON Lamp In	120Vac @ 3A/250Vac @ 1.5A rated contacts. Close at X-Ray ON
5	N/C	N/C
6	Prime Power Interlock Out	To close Power Interlock connect pin 6, 7 to pin 8, 10, R<2Ω
7	Prime Power Interlock Out	To close Power Interlock connect pin 6, 7 to pin 8, 10, R<2Ω
8	Prime Power Interlock In	To close Power Interlock connect pin 8, 10 to pin 6, 7, R<2Ω
9	N/C	N/C
10	Prime Power Interlock In	To close Power Interlock connect pin 8, 10 to pin 6, 7, R<2Ω
11	+24Vdc Input (+)	+24Vdc Input (+)
12	+24Vdc Input (+)	+24Vdc Input (+)
13	+24Vdc Return (-)	+24Vdc Return (-)
14	+24Vdc Return (-)	+24Vdc Return (-)
15	X-Ray On Indicator Out	24Vdc @ 3A rated contacts. Close at X-Ray On
16	X-Ray On Indicator In	24Vdc @ 3A rated contacts. Close at X-Ray On

#### J2 RS-232 DIGITAL INTERFACE — 9 PIN AMP #788903-1 CONNECTOR

PIN	SIGNAL	NAME
1	DCD	Data Carrier Detect
2	RD	Received Data
3	TD	Transmitted Data
4	DTR	Data Terminal Ready
5	SGNO	Signal Ground
6	DSR	Data Set Ready
7	RTS	Request to send
8	CTS	Clear to Send
9	RI	Ring Indicator

#### SPOT TABLE


PARAMETER	NARROW BEAM	WIDE BEAM
Operating Voltage Range	45-130kV	50-130kV
Maximum Power	65W, 130kV	65W, 130kV
Maximum Beam Current	0.500mA	0.500mA
Spot Size	4 Watt	≤ 7μ, 45-130kV
	8 Watt	≤ 10μ, 45-130kV
	16 Watt	≤ 22μ, 45-130kV
	32 Watt	≤ 48μ, 70-130kV
	40 Watt	≤ 60μ, 80-130kV
	65 Watt	≤ 100μ, 130kV

#### How to Order:


Standard (Narrow Beam)	PART NO.: μXRB130P65NB
Wide Beam Option	PART NO.: μXRB130P65WB
Wide Beam Option and Extension Tube	PART NO.: μXRB130P65WBET

DIMENSIONS: in.[mm]


### NARROW BEAM (Standard) SIDE VIEW

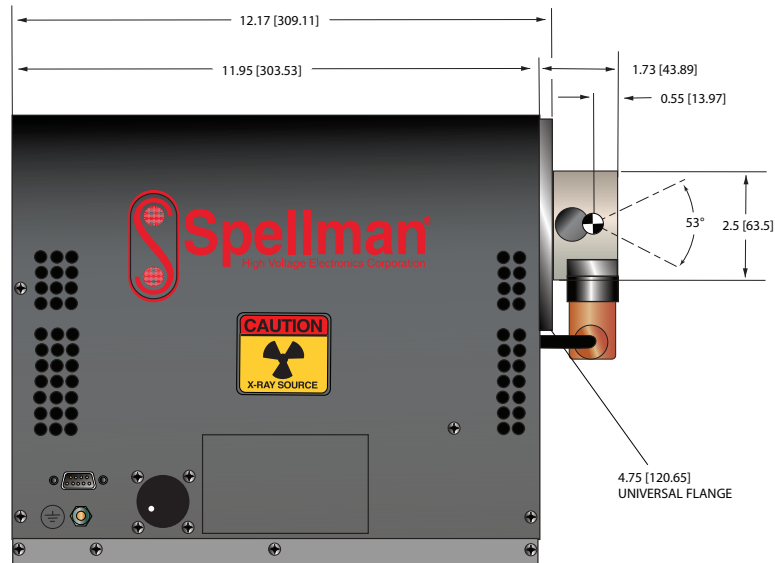


### BOTTOM VIEW

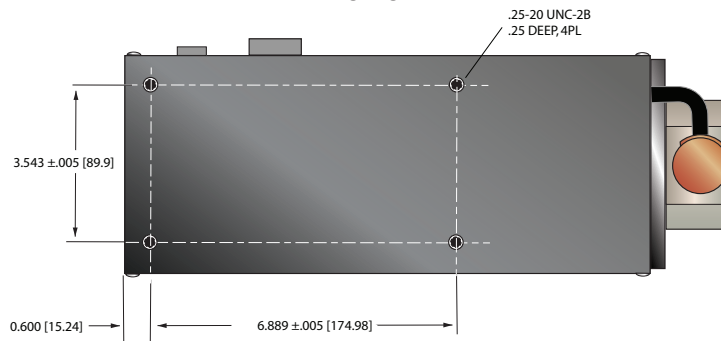

### REAR VIEW

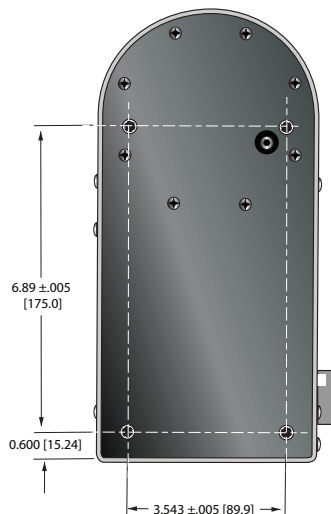


### FRONT VIEW

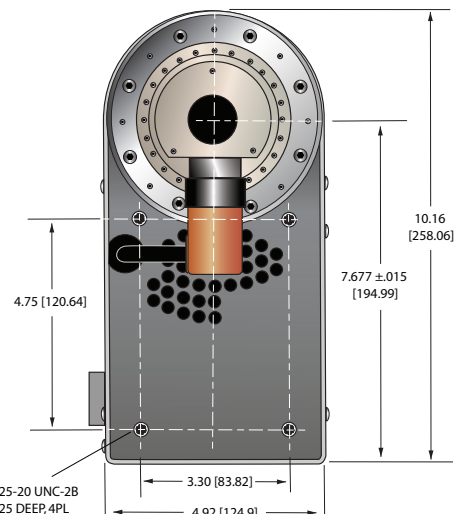




DIMENSIONS: in.[mm]


#### WIDE BEAM (WB Option) SIDE VIEW

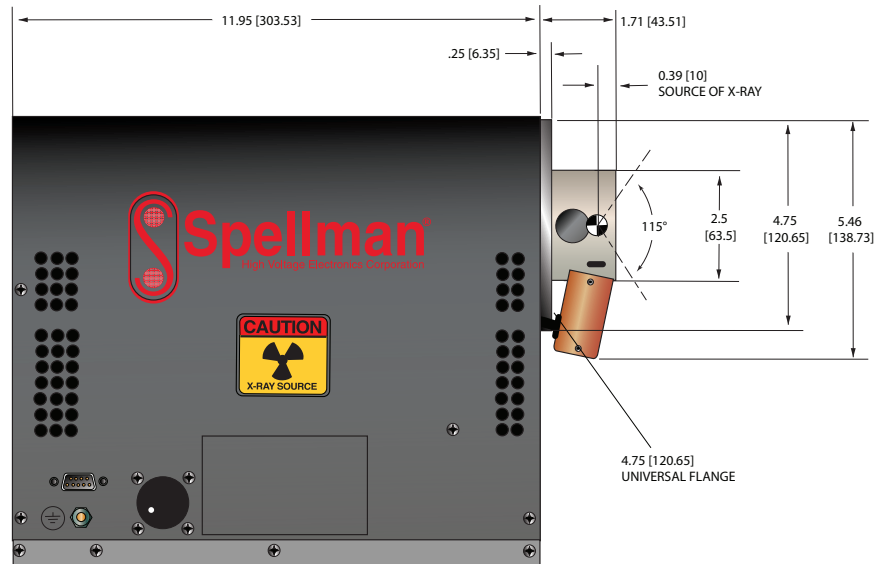


#### BOTTOM VIEW

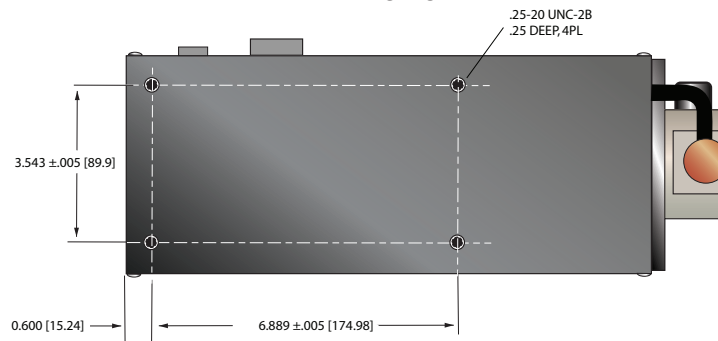

#### REAR VIEW

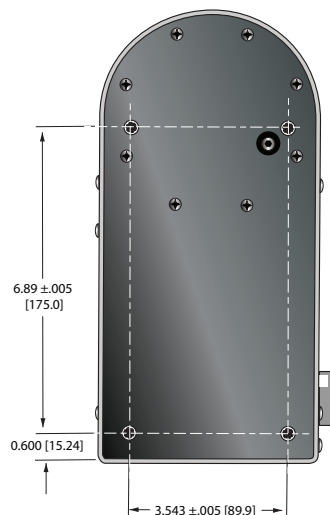


#### FRONT VIEW

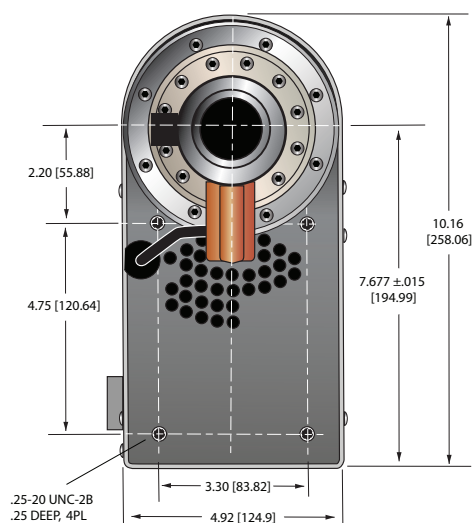


DIMENSIONS: in.[mm]


#### WIDE BEAM (WB Option) and EXTENSION TUBE (ET Option) SIDE VIEW

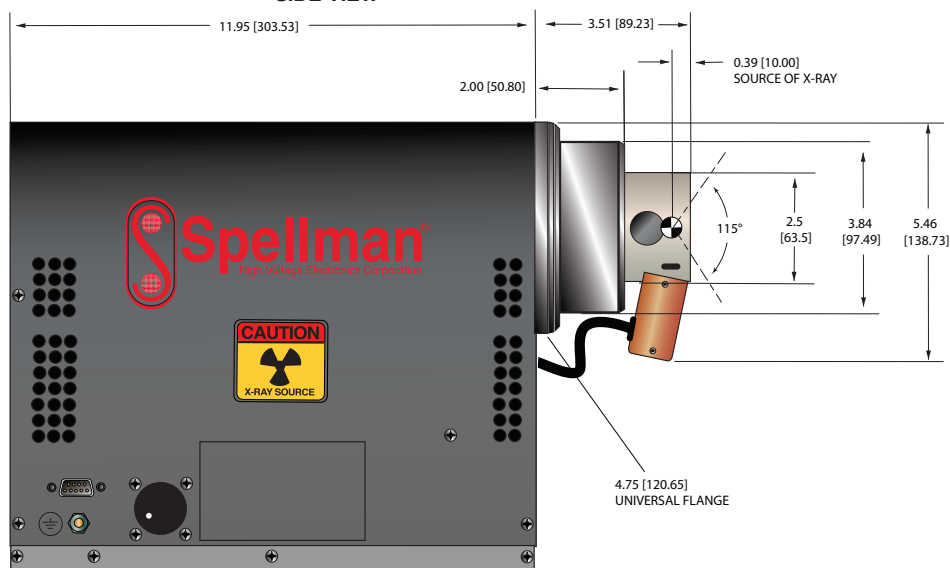


#### BOTTOM VIEW

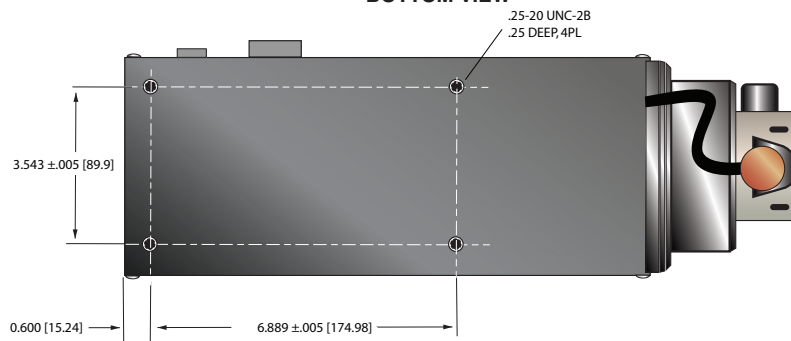

#### REAR VIEW

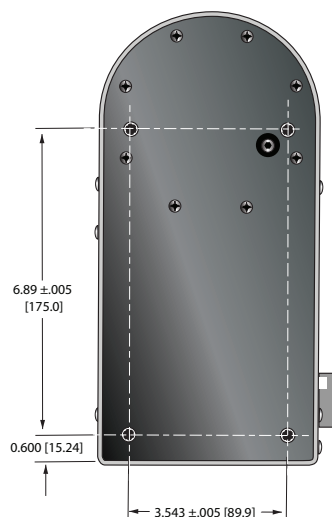

#### FRONT VIEW

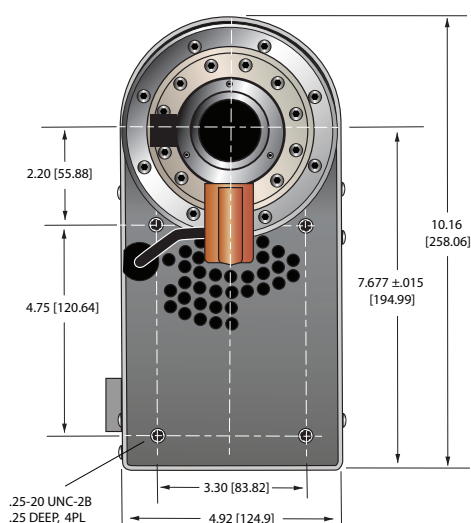





Spellman's XRB80N100 Monoblock® X-Ray source is designed for OEM applications powering its internal X-Ray tube up to 80kV at 100W. Features like universal input, small package size and a standard analog and RS-232 digital interface simplify integrating this unit into your X-Ray system. The XRB80N100 is available either with fan shaped (standard) or (optional) cone shaped beam geometries. Proprietary emission control circuitry provides excellent regulation of X-Ray tube current, along with outstanding stability performance.

#### TYPICAL APPLICATIONS

X-Ray Scanning: Bone Densitometry,  
Thickness Measurement, Food Inspection,  
Fill Level Confirmation, Parcel Inspection

#### SPECIFICATIONS

##### X-Ray Characteristics:

Focal Spot: 0.5mm (IEC 336)

Beam Filter:

Ultem: 3.30mm  $\pm 0.15$ mm

Oil: 8mm  $\pm 0.1$ mm

Glass: 1.8mm  $\pm 0.25$ mm

BE: 0.8mm

Beam Geometry:

Fan: Standard. The beam angular coverage will be 75° with the beam plane perpendicular to the X-Ray tube axis and 13° wide.

Cone: Optional. 25° cone beam

##### Input Voltage:

Power factor corrected input 0.98, 100-240Vac  $\pm 10\%$   
50/60Hz, 2A, maximum

##### X-Ray Tube Voltage:

Nominal X-Ray tube voltage is adjustable up to 80kV

##### X-Ray Tube Current:

150uA to 1.25mA over specified tube voltage range

##### X-Ray Tube Power:

100W maximum continuous

- **Integrated HV Supply, Filament Supply, X-Ray Tube, Beam Port and Control Electronics**
- **Compact & Lightweight**
- **Universal Input, Power Factor Corrected with Internal EMI Filter**
- **Can be Mounted in Any Physical Orientation**
- **Analog Control Interface and Standard RS-232 Digital Interface**

##### Voltage Regulation:

Line:  $\pm 0.05\%$  of maximum output voltage over a  $\pm 10\%$  change of nominal input line voltage

Load:  $\pm 0.1\%$  of maximum rated voltage for 150uA to 1.25mA load change

##### Voltage Accuracy:

Voltage measured across the X-Ray tube is within  $\pm 2\%$  of the programmed value

##### Voltage Risettime:

Standard: Ramp time shall be 500ms from 10% to 90% of maximum rated output voltage

Optional: 5 seconds. Specify at time of order

##### Voltage Overshoot:

5% of maximum voltage, to return within 2.5% of maximum voltage in less than 100ms

##### Voltage Ripple:

1% peak to peak of maximum voltage for frequencies  $\leq 1$ kHz

##### Emission Current Parameters

##### Current Regulation:

Line:  $\pm 0.05\%$  of rated output current over a  $\pm 10\%$  change of nominal input line voltage

Load:  $\pm 0.1\%$  of rated output current for a change from 50% to 100% of rated output voltage

##### Current Accuracy:

Current measured through the X-Ray tube is within  $\pm 2\%$  of the programmed value

##### Current Risettime:

Standard: Ramp time shall be 500ms from 10% to 90% of maximum rated current

Optional: 5 seconds. Specify at time of order

##### Arc Intervention:

3 arcs in 10 seconds with a 200ms quench = Shutdown

##### Filament Configuration:

Internal high frequency AC filament drive with closed loop filament emission control

#### Analog Interface:

Ground referenced 0 to 9Vdc for all programming and monitoring signals. Relay contacts and open collector signals for other signals. See analog interface connector pin out table.

#### Digital Interface:

Jumpers are needed to be configured and the digital interface cable installed to enable the RS-232 interface.

#### Control Software:

A demo GUI is available for engineering evaluations

#### Interlock/Signals:

A hardware interlock functions in both analog and digital programming modes. The hardware X-Ray Enable signal only functions in analog programming mode.

#### Operating Temperature:

0°C to +40°C

#### Storage Temperature:

-40°C to +70°C

#### Humidity:

10% to 95% relative humidity, non-condensing

#### Cooling:

Customer provided 150cfm external cooling fan as required to maintain oil temperature below 55°C. (External cooling is not required if fan option is selected)

#### Input Line Connector:

3 pin, Phoenix Contact 1829167, SHV part number 105725-219. Mating connector Phoenix Contact #1805990, SHV part number 105808-475 provided with unit.

#### Analog Interface Connector:

15 pin D connector, male

#### Digital Interface Connector:

9 pin D connector, female

#### Grounding Point:

8-32 ground stud provided on chassis

#### Dimensions:

See line drawings

#### Weight:

32lbs (14.5kg)

#### Orientation:

Can be mounted in any orientation.

#### X-Ray Leakage:

Not to be greater than 0.5mR/hr at 5cm outside the external surface

#### Regulatory Approvals:

Compliant to EEC EMC Directive. Compliant to EEC Low Voltage Directive. UL/CUL recognized file E235530.

#### AC LINE POWER CONNECTOR— J1 THREE POSITION PHOENIX CONTACT

PIN	SIGNAL
1	Earth Ground
2	Line
3	Neutral

Mating connector provided with unit

#### RS-232 DIGITAL INTERFACE— J3 9 PIN FEMALE D CONNECTOR

PIN	SIGNAL	PARAMETERS
1	N/C	No Connection
2	TD	Transmit Data
3	RD	Receive Data
4	N/C	No Connection
5	SGND	Signal Ground
6	NC	No Connection
7	NC	No Connection
8	NC	No Connection
9	NC	No Connection

#### XRB ANALOG INTERFACE— J2 15 PIN MALE D CONNECTOR

PIN	SIGNAL	PARAMETERS
1	Power Supply Fault Output	Open collector, 35V @ 10mA max. high = no fault
2	mA Program Input	0 to 9.00Vdc = 0 to 100% rated output, Zin = 10MΩ
3	kV Program Input	0 to 9.00Vdc = 0 to 100% rated output, Zin = 10MΩ
4	X-Ray On Lamp Relay Output	Common, dry contacts, 30Vdc @ 1A, max
5	X-Ray On Lamp Relay Output	Normally open, X-Ray ON = closed
6	mA Monitor Output	0 to 9Vdc = 0 to 100% rated output, Zout = 10kΩ
7	X-Ray On Lamp Relay Output	Normally closed, X-Ray ON = open
8	kV Monitor Output	0 to 9.00Vdc = 0 to 100% rated output, Zout = 10kΩ
9	Signal Ground	Ground
10	Signal Ground	Ground
11	HV Interlock Return Input	Connect to Pin 12 to close HV interlock
12	HV Interlock Output	+15Vdc @ open, 5mA when connected to pin 11
13	X-Ray Enable Output	+15Vdc @ open, 5mA when connected to pin 15
14	X-Ray Status Output	Open collector, 35V @ 10mA max high = X-Ray OFF
15	X-Ray Enable Return Input	Connect to pin 13 to enable X-Ray generation

#### LED INDICATORS

INDICATOR	SIGNAL NAME	CONDITION Illuminated When...
LED 1	OV	High kV occurs
LED 2	UV	Low kV occurs
LED 3	UC	Low mA occurs
LED 4	OC	High mA occurs
LED 5	ARC FLT	Arc fault occurs
LED 6	OT	Over temperature occurs
LED 7	X-RAY ON	X-Rays are enabled
LED 8	PWR	Power is ON

#### OPTIONS

- RT** 5 second Risetime for both voltage and current
- CB** Cone Beam
- FN** Integrated Cooling Fan
- M** Elapsed Time Meter  
(measures X-Ray ON elapsed time)

#### How to Order:

Standard: PART NO.: XRB80N100

Risetime, Cone Beam, Fan and  
Elapsed Time Meter Options


PART NO.: XRB80N100/RT/CB/FN/M

DIMENSIONS: in.[mm]


#### Standard Unit

#### FRONT VIEW


NOTE: Shown with Elapsed Time Meter option

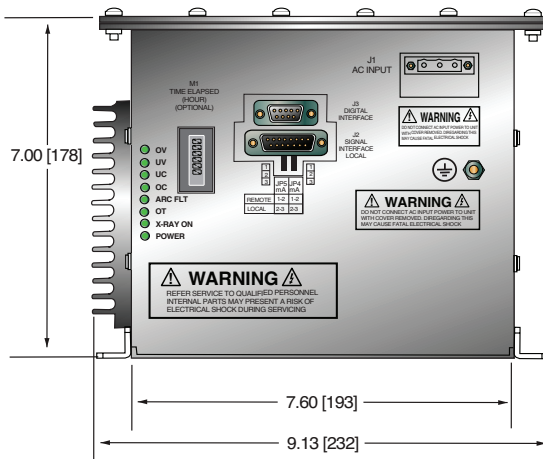


#### SIDE VIEW

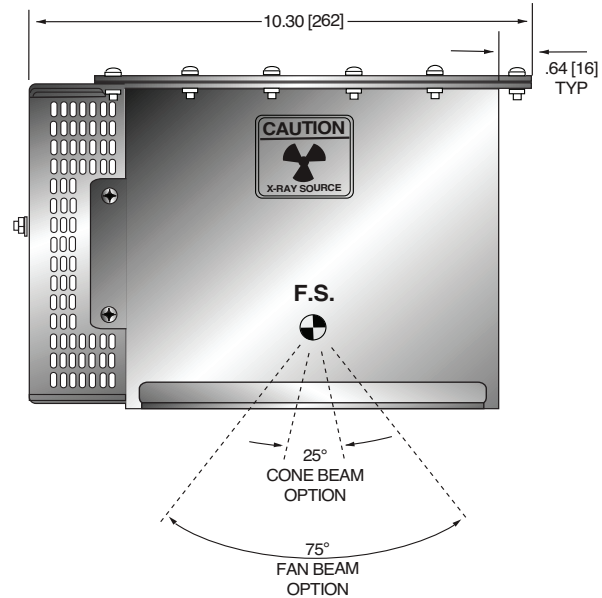

#### BACK VIEW

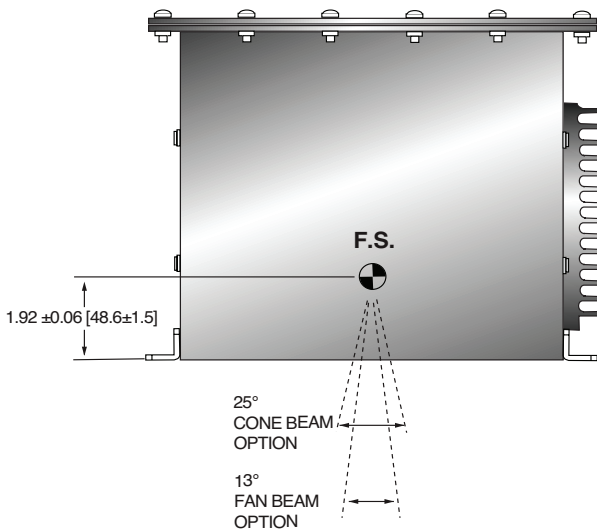

#### BOTTOM VIEW

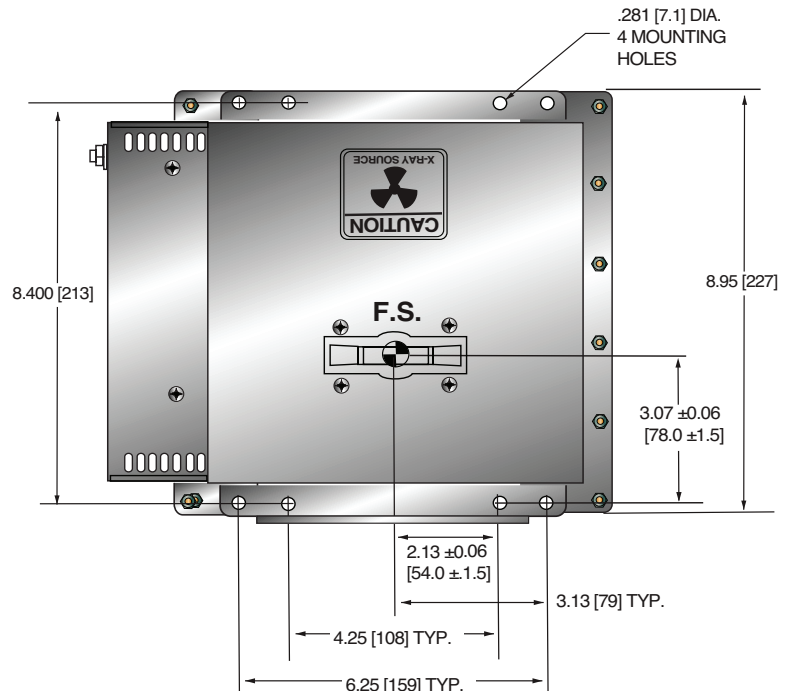





DIMENSIONS: in.[mm]

## Cooling Fan Option


TOP VIEW

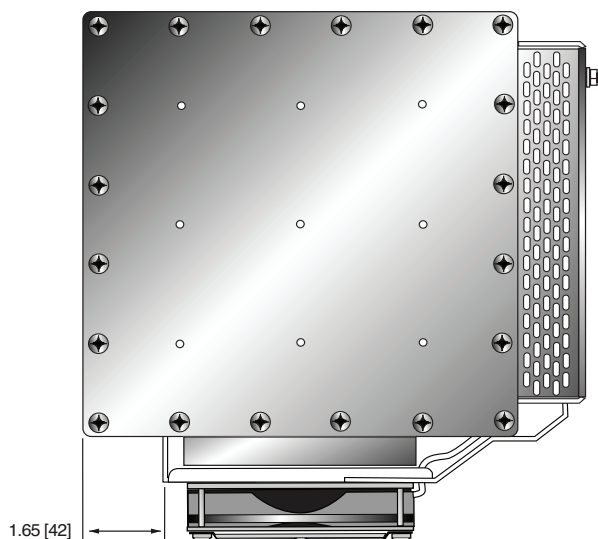


SIDE VIEW

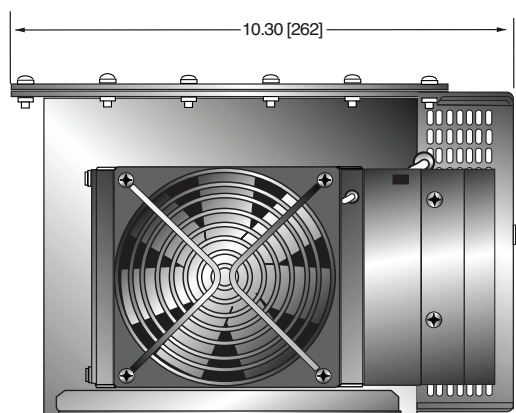

BACK VIEW

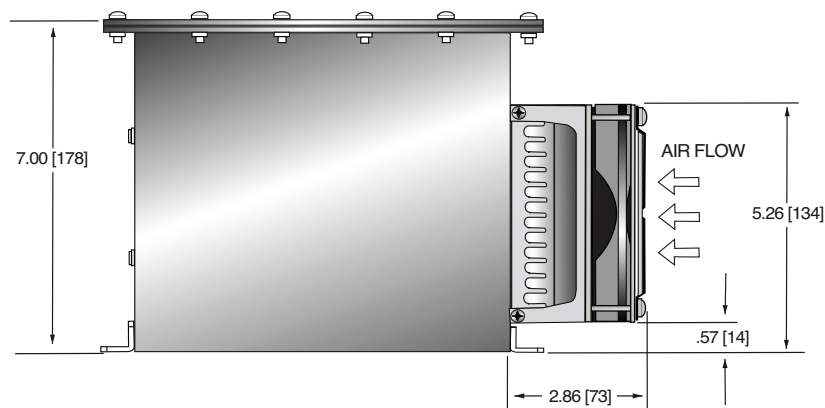

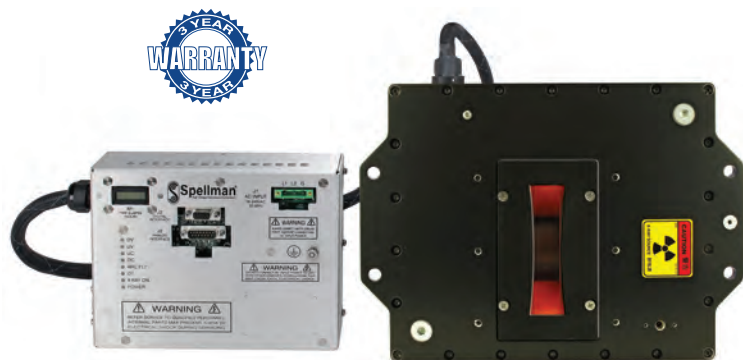

- **Integrated HV Supply, Filament Supply, X-Ray Tube, Beam Port and Control Electronics**
- **Compact & Lightweight**
- **Universal Input, Power Factor Corrected with Internal EMI Filter**
- **Can be Mounted in Any Physical Orientation**
- **Analog Monitoring Interface and Standard RS-232 Digital Program and Monitor Interface**
- **Data Logging and Firmware Controlled X-Ray Tube Seasoning (Smart Controller Option Only)**

Spellman's XRB80PN100HR (high reliability) Monoblock® X-Ray source is designed for OEM applications powering its internal Bipolar X-Ray tube up to 80kV at 100W.

Features like universal input, small package size and a standard RS-232 digital interface simplify integrating this Monoblock® into your X-Ray system. The XRB80PN100HR is available either with fan shaped (standard) or (optional) cone shaped beam geometries. Proprietary emission control circuitry provides excellent regulation of X-Ray tube current, along with outstanding stability performance. The XRB80PN100HR is designed for long field life and comes with a 3 year warranty.

### TYPICAL APPLICATIONS

X-Ray Scanning, Thickness Measurement, Food Inspection, Fill Level Confirmation, Parcel Inspection

### OPTIONS

<b>CB</b>	Cone Beam
<b>.5mm</b>	.5mm focal spot X-Ray tube
<b>NF</b>	80° x 10° Narrow Fan beam
<b>RA</b>	Right Angle cable
<b>SC</b>	Smart Controller

### SPECIFICATIONS

#### X-Ray Characteristics:

Focal Spot: 0.8mm (IEC 336) standard  
0.5mm (IEC 336) optional

#### Beam Filter:

Utem: 3.00mm ±0.15mm  
Oil: 7.5mm ±0.25mm  
Glass: 1.7mm ±0.2mm  
Be: 0.8mm

#### Beam Geometry:

Fan: The standard beam angular coverage will be 80° with the beam plane perpendicular to the X-Ray tube axis and 20° wide (with a 2° tolerance)  
An optional 80° x 10° (with a 2° tolerance) is also available

Cone: Optional. 20° cone beam (with a 2° tolerance)

#### Input Voltage:

Power factor corrected input 0.98, 100-240Vac ±10%  
50/60Hz, 2A maximum

#### X-Ray Tube Voltage:

Nominal X-Ray tube voltage is adjustable 40kV (±20kV)  
to 80kV (±40kV)

#### X-Ray Tube Current:

150uA to 2.00mA over specified tube voltage range  
(100W max.)

#### X-Ray Tube Power:

100W maximum continuous

#### Voltage Regulation:

Line: ±0.05% of maximum output voltage over a ±10%  
change of nominal input line voltage

Load: ±0.1% of maximum rated voltage for 150uA  
to 2.00mA load change

#### Voltage Accuracy:

Voltage measured across the X-Ray tube is within  
±2% of the programmed value

#### Voltage Risettime:

Ramp time shall be <500ms from 10% to  
90% of maximum rated output voltage

#### Voltage Ripple:

0.5% peak to peak of maximum voltage for frequencies ≤1kHz

#### Emission Current Parameters

##### Current Regulation:

Line: ±0.05% of rated output current over a  
±10% change of nominal input line voltage

Load: ±0.1% of rated output current for a change  
from 50% to 100% of rated output voltage

##### Current Accuracy:

Current measured through the X-Ray tube is within  
±2% of the programmed value

##### Current Risettime:

Ramp time shall be <500ms from 10% to 90%  
of maximum rated current

##### Arc Intervention:

4 arcs in 10 seconds with a 100ms quench/100ms  
re-ramp = Shutdown

#### Filament Configuration:

Internal AC filament drive with closed loop filament emission control

#### Analog Monitoring Interface:

Ground referenced 0 to 9Vdc for all monitoring signals. Relay contacts and open collector signals for other signals. See analog interface connector pin out table.

#### Digital Programming and Monitoring Interface:

The RS-232 interface allows for programming of kV, mA output and X-Ray enable. Provides monitoring for kV, mA output and oil temperature. Tolerance 3%. (with an additional 5µA offset at ≤10% mA programming)

#### Control Software:

A demo GUI is available for engineering evaluations

#### Operating Temperature:

0°C to +40°C

#### Storage Temperature:

-40°C to +70°C

#### Humidity:

10% to 95% relative humidity, non-condensing

#### Cooling:

X-Ray Tank: Customer provided 250 cfm external cooling fan as required to maintain oil temperature below 55°C.

Controller: Forced air via internal fan.

#### Input Line Connector:

3-pin Phoenix Contact 1829167. Mating connector provided with unit

#### Analog Interface Connector:

15 pin male D connector provided with unit

#### Digital Interface Connector:

9 pin female D connector provided with unit

#### Grounding Point:

M4 ground stud provided on chassis

#### Dimensions:

X-Ray Tank: 11.3"L x 9.625"W x 4.93"H  
(287.02mm x 244.4mm x 125.2mm)

Standard  
Controller: 8.5"L x 6.70"W x 2.21"H  
(215.9mm x 170.2mm x 56.1mm)

Smart  
Controller: 8.5"L x 7.14"W x 2.40"H  
(215.9mm x 181.4mm x 61.0mm)

#### Weight:

X-Ray Tank: 36lbs (16.32kg)

Standard  
Controller: 3.7lbs (1.68kg)

Smart  
Controller: 3.9lbs (1.77kg)

#### Orientation:

Can be mounted in any orientation.

#### X-Ray Leakage:

Not to be greater than 0.5mR/hr at 5cm outside the external surface.

#### Regulatory Approvals:

Compliant to EEC EMC Directive. Compliant to EEC Low Voltage Directive. UL/CUL recognized file E235530

#### SMART XRB (only available with Smart Controller option)

**The XRB80PN100HR with the Smart Controller (SC option) has two new digital features available: data logging and firmware controlled seasoning.**

#### Data Logging:

Think of this as an "airplane black box". The data logging captures data on fault events and non-fault events. Fault events will turn off the high voltage:

#### FAULT EVENTS

Temperature	Arc
High Current	Low Voltage
High Voltage	Watchdog
Power Fault	Interlock

The XRB80PN100HR stores data 620ms before the event, the event itself and for 620ms after the event. Data is recorded every 20ms (62 samples total) showing:

Anode kV	Cathode kV
Total kV	Total mA
Filament	Temperature

We also log non-fault events, these are changes in set points or state of the unit.

#### NON FAULT EVENTS

HV On	HV Off
kV Set point	mA Set point
Low Current	Pre Heat Set point

Fault event data is actual graphical data. Non fault event data is just stored as event type, data and timestamp. We also have a preventative maintenance fault, which throws a non-shutdown alarm if the X-Ray tube has been factory installed over 4 years ago or if over 15,000 hours of HV ON is logged.

#### Firmware Controlled Seasoning:

Every unit comes with an initial seasoning table, or customers can set their own. The XRB80PN100HR knows when the unit has been on, when it has been off, hours on the X-Ray tube, etc. As a preventative maintenance feature upon turn on, we review the data and suggest that a particular seasoning protocol be run based upon the actual usage history of the unit. Proper seasoning compliance of the X-Ray tube will help get the longest lifetime.

#### How to Order:

Standard	PART NO.: XRB80PN100HR
Cone Beam Option	PART NO.: XRB80PN100HR/CB
0.5mm Focal Spot Option	PART NO.: XRB80PN100HR/.5mm
Narrow Fan Beam Option	PART NO.: XRB80PN100HR/NF
Cable Option	PART NO.: XRB80PN100HR/RA
Smart Controller Option	PART NO.: XRB80PN100HR/SC



#### AC LINE POWER CONNECTOR— J1 THREE POSITION PHOENIX CONTACT

PIN	SIGNAL
1	Earth Ground
2	Line
3	Neutral

Mating connector provided with unit

#### RS-232 DIGITAL INTERFACE— J3 9 PIN FEMALE D CONNECTOR

PIN	SIGNAL	PARAMETERS
1	N/C	No Connection
2	TD	Transmit Data
3	RD	Receive Data
4	N/C	No Connection
5	SGND	Signal Ground
6	N/C	No Connection
7	N/C	No Connection
8	N/C	No Connection
9	N/C	No Connection

#### ETHERNET DIGITAL INTERFACE\*— J4 8 PIN RJ45 CONNECTOR

PIN	SIGNAL	PARAMETERS
1	TX+	Transmit Data +
2	TX-	Transmit Data -
3	RX+	Receive Data +
4	N/C	No Connection
5	N/C	No Connection
6	RX-	Receive Data -
7	N/C	No Connection
8	N/C	No Connection

\*Ethernet interface for Smart Controller option only

#### LED INDICATORS

INDICATOR	SIGNAL NAME	CONDITION Illuminated When...
LED 1	OV	High kV occurs
LED 2	UV	Low kV occurs
LED 3	UC	Low mA occurs
LED 4	OC	High mA occurs
LED 5	ARC FLT	Arc fault occurs
LED 6	OT	Over temperature occurs
LED 7	X-RAY ON	X-Rays are enabled
LED 8	PWR	Power is ON


#### XRB80PN100HR ANALOG INTERFACE— J2 15 PIN MALE D CONNECTOR

PIN	SIGNAL	PARAMETERS
1	Power Supply Fault Output	Open collector, 35V @ 10mA max. high = no fault
2	N/C	No Connection
3	N/C	No Connection
4	X-Ray On Lamp Relay Output	Common, dry contacts, 30Vdc @ 1A, max
5	X-Ray On Lamp Relay Output	Normally open, X-Ray ON = closed
6	mA Monitor Output	0 to 9Vdc = 0 to 100% rated output, Zout = 10kΩ
7	X-Ray On Lamp Relay Output	Normally closed, X-Ray ON = open
8	kV Monitor Output	0 to 9.00Vdc = 0 to 100% rated output, Zout = 10kΩ
9	Signal Ground	Ground
10	Signal Ground	Ground
11	HV Interlock Return Input	Connect to Pin 12 to close HV interlock
12	HV Interlock Output	+15Vdc @ open, 5mA when connected to pin 11
13	X-Ray Enable Output	+15Vdc @ open, 5mA when connected to pin 15
14	X-Ray Status Output	Open collector, 35V @ 10mA max high = X-Ray OFF
15	X-Ray Enable Return Input	Connect to pin 13 to enable X-Ray generation (for local enable)

DIMENSIONS: in.[mm]

## STANDARD CONTROL UNIT


### TOP VIEW

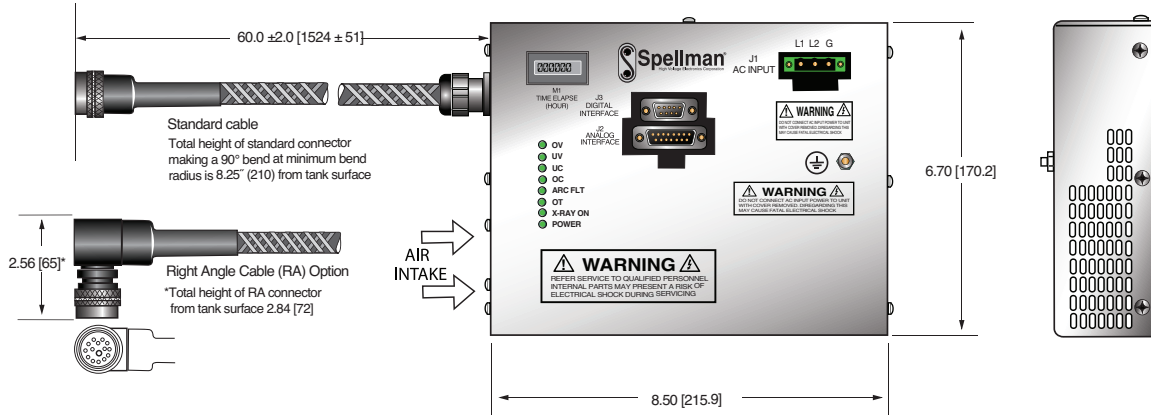

### SIDE VIEW




### BOTTOM VIEW

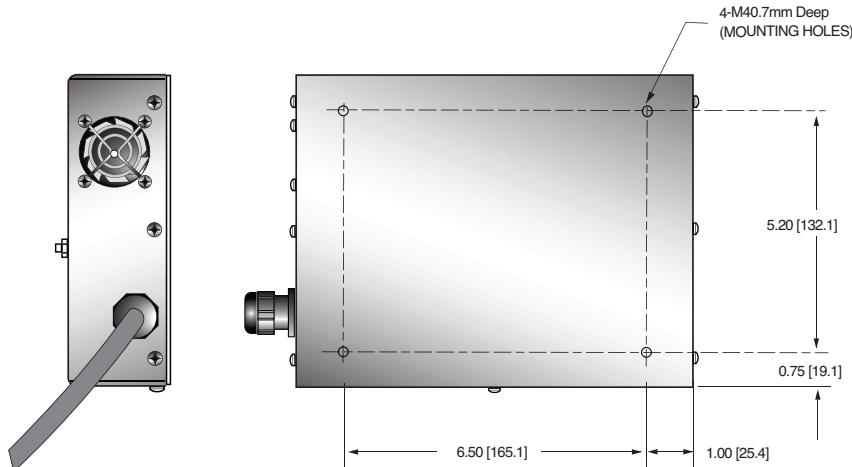

DIMENSIONS: in.[mm]

## SMART CONTROL UNIT


### TOP VIEW

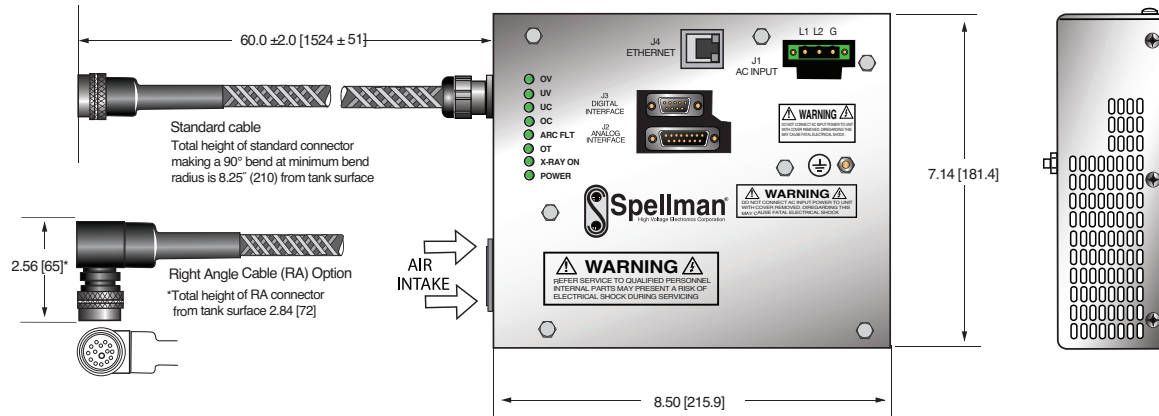

### SIDE VIEW




### BOTTOM VIEW

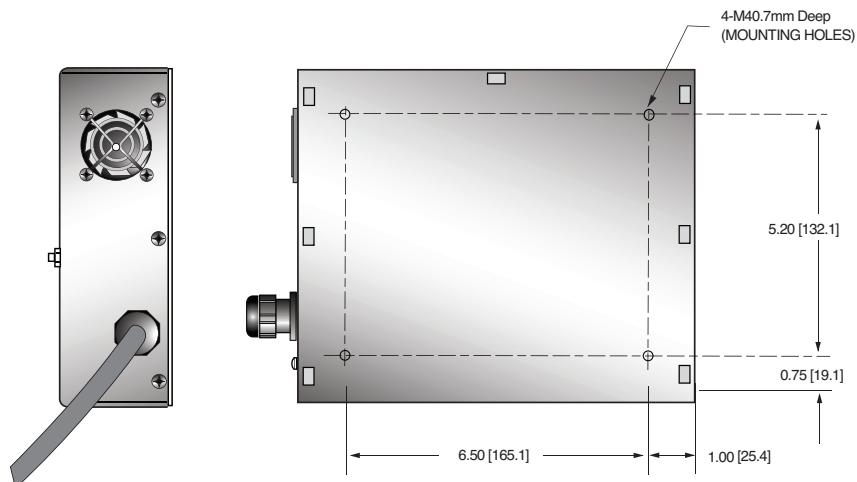


DIMENSIONS: in.[mm]


### GENERATOR TANK TOP VIEW

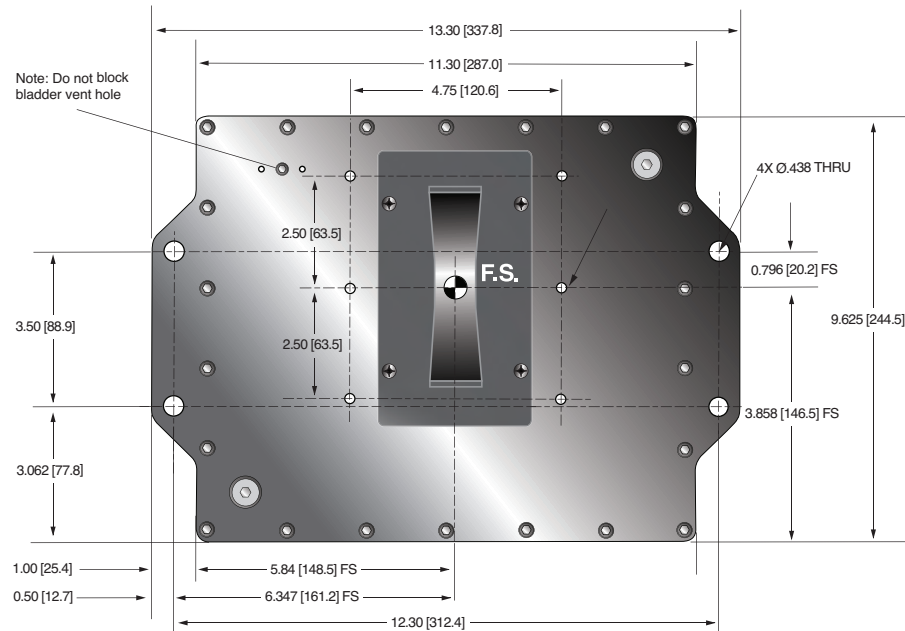

### FRONT VIEW

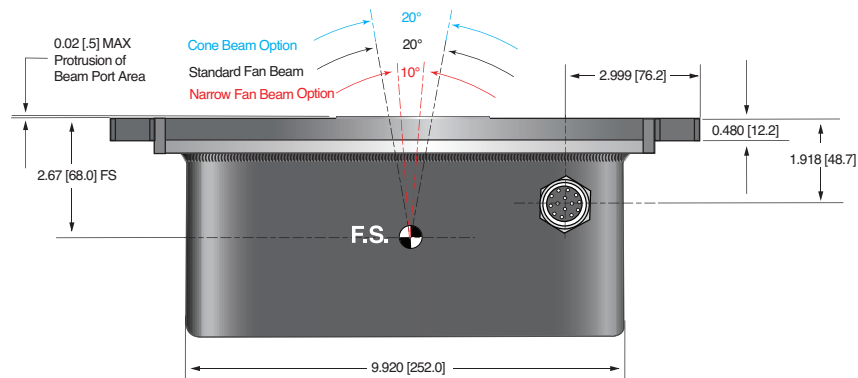

### SIDE VIEW

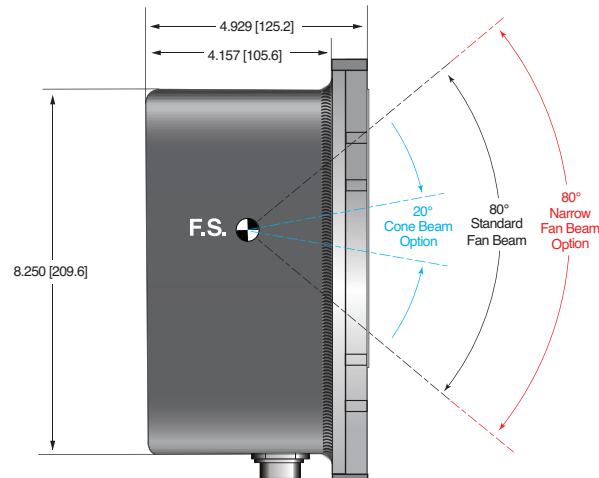





- **Integrated HV Supply, Filament Supply, X-Ray Tube, Beam Port and Control Electronics**
- **Compact & Lightweight**
- **Universal input, Power Factor Corrected with Internal EMI Filter**
- **Can be Mounted in Any Physical Orientation**
- **Analog Control Interface and Standard RS-232 Digital Interface**

Spellman's XRB100N100 Monoblock® X-Ray source is designed for OEM applications powering its internal X-Ray tube up to 100kV at 100W. Features like universal input, small package size and a standard analog and RS-232 digital interface simplify integrating this Monoblock® into your X-Ray system. Proprietary emission control circuitry provides excellent regulation of X-Ray tube current, along with outstanding stability performance.

### TYPICAL APPLICATIONS

X-Ray Scanning: Food Inspection, Fill Level Confirmation and Security Applications

### SPECIFICATIONS

#### X-Ray Characteristics:

Tube Type:	Stationary anode, tungsten target
Focal Spot:	0.5mm (IEC 336)
Beam Filter:	Lexan: 3.2mm Oil: 10mm $\pm 0.1$ mm Glass: 1.8mm max
Beam Geometry:	Symmetrical fan 74° x 10° $\pm 1^\circ$

#### Input Voltage:

Power factor corrected input 0.98, 100-240Vac  $\pm 10\%$   
50/60Hz, 2A, maximum

#### X-Ray Tube Voltage:

Nominal X-Ray tube voltage is adjustable between  
40kV to 100kV

#### X-Ray Tube Current:

100uA to 1mA over specified tube voltage range

#### X-Ray Tube Power:

100W maximum continuous

#### Voltage Regulation:

Line:	$\pm 0.1\%$ of maximum output voltage over a $\pm 10\%$ change of nominal input line voltage
Load:	$\pm 0.1\%$ of maximum rated voltage for 100uA to 1mA load change

#### Voltage Accuracy:

Voltage measured across the X-Ray tube is within  
 $\pm 2\%$  of the programmed value

#### Voltage Risettime:

Ramp time shall be 1 second from 10% to  
90% of maximum rated output voltage

#### Voltage Overshoot:

5% of maximum voltage, to return within 2.5% of  
maximum voltage in less than 50ms

#### Voltage Ripple:

0.5% peak to peak of maximum voltage for  
frequencies  $\leq 1$ kHz

#### Emission Current Parameters

##### Current Regulation:

Line:	$\pm 0.5\%$ of rated output current over a $\pm 10\%$ change of nominal input line voltage
Load:	$\pm 0.5\%$ of rated output current for a change from 50% to 100% of rated output voltage

##### Current Accuracy:

Current measured through the X-Ray tube is within  
 $\pm 1\%$  of the programmed value

##### Current Risettime:

Ramp time shall be 1 second from 10% to 90%  
of maximum rated current

##### Arc Intervention:

3 arcs in 10 seconds with a 200ms quench = Shutdown

##### Filament Configuration:

Internal high frequency AC filament drive with closed loop  
filament emission control

**Analog Interface:**

Ground referenced 0 to 9Vdc for all programming and monitoring signals. Relay contacts and open collector signals for other signals. See analog interface connector pin out table.

**Digital Interface:**

Jumpers are needed to be configured and the digital interface cable installed to enable the RS-232 interface.

**Control Software:**

A demo GUI is available for engineering evaluations.

**Interlock/Signals:**

A hardware interlock functions in both analog and digital programming modes. The hardware X-Ray Enable signal only functions in analog programming mode.

**Operating Temperature:**

0°C to +40°C

**Storage Temperature:**

-40°C to +70°C

**Humidity:**

10% to 95% relative humidity, non-condensing

**Cooling:**

Forced air and natural convection augmented by customer provided external cooling fan to maintain oil temperature below 55°C.

**Input Line Connector:**

3 pin, Phoenix Contact 1829167, SHV part number 105725-219. Mating connector Phoenix Contact #1805990, SHV part number 105808-475 provided with unit.

**Analog Interface Connector:**

15 pin D connector, male

**Digital Interface Connector:**

9 pin D connector, female

**Grounding Point:**

M4 ground stud provided on chassis

**Dimensions:**

See page 3 of 3

**Weight:**

55lbs (25kg)

**Orientation:**

Can be mounted in any orientation.

**X-Ray Leakage:**

Not to be greater than 0.5mR/hr at 5cm outside the external surface.

**AC LINE POWER CONNECTOR—  
J1 THREE POSITION PHOENIX CONTACT**

PIN	SIGNAL
1	Earth Ground
2	Line
3	Neutral

Mating connector provided with unit

**RS-232 DIGITAL INTERFACE—  
J3 9 PIN FEMALE D CONNECTOR**

PIN	SIGNAL	PARAMETERS
1	N/C	No Connection
2	TD	Transmit Data
3	RD	Receive Data
4	N/C	No Connection
5	SGND	Signal Ground
6	NC	No Connection
7	NC	No Connection
8	NC	No Connection
9	NC	No Connection

**XRB ANALOG INTERFACE—  
J2 15 PIN MALE D CONNECTOR**


PIN	SIGNAL	PARAMETERS
1	Power Supply Fault Output	Open collector, 35V @ 10mA max. high = no fault
2	mA Program Input	0 to 9.00Vdc = 0 to 100% rated output, Z <sub>in</sub> = 10MΩ
3	kV Program Input	0 to 9.00Vdc = 0 to 100% rated output, Z <sub>in</sub> = 10MΩ
4	X-Ray On Lamp Relay Output	Common, dry contacts, 30Vdc @ 1A, max
5	X-Ray On Lamp Relay Output	Normally open, X-Ray ON = closed
6	mA Monitor Output	0 to 9Vdc = 0 to 100% rated output, Z <sub>out</sub> = 10kΩ
7	X-Ray On Lamp Relay Output	Normally closed, X-Ray ON = open
8	kV Monitor Output	0 to 9.00Vdc = 0 to 100% rated output, Z <sub>out</sub> = 10kΩ
9	Signal Ground	Ground
10	Signal Ground	Ground
11	HV Interlock Return Input	Connect to Pin 12 to close HV interlock
12	HV Interlock Output	+15Vdc @ open, 5mA when connected to pin 11
13	X-Ray Enable Output	+15Vdc @ open, 5mA when connected to pin 15
14	X-Ray Status Output	Open collector, 35V @ 10mA max high = X-Ray OFF
15	X-Ray Enable Return Input	Connect to pin 13 to enable X-Ray generation

**LED INDICATORS**


INDICATOR	SIGNAL NAME	CONDITION Illuminated When...
LED 1	OV	High kV occurs
LED 2	UV	Low kV occurs
LED 3	UC	Low mA occurs
LED 4	OC	High mA occurs
LED 5	ARC FLT	Arc fault occurs
LED 6	OT	Over temperature occurs
LED 7	X-RAY ON	X-Rays are enabled
LED 8	PWR	Power is ON

DIMENSIONS: in.[mm]


**X-RAY GENERATOR  
FRONT VIEW**

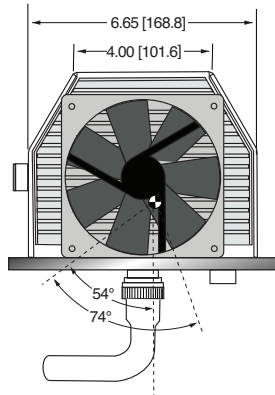


**TOP VIEW**

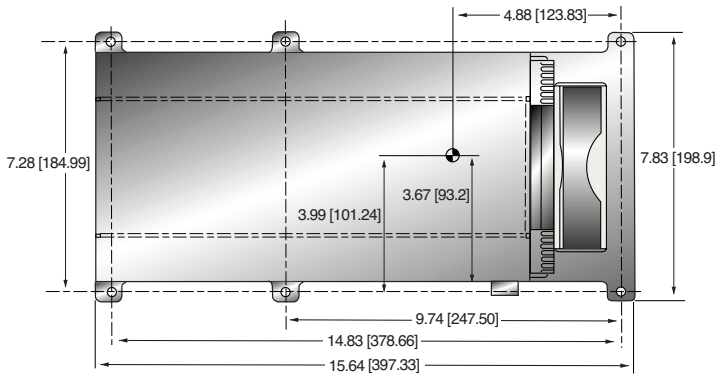


**SIDE VIEW**

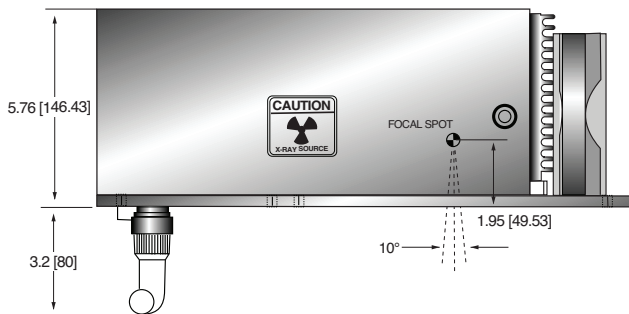

**BOTTOM VIEW**

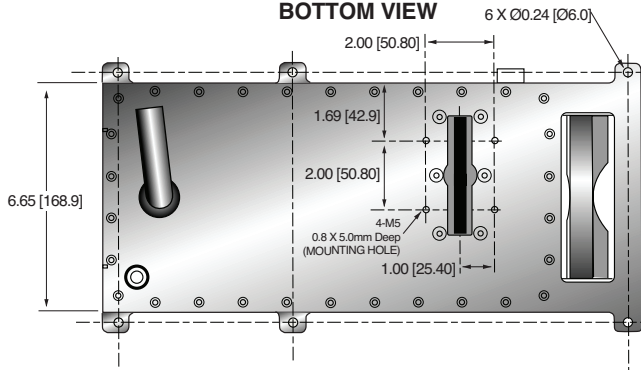


**CONTROL UNIT  
FRONT VIEW**

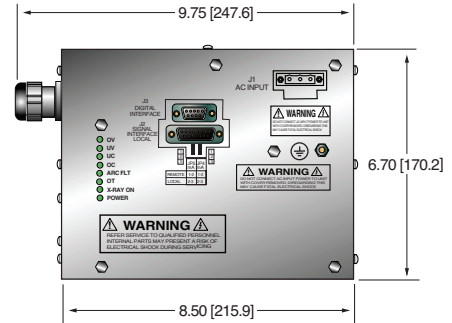


**TOP VIEW**



**SIDE VIEW**

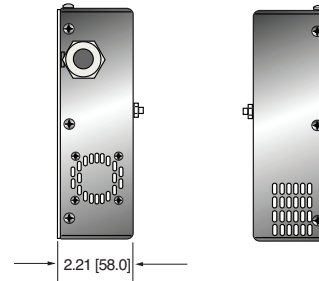

**BOTTOM VIEW**

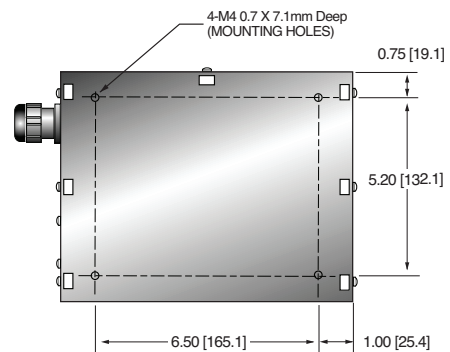



- **Compact & Lightweight**
- **Universal Input, Power Factor Corrected**
- **Can be Mounted in Any Physical Orientation**
- **Analog Monitoring Interface, Standard RS-232 Digital Interface and Ethernet**
- **Data Logging and Firmware Controlled X-Ray Tube Seasoning**

Spellman's XRBHR (high reliability) Series of Monoblock® X-Ray sources are designed for OEM applications powering their internal Bipolar X-Ray tube at 80kV and 100kV at power levels of 100W, 210W, 350W and 500W. Features such as universal input, compact package size and a standard RS-232 digital interface simplify integration of any XRBHR model into your X-Ray system. Each XRBHR model is available with fan shaped (standard) or cone shaped (optional) beam geometries. Proprietary emission control circuitry provides excellent regulation of X-Ray tube current, along with outstanding stability performance. The XRBHR Series is designed for long field life and comes with a 3 year warranty.

### TYPICAL APPLICATIONS

Food Inspection Systems, Fill Level Confirmation Systems, Security Scanning Systems, Industrial NDT Systems, Thickness/Plating Measurement Systems

### OPTIONS

<b>CB</b>	Cone Beam
<b>.5mm</b>	.5mm focal spot X-Ray tube
<b>ST-TE</b>	
<b>RA-SE</b>	See page 4 for Cable Options
<b>RA-TE</b>	

### SPECIFICATIONS

#### X-Ray Characteristics:

Focal Spot:	0.8mm (IEC 336) standard 0.5mm (IEC 336) optional
Beam Filter:	
Utem:	1.50mm ±0.15mm
Oil:	9.0mm ±0.25mm
Glass:	1.7mm ±0.2mm
Be:	0.8mm
Beam Geometry:	
Fan:	Standard. The beam angular coverage will be 80° with the beam plane perpendicular to the X-Ray tube axis and 12° wide (with a 2° tolerance)
Cone:	Optional. 40° cone beam (with a 2° tolerance)

#### Input Voltage:

100- 240Vac, ±10%, 50/60 Hertz, .98 power factor

#### Input Current:

100W @ 2A  
210W @ 4A  
350W @ 6A  
500W @ 8A

#### X-Ray Tube Voltage:

See table. Minimum kV for emission current 35kV

#### X-Ray Tube Current:

See table. Minimum emission current 150uA

#### X-Ray Tube Power:

See table

#### Voltage Regulation:

Line: ±0.05% of maximum output voltage over a ±10% change of nominal input line voltage  
Load: ±0.1% of maximum rated voltage for 150uA to full rated load change

#### Voltage Accuracy:

Voltage measured across the X-Ray tube is within ±2% of the programmed value

#### Voltage Risetime:

Standard ramp time shall be <500ms from 10% to 90% of maximum rated output voltage

#### Voltage Ripple:

0.5% peak to peak of maximum voltage for frequencies ≤1kHz

#### Emission Current Parameters

##### Current Regulation:

Line: ±0.05% of rated output current over a ±10% change of nominal input line voltage  
Load: ±0.1% of rated output current for a change from 50% to 100% of rated output voltage

##### Current Accuracy:

Current measured through the X-Ray tube is within ±2% of the programmed value

##### Current Risetime:

Standard ramp time shall be <500ms from 10% to 90% of maximum rated current

##### Arc Intervention:

4 arcs in 10 seconds with a 100ms quench/100ms re-ramp = Shutdown

##### Filament Configuration:

Internal floating AC filament drive with closed loop filament emission control circuitry



### Analog Interface:

Ground referenced 0 to 9Vdc for all monitoring signals. Relay contacts and open collector signals for other signals. See analog interface connector pin out table.

### Digital Interface:

The RS-232 interface allows for programming of kV, mA output and X-Ray enable. Provides monitoring for kV, mA output and oil temperature.

### Operating Temperature:

0°C to +40°C

### Storage Temperature:

-40°C to +70°C

### Humidity:

10% to 95% relative humidity, non-condensing

### Cooling:

X-Ray Tank:

- 100W: Convection/customer supplied forced air so tank is <55°C
- 210W: Externally powered forced air cooling, 24Vdc @ 2A
- 350W: Externally powered forced air cooling with oil pump and heat exchanger, 24Vdc @ 5A
- 500W: Externally powered forced air cooling with oil pump and heat exchanger, 24Vdc @ 5A

Controller: Forced air via internal fan.

### Grounding Point:

- M5 ground female thread on tank
- M5 ground stud on control chassis provided

### Dimensions:

- X-Ray Tank: see drawings
- 100W/210W Controller: see drawings
- 350W/500W Controller: see drawings

### Weight:

X-Ray Tank:

- 100W @ 75 lbs. (34kg)
- 210W @ 75lbs. (34kg)
- 350W @ 81.5lbs. (37kg)
- 500W @ 81.5lbs. (37kgs)

Controller:

- 100W/210W: 4 pounds (1.18kg)
- 350W/500W: 7 pounds (3.18kg)

### Orientation:

Can be mounted in any orientation.

### X-Ray Leakage:

Not to be greater than 0.5mR/hr at 5cm outside the external surface.

### Regulatory Approvals:

Compliant to EEC EMC Directive. Compliant to EEC Low Voltage Directive. UL/CUL recognized file E235530

## MODEL SELECTION TABLE

MODEL	MAX. VOLTAGE	MAX. CURRENT	MAX. POWER
XRB80PN210HR	80kV	5.25mA	210 watts
XRB80PN350HR	80kV	8mA	350 watts
XRB80PN500HR	80kV	8mA	500 watts
XRB100PN100HR	100kV	2mA	100 watts
XRB100PN210HR	100kV	4.2mA	210 watts
XRB100PN350HR	100kV	7mA	350 watts
XRB100PN500HR	100kV	8mA	500 watts

## LED INDICATORS

INDICATOR	SIGNAL	CONDITION Illuminated When...	LED COLOR
1	OV Error 6	High kV occurs	Red
2	UV Error 5	Low kV occurs	Red
3	UC Error 4	Low mA occurs	Red
4	OC Error 3	High mA occurs	Red
5	ARC Error 2	Arc fault occurs	Red
6	OT Error 1	Over temperature occurs	Red
7	X-Ray On	X-Rays are being generated	Green
8	Power On	AC input power is present	Green

## SMART XRB

The XRBHR has two new digital features: data logging and firmware controlled seasoning.

### Data Logging:

Think of this as an "airplane black box". The data logging captures data on fault events and non-fault events. Fault events will turn off the high voltage:

### FAULT EVENTS

Temperature	Arc
High Current	Low Voltage
High Voltage	Watchdog
Power Fault	Interlock

The XRBHR stores data 620ms before the event, the event itself and for 620ms after the event. Data is recorded every 20ms (62 samples total) showing:

Anode kV	Cathode kV
Total kV	Total mA
Filament	Temperature

We also log non-fault events, these are changes in set points or state of the unit.

### NON FAULT EVENTS

HV On	HV Off
kV Set point	mA Set point
Low Current	Filament Limit Set point
Pre Heat Set point	Line Dip

Fault event data is actual graphical data. Non fault event data is just stored as event type, data and timestamp. We also have a preventative maintenance fault, which throws a non-shutdown fault if the X-Ray tube has been factory installed over 4 years ago or if over 15,000 hours of HV ON is logged.

### Firmware Controlled Seasoning:

Every unit comes with an initial seasoning table, or customers can set their own. The XRBHR knows when the unit has been on, when it has been off, hours on the X-Ray tube, etc. As a preventative maintenance feature upon turn on, we review the data and suggest that a particular seasoning protocol be run based upon the actual usage history of the unit. Proper seasoning compliance of the X-Ray tube will help get the longest lifetime.

## Power and Interface Connections

### AC INPUT—3 PIN PHOENIX CONTACT 1858772

PIN	SIGNAL	PARAMETERS
1	AC Input (high)	100-240Vac (high)
2	Ground	Ground
3	AC Input (neutral)	100-240Vac (neutral)

### DC INPUT FOR HEAT DISSIPATION UNIT—4 PIN AMP (210/350/500W) 206060-1

PIN	SIGNAL	DESCRIPTION	PARAMETERS
1	24Vdc	Fan/Pump Power	24Vdc @ 5 amps
2	24Vdc Return		
3	N/C	No Connection	N/C
4	N/C	No Connection	N/C

It is critical to ensure that 24Vdc is supplied to pins 1 and 2

### ANALOG INTERFACE— 10 PIN PHOENIX CONTACT 1792605

PIN	SIGNAL	PARAMETERS
1	X-Ray Interlock Enable	Apply +24Vdc to enable interlock. Open/removal of +24Vdc will cause X-Ray generation to stop.
2	X-Ray Interlock Enable Return	Ground reference for X-Ray Interlock.
3	Pin removed	N/C
4	kV Monitor	0-10Vdc = 0-100% rated output voltage. Zout = 10kΩ
5	Signal Ground	Signal Ground
6	mA Monitor	0-10Vdc = 0-100% rated output current. Zout = 10kΩ
7	Fault Signal	Open collector, High (Open) = No Fault, 35Vdc @ 10mA maximum
8	HV ON Lamp Relay N/O	N/O dry contacts. 50 volts maximum. Rated for 1 amp or less, 50mA nominal load
9	HV ON Lamp Relay C	Common dry contacts. 50 volts maximum. Rated for 1 amp or less, 50mA nominal load
10	HV ON Lamp Relay N/C	N/C dry contacts. 50 volts maximum. Rated for 1 amp or less, 50mA nominal load

### RS-232 DIGITAL INTERFACE— 9 PIN MALE D CONNECTOR

PIN	SIGNAL	PARAMETERS
1	N/C	N/C
2	Transmitted Data	Conforms to EIA RS-232-C
3	Received Data	Conforms to EIA RS-232-C
4	N/C	N/C
5	Signal Ground	Signal Ground
6	N/C	N/C
7	N/C	N/C
8	N/C	N/C
9	N/C	N/C


### ETHERNET DIGITAL INTERFACE— RJ45 8 PIN FEMALE CONNECTOR

PIN	SIGNAL	PARAMETERS
1	TX +	Transmit Data +
2	TX -	Transmit Data -
3	RX +	Receive Data +
4	N/C	No Connection
5	N/C	No Connection
6	RX -	Receive Data -
7	N/C	No Connection
8	N/C	No Connection


DIMENSIONS: in.[mm]

**100/210W  
CONTROL UNIT**


### FRONT VIEW

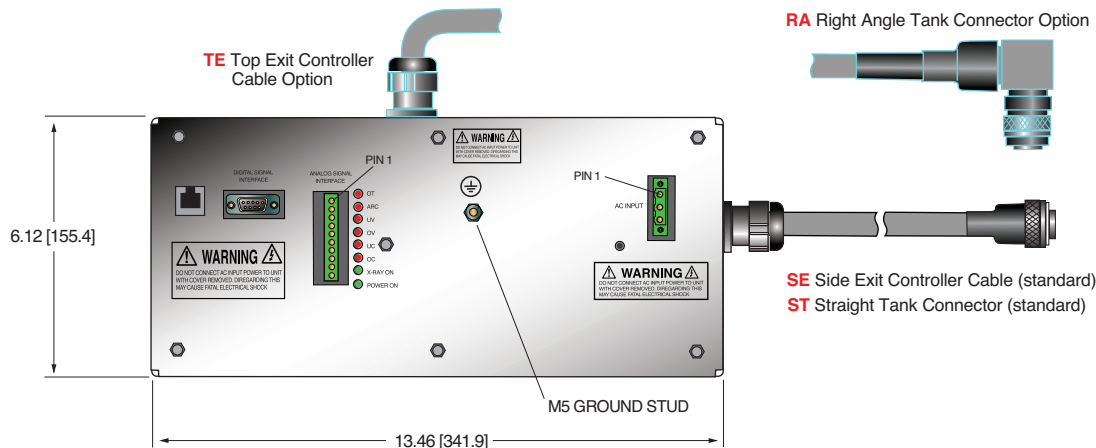

### BOTTOM VIEW

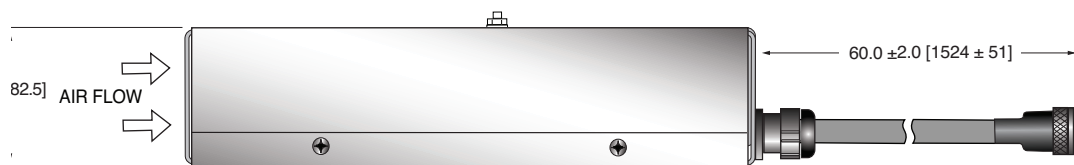


### REAR VIEW

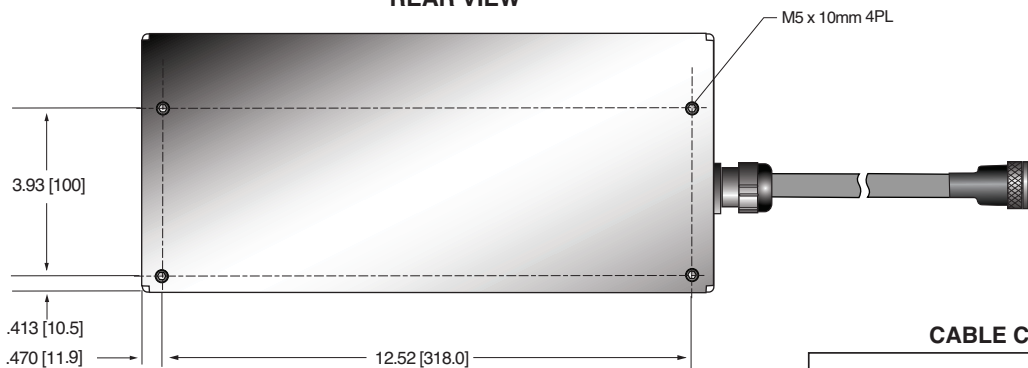

### SIDE VIEW








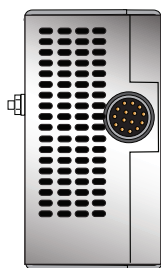


### SIDE VIEW



**Standard**  
**SE** Side Exit  
shown

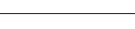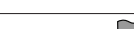
## CABLE CONFIGURATIONS
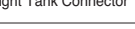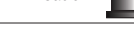
<p><b>ST-SE</b> standard</p>	 Straight Tank Connector	 Side Exit Controller Cable
<p><b>ST-TE</b> option</p>	 Straight Tank Connector	 Top Exit Controller Cable
<p><b>RA-SE</b> option</p>	 Right Angle Tank Connector	 Side Exit Controller Cable
<p><b>RA-TE</b> option</p>	 Right Angle Tank Connector	 Top Exit Controller Cable


DIMENSIONS: in.[mm]

### 350/500W CONTROL UNIT


#### FRONT VIEW

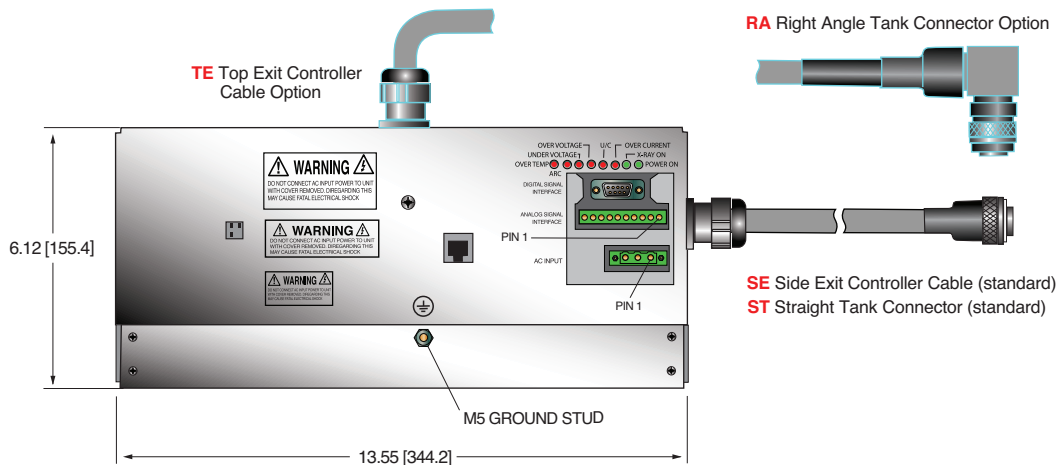


#### BOTTOM VIEW

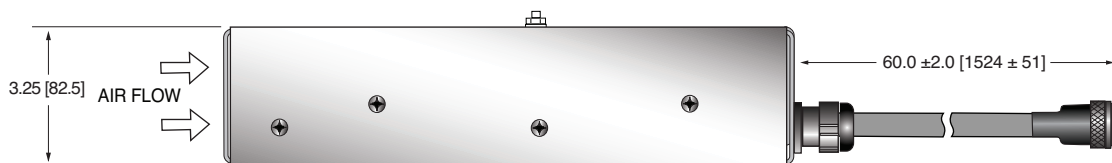

#### REAR VIEW

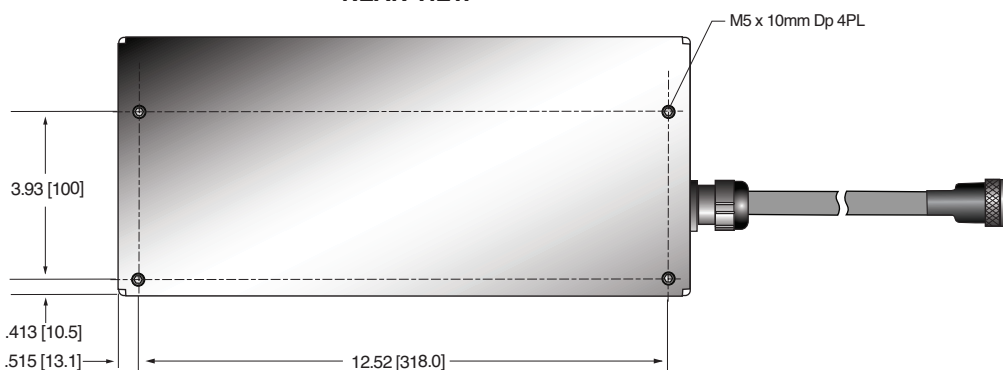

#### SIDE VIEW

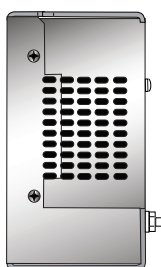

#### SIDE VIEW




Standard  
SE Side Exit  
shown




DIMENSIONS: in.[mm]

#### 100W TANK


#### TOP VIEW

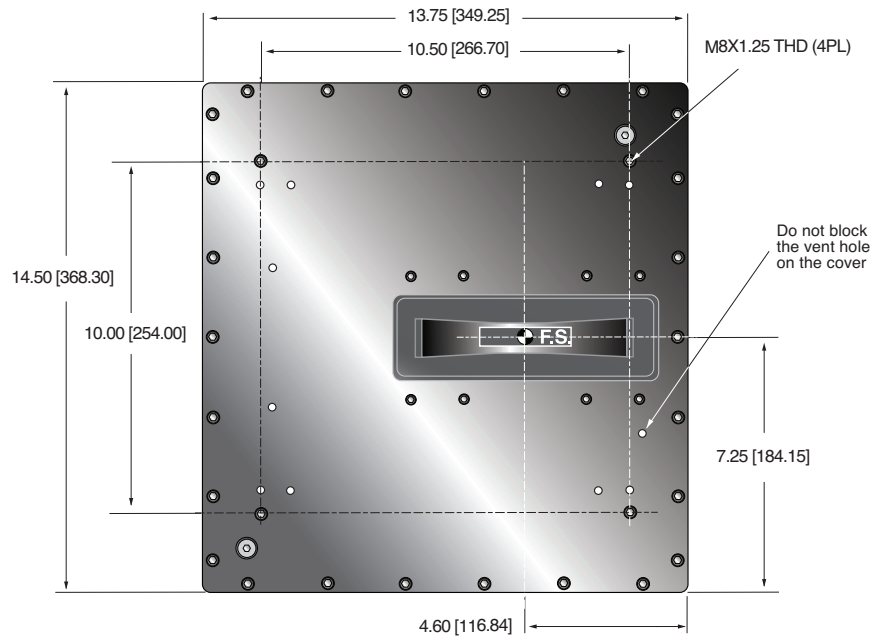


#### SIDE VIEW

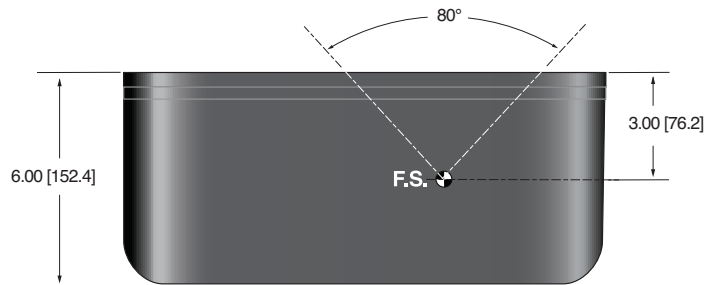


#### BACK VIEW

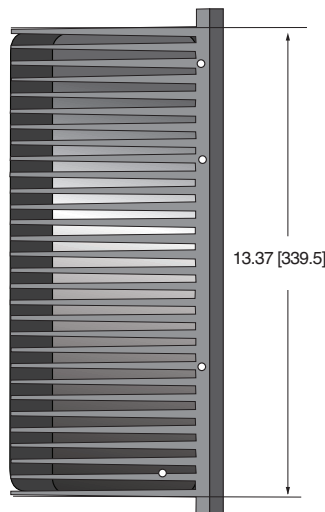

#### FRONT VIEW

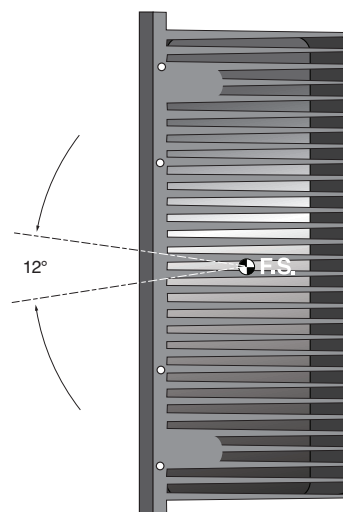


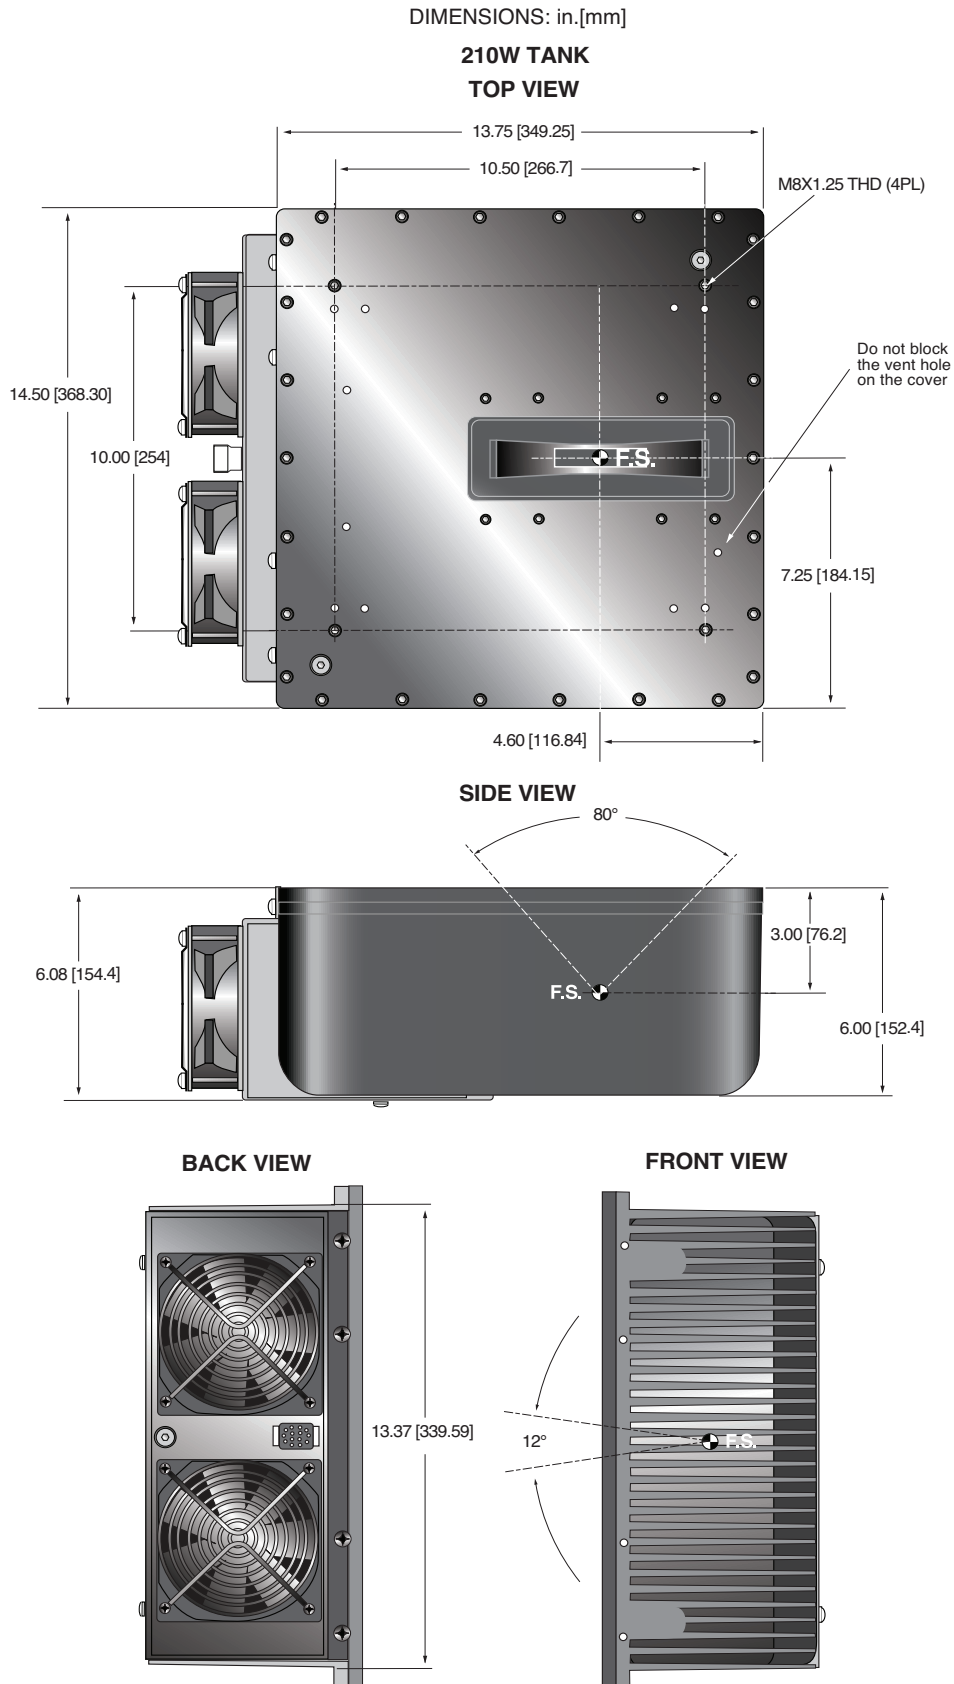


DIMENSIONS: in.[mm]

## 350/500W TANK


### TOP VIEW

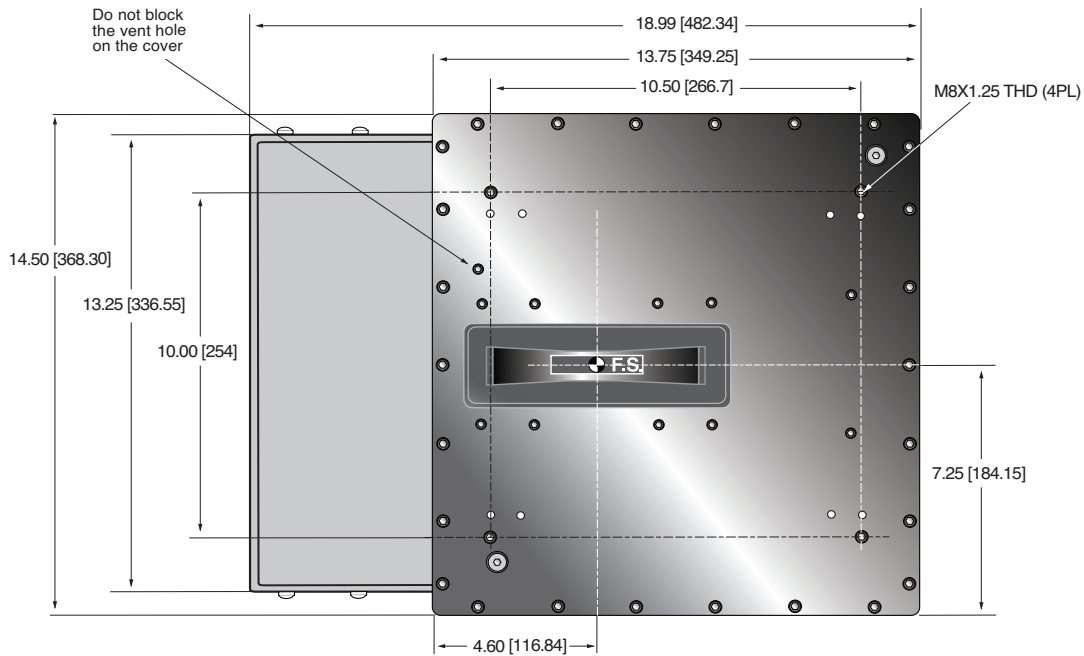


### SIDE VIEW

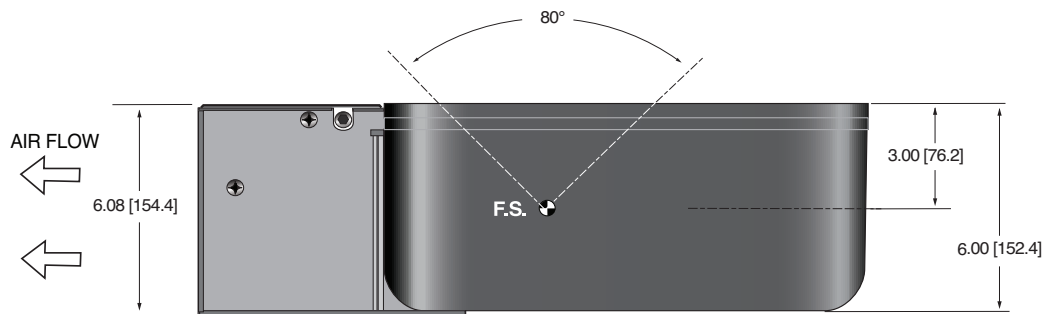

### BACK VIEW

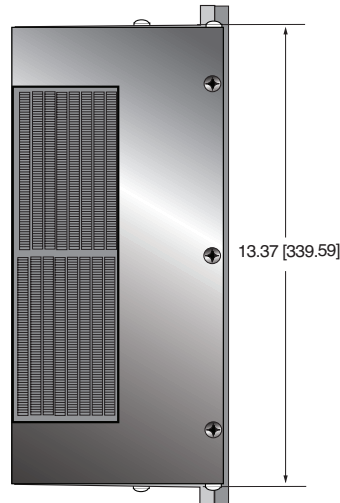

### FRONT VIEW

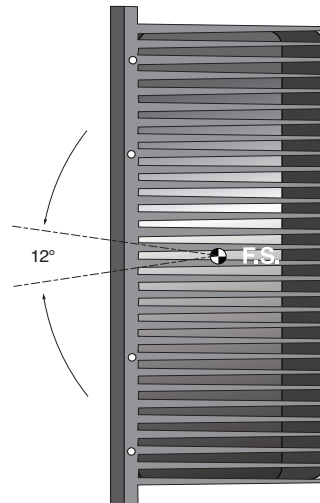



- **Compact & Lightweight**
- **Universal Input, Power Factor Corrected**
- **Can be Mounted in Any Physical Orientation**
- **Analog Monitoring Interface, Standard RS-232 Digital Interface and Ethernet**
- **Data Logging and Firmware Controlled X-Ray Tube Seasoning**

Spellman's XRBD Series of Monoblock® X-Ray sources are designed for OEM applications powering their internal bipolar X-Ray tube at 160kV at power levels of 100W, 210W, 350W and 500W. Features such as universal input, compact package size and a standard RS-232 digital interface simplify integration of any XRBD model into your X-Ray system. Each XRBD model is available with fan shaped (standard) or cone shaped (optional) beam geometries. Proprietary emission control circuitry provides excellent regulation of X-Ray tube current, along with outstanding stability performance.

### TYPICAL APPLICATIONS

Food Inspection Systems, Fill Level Confirmation Systems, Security Scanning Systems, Industrial NDT Systems, Thickness/Plating Measurement Systems

### OPTIONS

<b>CB</b>	Cone Beam
<b>.5mm</b>	.5mm focal spot X-Ray tube
<b>ST-TE</b>	
<b>RA-SE</b>	See page 4 for Cable Options
<b>RA-TE</b>	

### SPECIFICATIONS

#### X-Ray Characteristics:

Focal Spot:	0.8mm (IEC 336) standard 0.5mm (IEC 336) optional
Beam Filter:	
Ultem:	1.50mm ±0.15mm
Oil:	9.0mm ±0.25mm
Glass:	1.7mm ±0.2mm
Be:	0.8mm
Beam Geometry:	
Fan:	Standard. The beam angular coverage will be 80° with the beam plane perpendicular to the X-Ray tube axis and 12° wide (with a 2° tolerance)
Cone:	Optional. 40° cone beam (with a 2° tolerance)

#### Input Voltage:

100-240Vac, ±10%, 50/60 Hertz, .98 power factor

#### Input Current:

100W @	2.0A
210W @	4.0A
350W @	6.0A
500W @	8.0A

#### X-Ray Tube Voltage:

See table. Minimum kV for emission current 35kV

#### X-Ray Tube Current:

See table. Minimum emission current 150uA

#### X-Ray Tube Power:

See table

#### Voltage Regulation:

Line:	±0.05% of maximum output voltage over a ±10% change of nominal input line voltage
Load:	±0.1% of maximum rated voltage for 150uA to full rated load change

#### Voltage Accuracy:

Voltage measured across the X-Ray tube is within ±2% of the programmed value

#### Voltage Risetime:

Standard ramp time shall be <500ms from 10% to 90% of maximum rated output voltage

#### Voltage Ripple:

0.5% peak to peak of maximum voltage for frequencies ≤1kHz

#### Emission Current Parameters

##### Current Regulation:

Line:	±0.05% of rated output current over a ±10% change of nominal input line voltage
Load:	±0.1% of rated output current for a change from 50% to 100% of rated output voltage

##### Current Accuracy:

Current measured through the X-Ray tube is within ±2% of the programmed value

##### Current Risetime:

Standard ramp time shall be <500ms from 10% to 90% of maximum rated current

##### Arc Intervention:

4 arcs in 10 seconds with a 100ms quench/100ms re-ramp = Shutdown

##### Filament Configuration:

Internal floating AC filament drive with closed loop filament emission control circuitry



**Analog Interface:**

Ground referenced 0 to 9Vdc for all monitoring signals.  
Relay contacts and open collector signals for other signals. See analog interface connector pin out table.

**Digital Interface:**

The RS-232 interface allows for programming of kV, mA output and X-Ray enable. Provides monitoring for kV, mA output and oil temperature.

**Operating Temperature:**

0°C to +40°C

**Storage Temperature:**

-40°C to +70°C

**Humidity:**

10% to 95% relative humidity, non-condensing

**Cooling:**

X-Ray Tank:

100W: Convection/customer supplied  
forced air so tank is <55°C

210W: Externally powered forced air cooling,  
24Vdc @ 2A

350/500W: Externally powered forced air cooling  
with oil pump and heat exchanger,  
24Vdc @ 5A

Controller: Forced air via internal fan

**Grounding Point:**

M5 ground female thread on tank

M5 ground stud on control chassis provided

**Dimensions:**

see drawings

**Weight:**

X-Ray Tank:

100/210W @ 78lbs. (35.4kg)

350/500W @ 84.5lbs. (38.3kg)

Controller:

100W/210W: 4 pounds (1.18kg)

350W/500W: 7 pounds (3.18kg)

**Orientation:**

Can be mounted in any orientation.

**X-Ray Leakage:**

Not to be greater than 0.5mR/hr at 5cm outside  
the external surface.

**Regulatory Approvals:**

Compliant to EEC EMC Directive. Compliant to EEC  
Low Voltage Directive. UL/CUL recognized file E235530.

**MODEL SELECTION TABLE**

MODEL	MAX. VOLTAGE	MAX. CURRENT	MAX. POWER
XRBD160PN100	160kV	1mA	100 watts
XRBD160PN210	160kV	2.1mA	210 watts
XRBD160PN350	160kV	3.5mA	350 watts
XRBD160PN500	160kV	4mA	500 watts

**LED INDICATORS**

INDICATOR	SIGNAL	CONDITION Illuminated When...	LED COLOR
1	OV Error 6	High kV occurs	Red
2	UV Error 5	Low kV occurs	Red
3	UC Error 4	Low mA occurs	Red
4	OC Error 3	High mA occurs	Red
5	ARC Error 2	Arc fault occurs	Red
6	OT Error 1	Over temperature occurs	Red
7	X-Ray On	X-Rays are being generated	Green
8	Power On	AC input power is present	Green

**SMART XRB**

**The XRBD has two new digital features:  
data logging and firmware controlled seasoning.**

**Data Logging:**

Think of this as an "airplane black box". The data logging captures data on fault events and non-fault events. Fault events will turn off the high voltage:

**FAULT EVENTS**

Temperature	Arc
High Current	Low Voltage
High Voltage	Watchdog
Power Fault	Interlock

The XRBD stores data 620ms before the event, the event itself and for 620ms after the event. Data is recorded every 20ms (62 samples total) showing:

Anode kV	Cathode kV
Total kV	Total mA
Filament	Temperature

We also log non-fault events, these are changes in set points or state of the unit.

**NON FAULT EVENTS**

HV On	HV Off
kV Set point	mA Set point
Low Current	Filament Limit Set point
Pre Heat Set point	Line Dip

Fault event data is actual graphical data. Non fault event data is just stored as event type, data and timestamp. We also have a preventative maintenance fault, which throws a non-shutdown fault if the X-Ray tube has been factory installed over 4 years ago or if over 15,000 hours of HV ON is logged.

**Firmware Controlled Seasoning:**

Every unit comes with an initial seasoning table, or customers can set their own. The XRBD knows when the unit has been on, when it has been off, hours on the X-Ray tube, etc. As a preventative maintenance feature upon turn on, we review the data and suggest that a particular seasoning protocol be run based upon the actual usage history of the unit. Proper seasoning compliance of the X-Ray tube will help get the longest lifetime.

## Power and Interface Connections

## AC INPUT—3 PIN PHOENIX CONTACT 1858772

PIN	SIGNAL	PARAMETERS
1	AC Input (high)	100-240Vac (high)
2	Ground	Ground
3	AC Input (neutral)	100-240Vac (neutral)

DC INPUT FOR HEAT DISSIPATION  
UNIT—4 PIN AMP (210/350/500W) 206060-1

PIN	SIGNAL	DESCRIPTION	PARAMETERS
1	24Vdc	Fan/Pump Power	24Vdc @ 5 amps
2	24Vdc Return		
3	N/C	No Connection	N/C
4	N/C	No Connection	N/C

It is critical to ensure that 24Vdc is supplied to pins 1 and 2

ANALOG INTERFACE—  
10 PIN PHOENIX CONTACT 1792605

PIN	SIGNAL	PARAMETERS
1	X-Ray Interlock Enable	Apply +24Vdc to enable interlock. Open/removal of +24Vdc will cause X-Ray generation to stop.
2	X-Ray Interlock Enable Return	Ground reference for X-Ray Interlock.
3	Pin removed	N/C
4	kV Monitor	0-10Vdc = 0-100% rated output voltage. Zout = 10kΩ
5	Signal Ground	Signal Ground
6	mA Monitor	0-10Vdc = 0-100% rated output current. Zout = 10kΩ
7	Fault Signal	Open collector, High (Open) = No Fault, 35Vdc @ 10mA maximum
8	HV ON Lamp Relay N/O	N/O dry contacts. 50 volts maximum. Rated for 1 amp or less, 50mA nominal load
9	HV ON Lamp Relay C	Common dry contacts. 50 volts maximum. Rated for 1 amp or less, 50mA nominal load
10	HV ON Lamp Relay N/C	N/C dry contacts. 50 volts maximum. Rated for 1 amp or less, 50mA nominal load

RS-232 DIGITAL INTERFACE—  
9 PIN MALE D CONNECTOR

PIN	SIGNAL	PARAMETERS
1	N/C	N/C
2	Transmitted Data	Conforms to EIA RS-232-C
3	Received Data	Conforms to EIA RS-232-C
4	N/C	N/C
5	Signal Ground	Signal Ground
6	N/C	N/C
7	N/C	N/C
8	N/C	N/C
9	N/C	N/C


ETHERNET DIGITAL INTERFACE—  
RJ45 8 PIN FEMALE CONNECTOR

PIN	SIGNAL	PARAMETERS
1	TX +	Transmit Data +
2	TX -	Transmit Data -
3	RX +	Receive Data +
4	N/C	No Connection
5	N/C	No Connection
6	RX -	Receive Data -
7	N/C	No Connection
8	N/C	No Connection


DIMENSIONS: in.[mm]

**100/210W  
CONTROL UNIT**


### FRONT VIEW

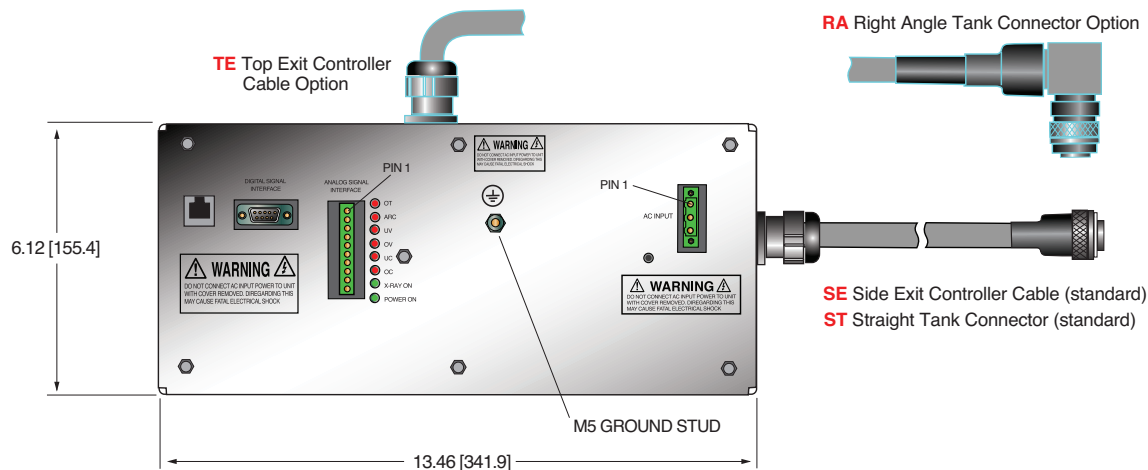


### BOTTOM VIEW

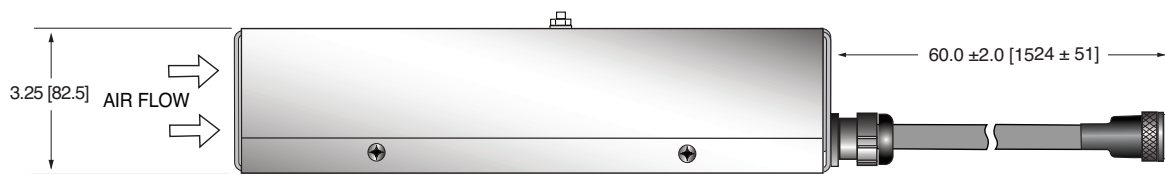


## REAR VIEW

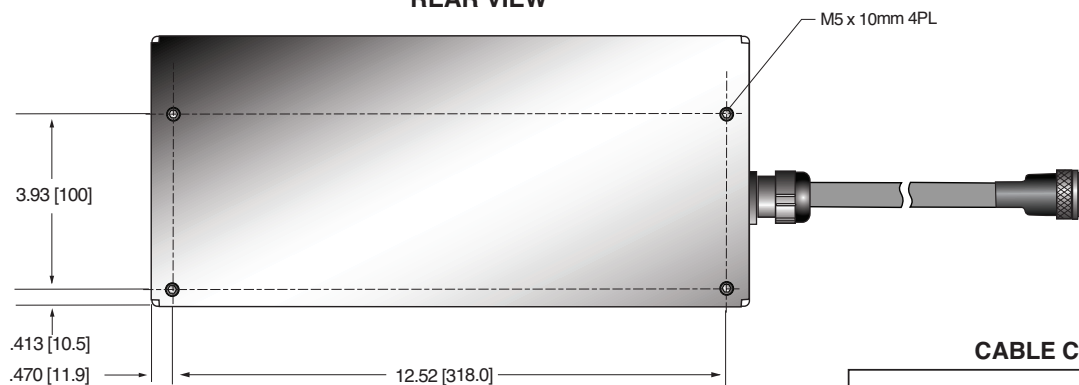

### SIDE VIEW

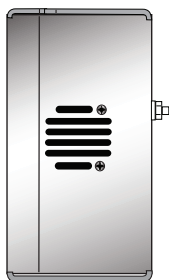


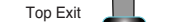


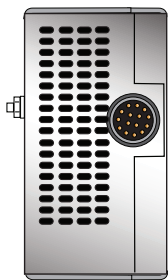



### SIDE VIEW



**Standard**  
**SE** Side Exit  
shown


## CABLE CONFIGURATIONS

<b>ST-SE</b> <b>standard</b>	 Straight Tank Connector	 Side Exit Controller Cable
<b>ST-TE</b> <b>option</b>	 Straight Tank Connector	 Top Exit Controller Cable
<b>RA-SE</b> <b>option</b>	 Right Angle Tank Connector	 Side Exit Controller Cable
<b>RA-TE</b> <b>option</b>	 Right Angle Tank Connector	 Top Exit Controller Cable


DIMENSIONS: in.[mm]

### 350/500W CONTROL UNIT


#### FRONT VIEW

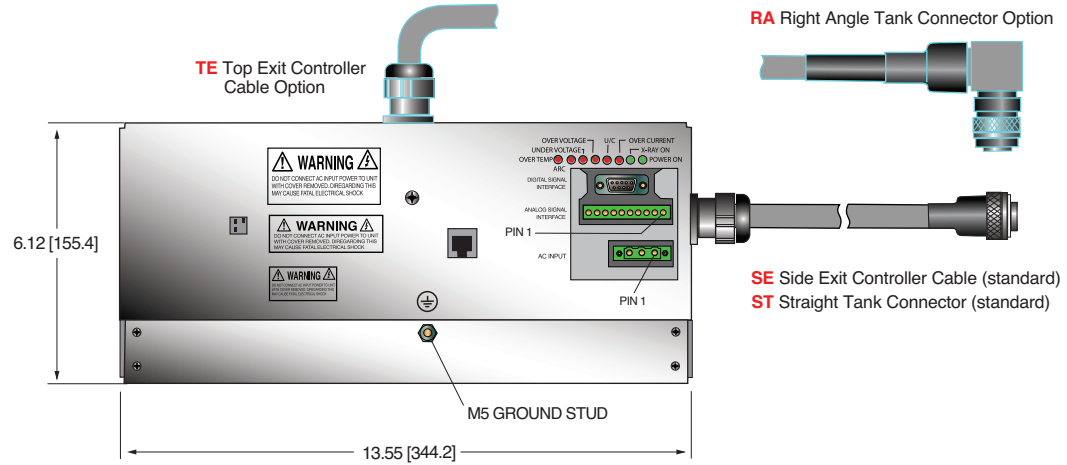


#### BOTTOM VIEW

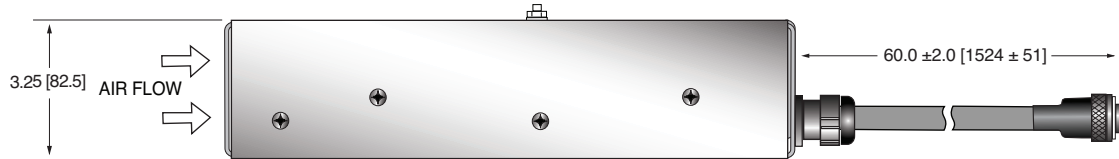


#### REAR VIEW

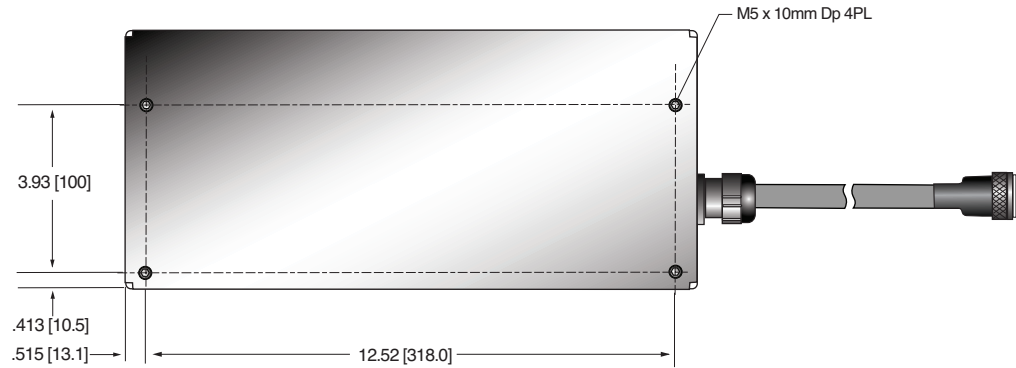

#### SIDE VIEW

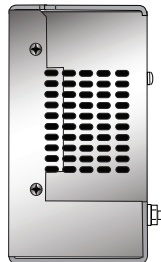

#### SIDE VIEW

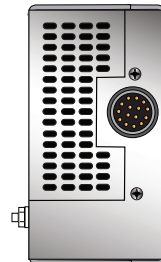


Standard  
SE Side Exit  
shown




DIMENSIONS: in.[mm]


### 100W TANK TOP VIEW

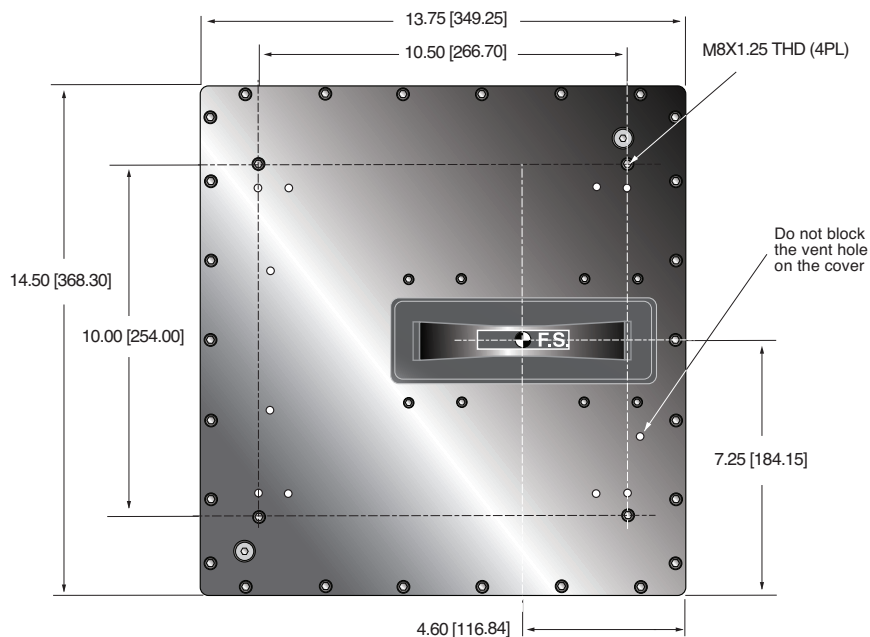


### SIDE VIEW

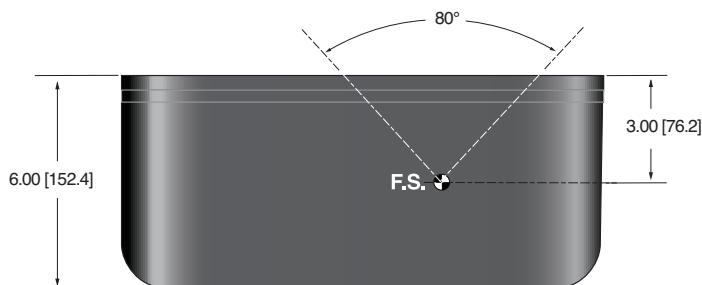

### BACK VIEW

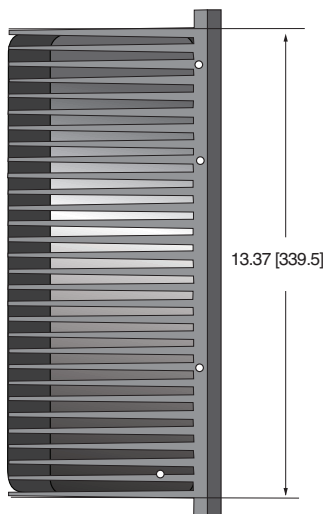


### FRONT VIEW

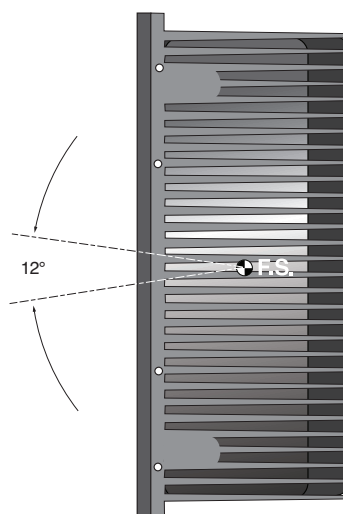


DIMENSIONS: in.[mm]


#### 210W TANK TOP VIEW

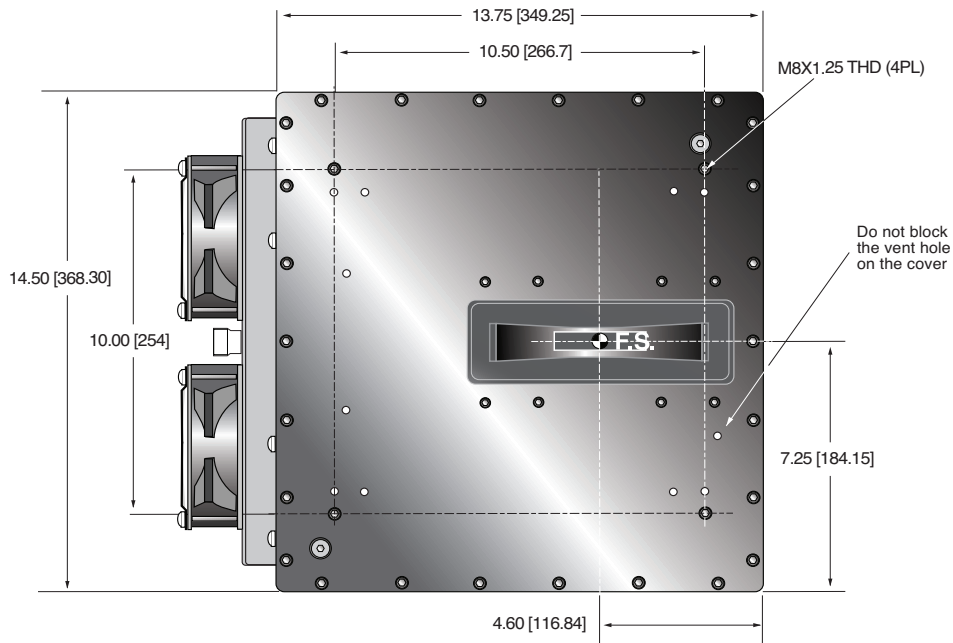


#### SIDE VIEW

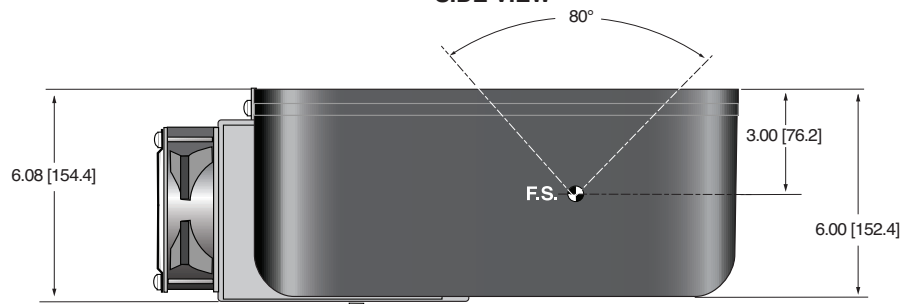

#### BACK VIEW

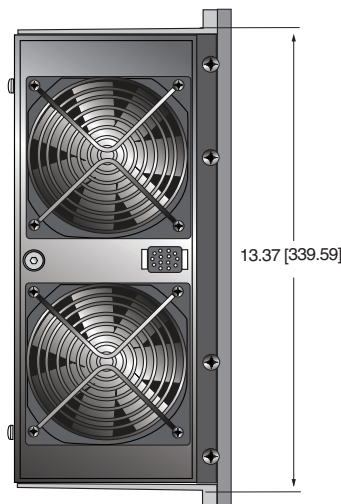


#### FRONT VIEW

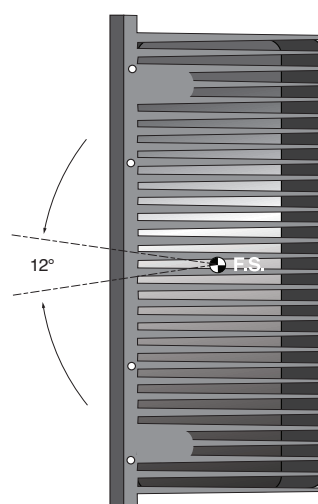


DIMENSIONS: in.[mm]

#### 350/500W TANK

##### TOP VIEW

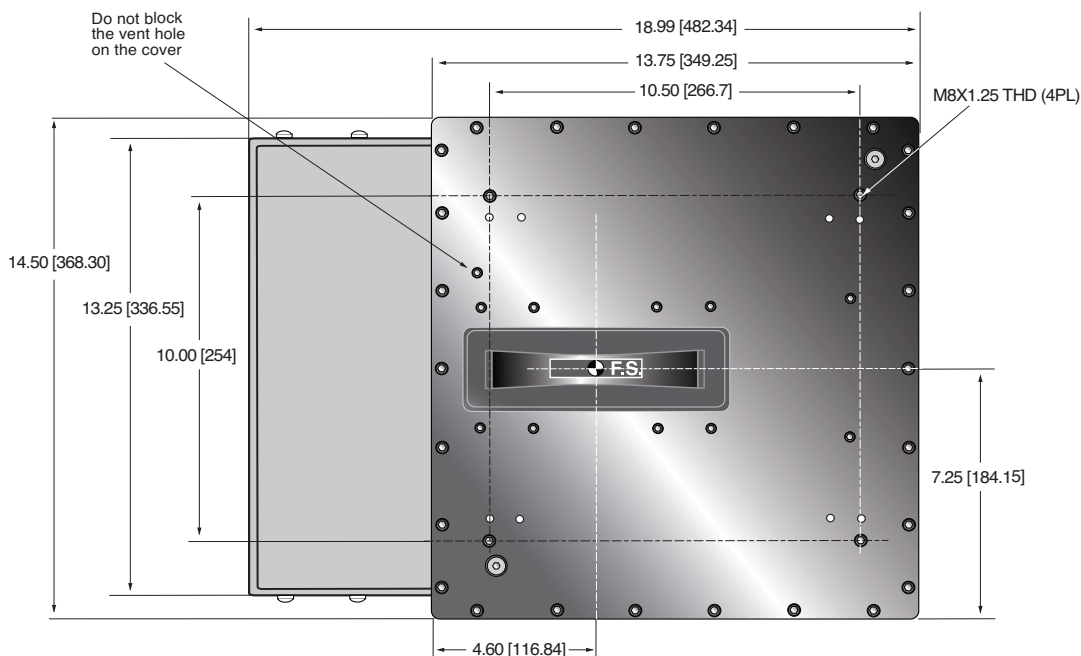


##### SIDE VIEW

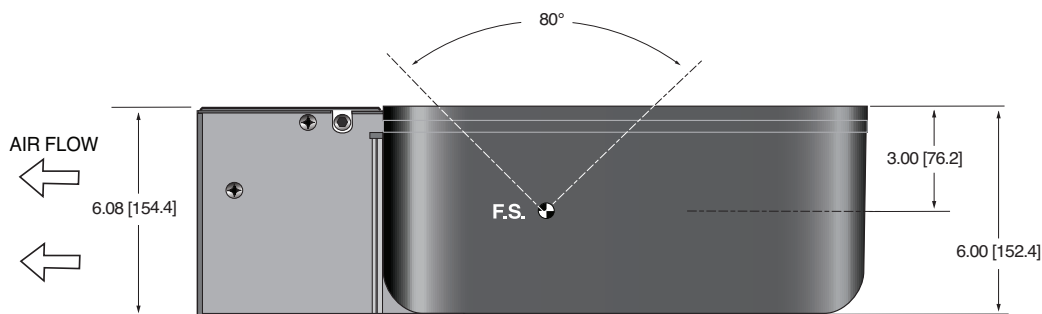


##### BACK VIEW



##### FRONT VIEW

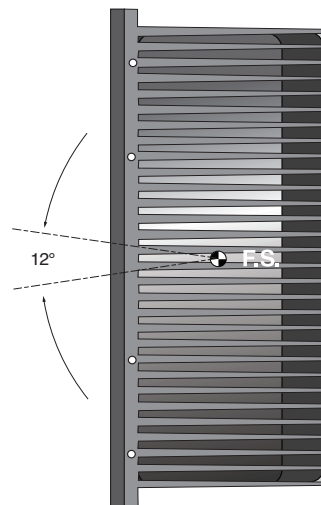

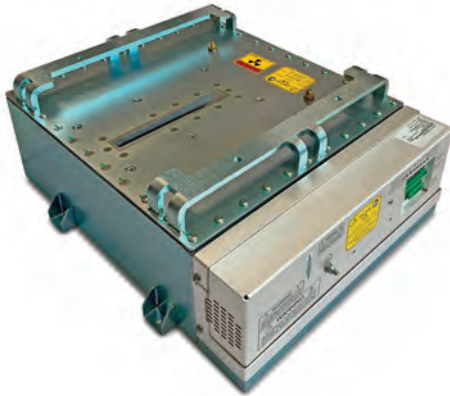

Spellman's XRB180PN200 is an integrated X-Ray source operating up to 180kV and 200W, providing OEM users a compact plug-and-play Monoblock for critical inspection and screening applications. The unit incorporates a 25° angle stationary anode X-Ray tube offering a fan beam of 80°x 4°. Proprietary emission control circuitry provides excellent regulation of X-Ray tube current, with industry leading dose stability and image quality. This compact model comes with standard analog and RS-232 digital control. Spellman can provide customized versions of this platform for specific OEM system requirements.

## TYPICAL APPLICATIONS

Aviation Security Screening: Checked Baggage/EDS, Checkpoint. Vehicle Inspection, General NDT, Food Inspection

## SPECIFICATIONS

### X-Ray Characteristics:

Tube Type:	Stationary Anode, tungsten target
Focal Spot:	0.8 x 0.8mm nominal (IEC60336)
Beam Filter:	Consists of oil and the curved Ultem 0.079" +/-0.01". Inherent filtration in the X-Ray Tube is 1mm Be, 1.5mm +/-10% glass.
Beam Geometry:	Fan of 80° X 4°, ±1%
Anode Angle:	25°

### Input Voltage:

Power factor corrected input to 0.98. 100Vac to 240Vac, ±10%, 50/60 Hertz. 5A, maximum

### X-Ray Tube Voltage:

Nominal X-Ray tube voltage is adjustable between 90kV to 180kV.

### Voltage Accuracy:

The high voltage measured at the X-ray tube will be within ±1% of the selected value.

### Voltage Ripple:

Ripple will be ≤0.2% of maximum rated voltage for frequencies ≤1kHz.

### Voltage Regulation:

< ±0.1% for ±10% of nominal input line change  
< ±0.1% for 0.5mA to 1.11mA load change

- **180kV and 200W**
- **X-Ray Tube Current: 0.5mA to 1.1mA**
- **Focal Spot 0.8 x 0.8mm nominal (IEC60336)**
- **Fan Beam of 80° X 4°, maximum**
- **Power factor corrected input to 0.98**
- **100Vac to 240Vac, ±10%**

### Voltage Overshoot:

kV overshoot will return within 5% of full voltage in less than 10ms.

### Risetime:

The voltage and current risetime is controlled by a ramping circuit. Ramp time is less than 0.5 second from 10% to 90% of output voltage and current.

### X-Ray Tube Current:

0.5mA to 1.1mA @ 180kV, 200 Watts maximum

### Current Accuracy:

<±1% of the selected value.

### Current Regulation:

<0.5% at 90-180kV, 0.5mA to 1.1mA

### Arc Intervention:

Unit will detect a single arc but HV will not shut down. If multiple arcs occur (4 in 10 seconds) then the unit will shut down.

### Filament Configuration:

Internal high frequency AC filament drive operated in current mode with closed loop filament emission control.

### Analog Interface:

Ground referenced 0 to 10Vdc for all monitoring signals. Relay contacts and open collector outputs for other signals.

### Digital Interface:

The RS-232 interface allows for programming of the voltage, current, and X-Ray Enable. Provides monitoring for voltage, current and oil temperature. Tolerance is 3% (with additional 5uA offset at ≤10%mA programming).

### Control Software:

A demo GUI is available for engineering evaluation.

### Operating Temperature:

0°C to +40°C

### Storage Temperature:

-40°C to +70°C

### Humidity:

10% to 95% relative humidity, non-condensing.

### Cooling:

Via natural convection/external cooling fans of 100CFM minimum or maintaining tank/oil temperature below 55°C.



#### Input Line Connector:

3 pin Phoenix Contact, p/n 1829167.  
Mating connector provided with unit.

#### Analog Interface Connector:

10 pin Phoenix Contact, p/n 1755503.  
Mating connector provided with unit.

#### Digital Interface Connector:

9 pin female D connector.  
Mating connector provided with unit.

#### Grounding Point:

M4 grounding stud provided on chassis.

#### Dimensions:

See outline drawing.

#### Weight:

132 pounds (60kg).

#### Orientation:

Can be mounted in any orientation.

#### X-Ray Leakage:

Not to be greater than .5mR/hr at 5cm from any surface of the Monoblock® when measured at 180kV @ 1.1mA.

#### Regulatory Approvals:

Compliant to EEC EMC Directive. Compliant to EEC Low Voltage Directive.

#### AC INPUT POWER

##### 3 PIN PHOENIX CONTACT P/N 1829167

PIN	SIGNAL	PARAMETERS
1	Line	100-240Vac, ±10%, 50/60 Hertz @ 6 amps
2	GND	Ground
3	Neutral	100-240Vac, ±10%, 50/60 Hertz @ 6 amps

#### ANALOG INTERFACE—

##### 10 PIN PHOENIX CONTACT P/N 1755503

PIN	SIGNAL	PARAMETERS
1	X-Ray On	+24Vdc = Enable X-Ray, Low or open = Disable X-Ray
2	X-Ray On Return	X-Ray on Return
3	N/C	No Connection
4	kV Monitor	0 to 10Vdc = 0 to 200kV, Zout = 10kΩ
5	SGND	Signal Ground
6	mA Monitor	0 to 10Vdc = 0 to 1.5mA, Zout = 10kΩ
7	Fault	Open Collector, High (Open) = No Fault, 35Vdc @ 10mA, maximum
8	HV On Lamp N/O	Relay dry contact, normally open, 30Vdc @ <1A, nominal 50mA DC load
9	HV On Lamp Common	Relay dry contact, common, 30Vdc @ <1A, nominal 50mA DC load
10	HV On Lamp N/C	Relay dry contact, normally closed, 30Vdc @ <1A, nominal 50mA DC load

#### RS-232 DIGITAL INTERFACE—

##### 9 PIN MALE D CONNECTOR


PIN	SIGNAL	PARAMETERS
1	N/C	No Connection
2	Transmit Data	Conforms to EAI RS-232-C
3	Receive Data	Conforms to EAI RS-232-C
4	N/C	No Connection
5	SGND	Signal Ground
6	N/C	No Connection
7	N/C	No Connection
8	N/C	No Connection
9	N/C	No Connection

#### FRONT PANEL LED INDICATORS


INDICATOR	SIGNAL NAME	CONDITION Illuminated When...	LED COLOR
LED 1	OT	OverTemperature occurs	Red
LED 2	ARC	Arc fault occurs	Red
LED 3	UV	Low kV occurs	Red
LED 4	OV	High kV occurs	Red
LED 5	UC	Low mA occurs	Red
LED 6	OC	High mA occurs	Red
LED 7	X-RAY ON	X-Rays are enabled	Green
LED 8	PWR ON	Power is ON	Green

DIMENSIONS: in.[mm]


TOP VIEW

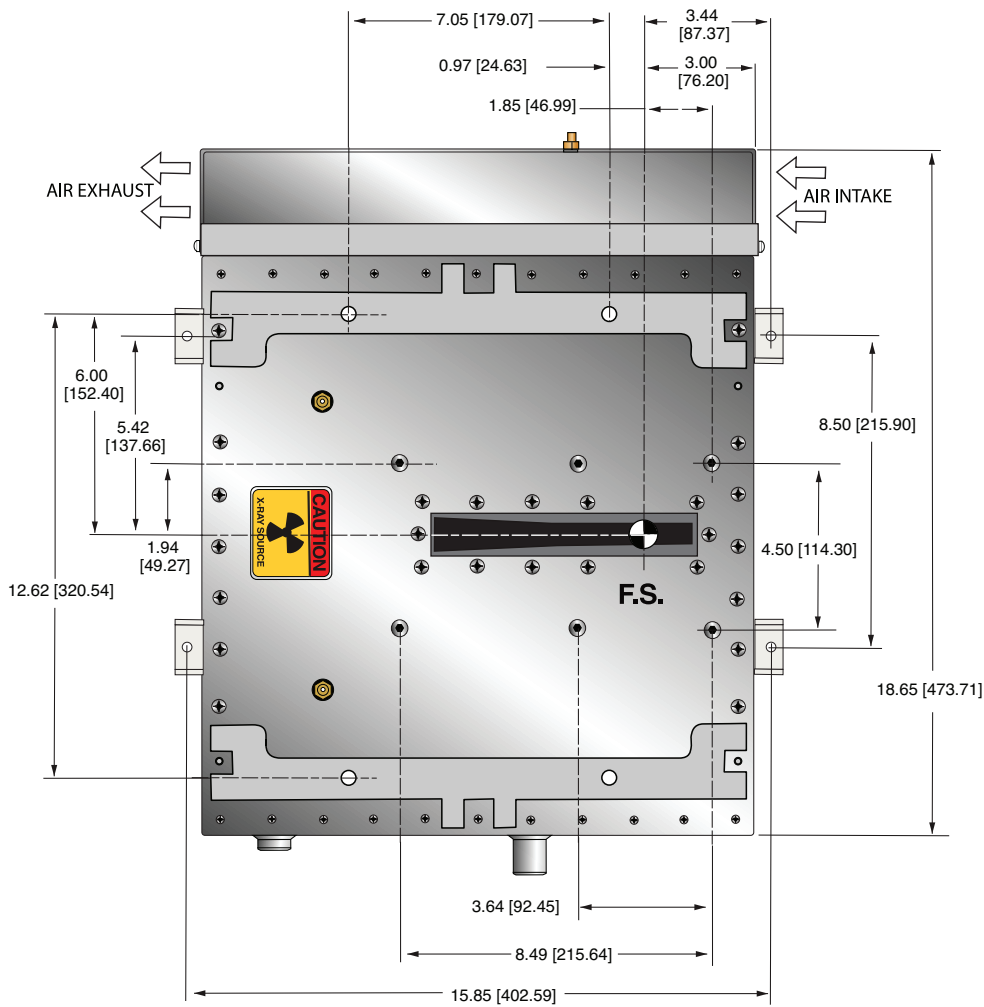


SIDE VIEW

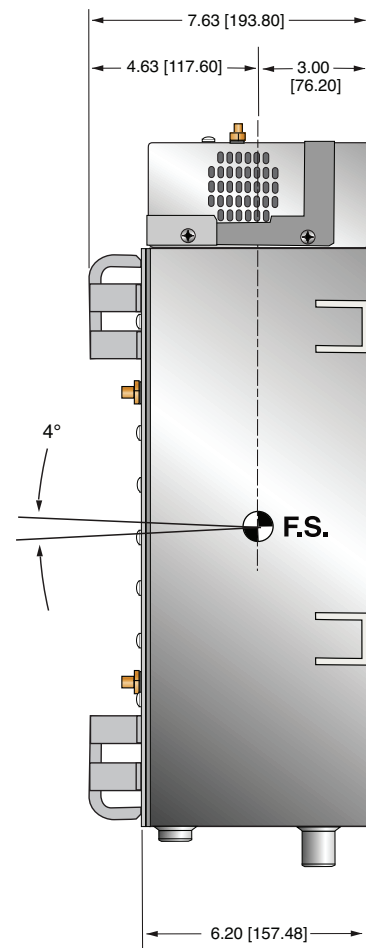

BACK VIEW

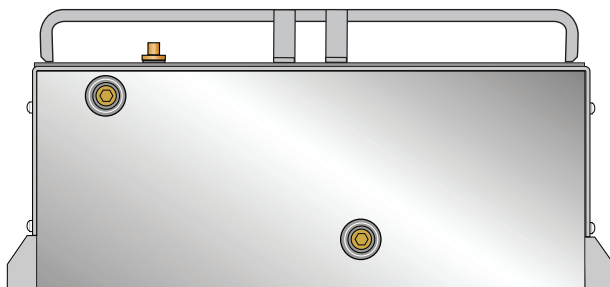

FRONT VIEW

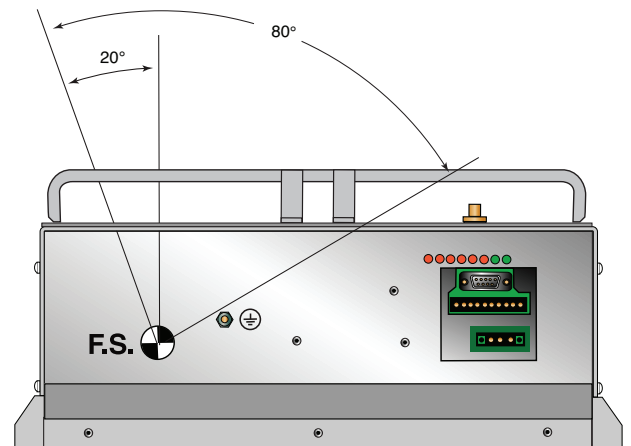



Spellman's XRBe80PN300 beryllium window Monoblock® X-Ray sources are designed for OEM applications powering the internal Bipolar X-Ray tube at 80kV at a power level of 300W. Features such as universal input, compact package size and a standard RS-232 digital interface simplify integration of the XRBe80PN300 into your X-Ray system. It is available with a cone shaped beam geometry. Proprietary emission control circuitry provides excellent regulation of X-Ray tube current, along with outstanding stability performance.

### TYPICAL APPLICATIONS

Food Inspection Systems, Fill Level Confirmation Systems, Security Scanning Systems, Industrial NDT Systems, Thickness/Plating Measurement Systems

### OPTIONS

ST-TE	Cable Options (see page 3)
RA-SE	
RA-TE	

### SPECIFICATIONS

#### X-Ray Characteristics:

Focal Spot: 0.8mm (IEC 336) standard  
Beam Filter: Be 0.8mm  
Beam Geometry:  
Cone: Standard. The beam angular coverage will be 40° with the beam plane perpendicular to the X-Ray tube axis

#### Input Voltage:

100- 240Vac,  $\pm 10\%$ , 50/60 Hertz, .98 power factor

#### Input Current:

300W @ 6A

- **Compact & Lightweight**
- **Universal Input, Power Factor Corrected**
- **Can be Mounted in Any Physical Orientation**
- **Analog Monitoring Interface, Standard RS-232 Digital Interface and Ethernet**
- **Data Logging and Firmware Controlled X-Ray Tube Seasoning**

#### X-Ray Tube Voltage:

Maximum 80kV

#### X-Ray Tube Current:

Maximum 5mA

#### X-Ray Tube Power:

300W

#### Voltage Regulation:

Line:  $\pm 0.05\%$  of maximum output voltage over a  $\pm 10\%$  change of nominal input line voltage

Load:  $\pm 0.1\%$  of maximum rated voltage for 150uA to full rated load change

#### Voltage Accuracy:

Voltage measured across the X-Ray tube is within  $\pm 2\%$  of the programmed value

#### Voltage Risettime:

Standard ramp time shall be <500ms from 10% to 90% of maximum rated output voltage

#### Voltage Ripple:

0.5% peak to peak of maximum voltage for frequencies  $\leq 1\text{kHz}$

#### Emission Current Parameters

##### Current Regulation:

Line:  $\pm 0.05\%$  of rated output current over a  $\pm 10\%$  change of nominal input line voltage  
Load:  $\pm 0.1\%$  of rated output current for a change from 50% to 100% of rated output voltage

##### Current Accuracy:

Current measured through the X-Ray tube is within  $\pm 2\%$  of the programmed value

##### Current Risettime:

Standard ramp time shall be <500ms from 10% to 90% of maximum rated current

##### Arc Intervention:

4 arcs in 10 seconds with a 100ms quench/100ms re-ramp = Shutdown

##### Filament Configuration:

Internal floating AC filament drive with closed loop filament emission control circuitry

#### Analog Interface:

Ground referenced 0 to 9Vdc for all monitoring signals. Relay contacts and open collector signals for other signals. See analog interface connector pinout table.

#### Digital Interface:

The RS-232 interface allows for programming of kV, mA output and X-Ray enable. Provides monitoring for kV, mA output and oil temperature.

#### Operating Temperature:

0°C to +40°C

#### Storage Temperature:

-40°C to +70°C

#### Humidity:

10% to 95% relative humidity, non-condensing

#### Cooling:

X-Ray Tank: Externally powered forced air cooling with oil pump and heat exchanger, 24Vdc @ 5A

Controller: Forced air via internal fan.

#### Grounding Point:

M5 ground female thread on tank

M5 ground stud on control chassis provided

#### Dimensions:

X-Ray Tank: see drawings

Controller: see drawings

#### Weight:

X-Ray Tank: 81.5lbs. (37kg)

Controller: 7lbs. (3.18kg)

#### Orientation:

Can be mounted in any orientation.

#### X-Ray Leakage:

Not to be greater than 0.5mR/hr at 5cm outside the external surface.

#### Regulatory Approvals:

Compliant to EEC EMC Directive. Compliant to EEC

Low Voltage Directive. UL/CUL recognized file E235530

#### AC INPUT—3 PIN PHOENIX CONTACT 1858772

PIN	SIGNAL	PARAMETERS
1	AC Input (high)	100-240Vac (high)
2	Ground	Ground
3	AC Input (neutral)	100-240Vac (neutral)

#### DC INPUT FOR HEAT DISSIPATION UNIT—4 PIN AMP (210/350/500W) 206060-1

PIN	SIGNAL	DESCRIPTION	PARAMETERS
1	24Vdc	Fan/Pump Power	24Vdc @ 5 amps
2	24Vdc Return		
3	N/C	No Connection	N/C
4	N/C	No Connection	N/C

It is critical to ensure that 24Vdc is supplied to pins 1 and 2

#### LED INDICATORS

INDICATOR	SIGNAL	CONDITION Illuminated When...	LED COLOR
1	OV Error 6	High kV occurs	Red
2	UV Error 5	Low kV occurs	Red
3	UC Error 4	Low mA occurs	Red
4	OC Error 3	High mA occurs	Red
5	ARC Error 2	Arc fault occurs	Red
6	OT Error 1	Over temperature occurs	Red
7	X-Ray On	X-Rays are being generated	Green
8	Power On	AC input power is present	Green

#### ANALOG INTERFACE— 10 PIN PHOENIX CONTACT 1792605

PIN	SIGNAL	PARAMETERS
1	X-Ray Interlock Enable	Apply +24Vdc to enable interlock. Open/removal of +24Vdc will cause X-Ray generation to stop.
2	X-Ray Interlock Enable Return	Ground reference for X-Ray Interlock.
3	Pin removed	N/C
4	kV Monitor	0-10Vdc = 0-100% rated output voltage. Zout = 10kΩ
5	Signal Ground	Signal Ground
6	mA Monitor	0-10Vdc = 0-100% rated output current. Zout = 10kΩ
7	Fault Signal	Open collector, High (Open) = No Fault, 35Vdc @ 10mA maximum
8	HV ON Lamp Relay N/O	N/O dry contacts. 50 volts maximum. Rated for 1 amp or less, 50mA nominal load
9	HV ON Lamp Relay C	Common dry contacts. 50 volts maximum. Rated for 1 amp or less, 50mA nominal load
10	HV ON Lamp Relay N/C	N/C dry contacts. 50 volts maximum. Rated for 1 amp or less, 50mA nominal load


#### RS-232 DIGITAL INTERFACE— 9 PIN MALE D CONNECTOR

PIN	SIGNAL	PARAMETERS
1	N/C	N/C
2	Transmitted Data	Conforms to EIA RS-232-C
3	Received Data	Conforms to EIA RS-232-C
4	N/C	N/C
5	Signal Ground	Signal Ground
6	N/C	N/C
7	N/C	N/C
8	N/C	N/C
9	N/C	N/C

#### ETHERNET DIGITAL INTERFACE— RJ45 8 PIN FEMALE CONNECTOR

PIN	SIGNAL	PARAMETERS
1	TX +	Transmit Data +
2	TX -	Transmit Data -
3	RX +	Receive Data +
4	N/C	No Connection
5	N/C	No Connection
6	RX -	Receive Data -
7	N/C	No Connection
8	N/C	No Connection

### CABLE CONFIGURATIONS

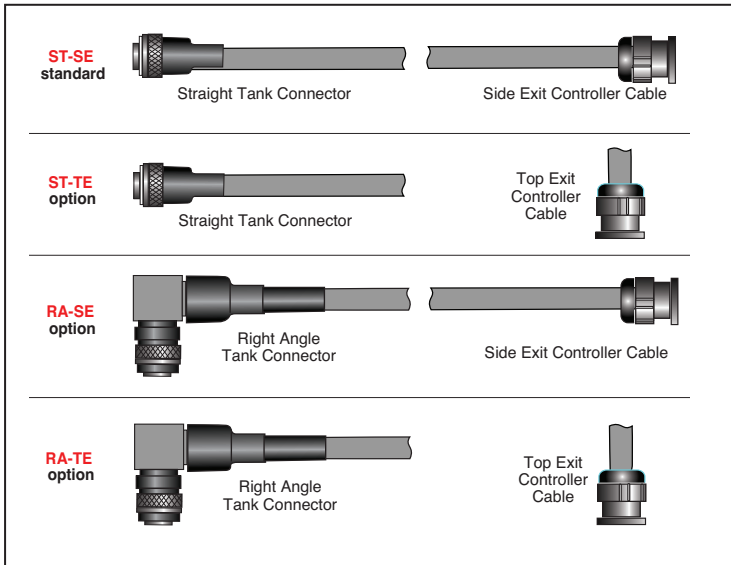

### SMART XRB

The XRBe80PN300 has two new digital features: data logging and firmware controlled seasoning.

#### Data Logging:

Think of this as an "airplane black box". The data logging captures data on fault events and non-fault events. Fault events will turn off the high voltage:

#### FAULT EVENTS

Temperature	Arc
High Current	Low Voltage
High Voltage	Watchdog
Power Fault	Interlock

The XRBe80PN300 stores data 620ms before the event, the event itself and for 620ms after the event. Data is recorded every 20ms (62 samples total) showing:

Anode kV	Cathode kV
Total kV	Total mA
Filament	Temperature

We also log non-fault events, these are changes in set points or state of the unit.

#### NON FAULT EVENTS

HV On	HV Off
kV Set point	mA Set point
Low Current	Filament Limit Set point
Pre Heat Set point	Line Dip

Fault event data is actual graphical data. Non fault event data is just stored as event type, data and timestamp. We also have a preventative maintenance fault, which throws a non-shutdown fault if the X-Ray tube has been factory installed over 4 years ago or if over 15,000 hours of HV ON is logged.

#### Firmware Controlled Seasoning:


Every unit comes with an initial seasoning table, or customers can set their own. The XRBe80PN300 knows when the unit has been on, when it has been off, hours on the X-Ray tube, etc. As a preventative maintenance feature upon turn on, we review the data and suggest that a particular seasoning protocol be run based upon the actual usage history of the unit. Proper seasoning compliance of the X-Ray tube will help get the longest lifetime.




DIMENSIONS: in.[mm]

### CONTROL UNIT


#### FRONT VIEW

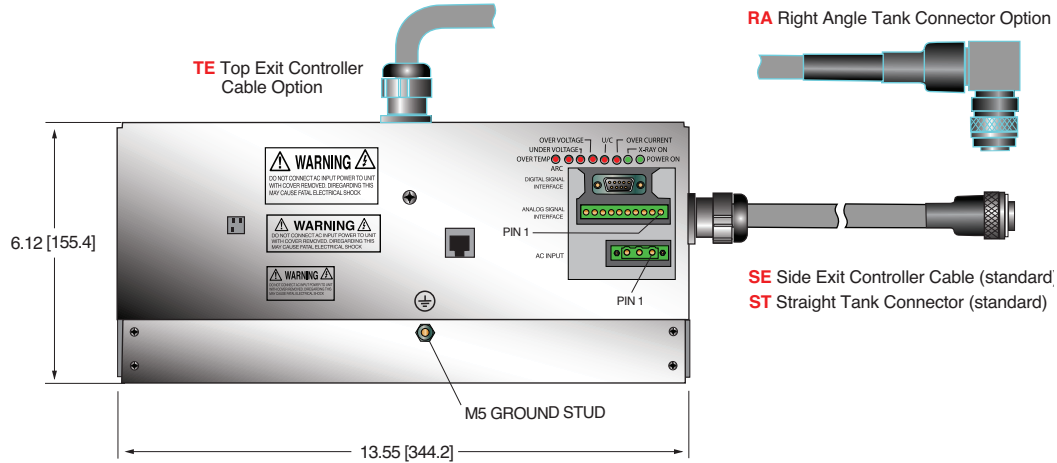


#### BOTTOM VIEW

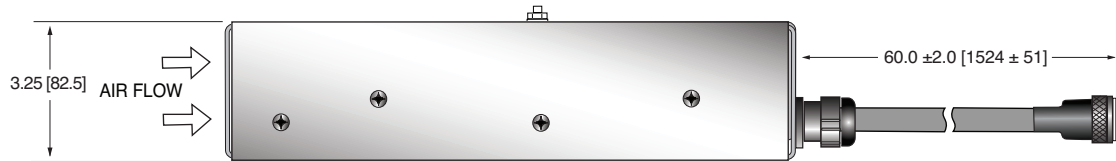


#### REAR VIEW

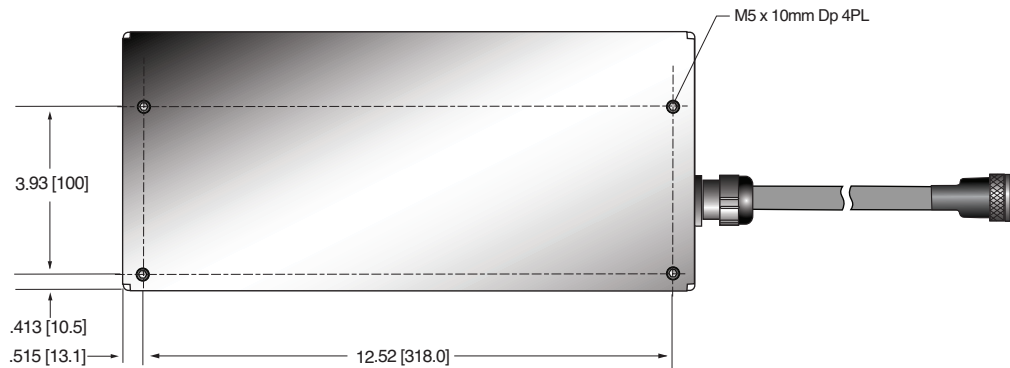

#### SIDE VIEW

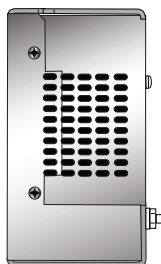


#### SIDE VIEW

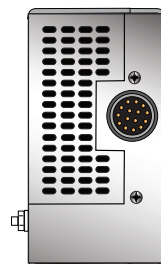


Standard  
SE Side Exit  
shown

DIMENSIONS: in.[mm]


### TOP VIEW

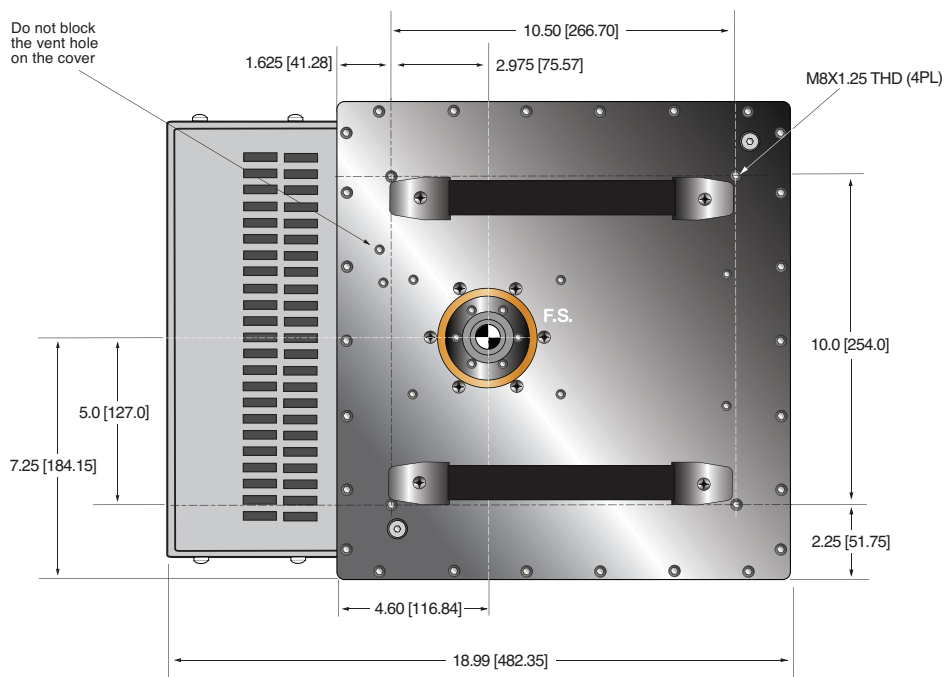

### SIDE VIEW

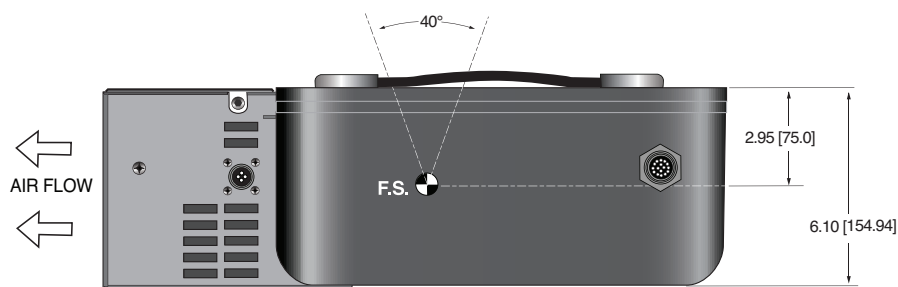

### FRONT VIEW

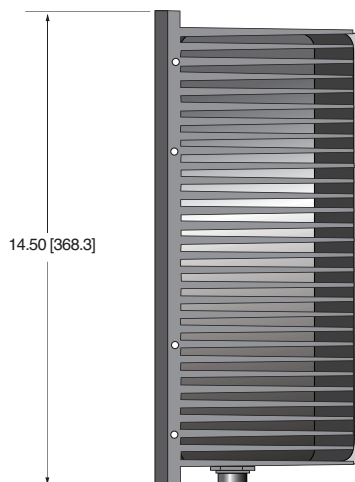



Spellman's XRB80PN320 Monoblock® X-Ray source is designed for OEM applications powering its internal X-Ray tube up to 80kV at 320W. Features like small package size and RS-232 digital interface simplify integrating this Monoblock® into your X-Ray system. Standard models are available with fan shaped beam geometry. Proprietary emission control circuitry provides excellent regulation of X-Ray tube current, along with outstanding stability performance.

#### TYPICAL APPLICATIONS

X-Ray Scanning: Food Inspection, Fill Level Confirmation and Security Applications

#### SPECIFICATIONS

##### X-Ray Characteristics:

Tube Type: Glass tube, Tungsten target, Be filter  
Focal Spot: 0.8mm x 0.8mm (IEC 336)  
Beam Filter: 5052 Al, 0.040" ( $\pm 0.01$ ")  
Beam Geometry: Asymmetrical fan 80° x 10°  $\pm 2^\circ$

##### Input Voltage:

200-240Vac  $\pm 10\%$ , 50/60Hz, 6.5A max

##### X-Ray Tube Voltage:

Nominal X-Ray tube voltage is adjustable between 40kV to 80kV

##### X-Ray Tube Current:

0.5mA to 4mA over specified tube voltage range

##### X-Ray Tube Power:

320W maximum continuous

##### Voltage Regulation:

Line:  $\pm 0.05\%$  for a  $\pm 10\%$  input line change  
Load:  $\pm 0.05\%$  for a 0.5mA to 4mA load change

##### Voltage Accuracy:

Voltage measured across the X-Ray tube is within  $\pm 2\%$  of the programmed value

- **Integrated HV Supply, Filament Supply, X-Ray Tube, Beam Port and Control Electronics**
- **Compact & Lightweight**
- **Can be Mounted in Any Physical Orientation**
- **Standard RS-232 Digital Interface**

##### Voltage Risetime:

Ramp time shall be  $< 500\text{ms}$  from 10% to 90% of rated output

##### Voltage Overshoot:

Within 5% of rated voltage in  $< 10\text{ms}$

##### Voltage Ripple:

$\leq 1\%$  p-p of rated voltage @ 1kHz

##### Current Regulation:

Line:  $\pm 0.5\%$  @ 50-100% V nominal over specified Line range  
Load:  $\pm 0.5\%$  @ 50-100% V nominal over specified Load range

##### Current Accuracy:

Current measured through the X-Ray tube is within  $\pm 2\%$  of the programmed value

##### Current Risetime:

$< 500\text{ms}$  from 10% to 90% of rated output

##### Arc Intervention:

4 arcs in 10 seconds = shutdown

##### Filament Configuration:

Internal high frequency AC filament drive with closed loop filament emission control

##### Analog Interface:

0 to 10Vdc ground referenced monitoring signals

##### Digital Interface:

RS-232

##### Control Software:

A demo GUI for engineering evaluations will be provided for the RS-232 digital interface upon request.

##### Interlock Signals:

A hardware interlock functions in digital programming modes.

##### Operating Temperature:

0°C to +40°C

##### Storage Temperature:

-40°C to +70°C

##### Humidity:

10% to 90% relative humidity, non-condensing

##### Cooling:

Heat exchanger w/fan and oil pump

## Input Line Connector:

Terminal block, Schurter, Inc. part no. 6100-33

## Digital Interface Connector:

9 pin D, female

## Analog Monitoring Connector:

10 pin Phoenix Contact 1755503

## Grounding Point:

8-32 ground stud provided on chassis

## Dimensions:

See line drawing

## Weight:

120lbs (54.4kg) maximum

## Orientation:

Can be mounted in any orientation.

## X-Ray Leakage:

Not to be greater than 0.5mR/hr at 5cm outside the external surface

## Regulatory Approvals:

Designed to be compliant to EEC EMC Directive and EEC Low Voltage Directive with an external filter.

## AC INPUT POWER TERMINAL BLOCK

PIN	SIGNAL	PARAMETERS
1	Line	Line
2	Line	Line
3	Line	Line
4	Neutral	Neutral
5	Neutral	Neutral
6	Neutral	Neutral

## RS-232 DIGITAL INTERFACE JB16 9 PIN FEMALE D CONNECTOR


PIN	SIGNAL	PARAMETERS
1	N/C	No Connection
2	TX	RS-232 Transmit
3	RX	RS-232 Receive
4	N/C	No Connection
5	SGND	Signal Ground
6	N/C	No Connection
7	N/C	No Connection
8	N/C	No Connection
9	N/C	No Connection

## ANALOG MONITORING— JB11 10 PIN PHOENIX CONTACT


PIN	SIGNAL	PARAMETERS
1	X-Ray Enable	+24Vdc = Enable X-Ray 0Vdc/Open = Disable X-Rays
2	RTN	Signal Return
3	N/C	No Connection
4	kV Monitor	0 to 10Vdc = 0 to 100kV, Zout = 10kΩ
5	SGND	Signal Return
6	mA Monitor	0 to 10Vdc = 0 to 5mA, Zout = 10kΩ
7	Fault	Open Collector, High (Open) = No Fault, 35Vdc @10mA max.
8	HV On Lamp, Relay N/O	Relay Normally Open, 50Vdc @ 1A maximum
9	HV On Lamp, Relay Common	Relay Common, 50Vdc @ 1A maximum
10	HV On Lamp, Relay N/C	Relay Normally Closed, 50Vdc @ 1A maximum

DIMENSIONS: in.[mm]


TOP VIEW

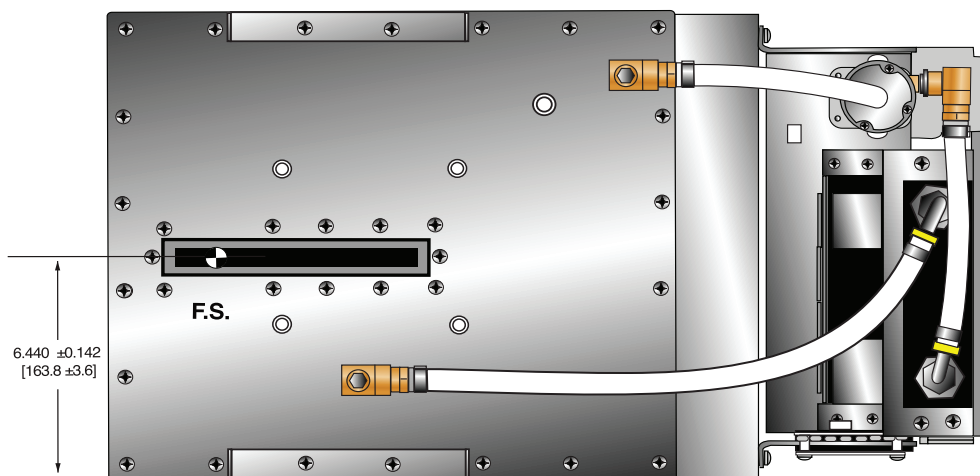


SIDE VIEW

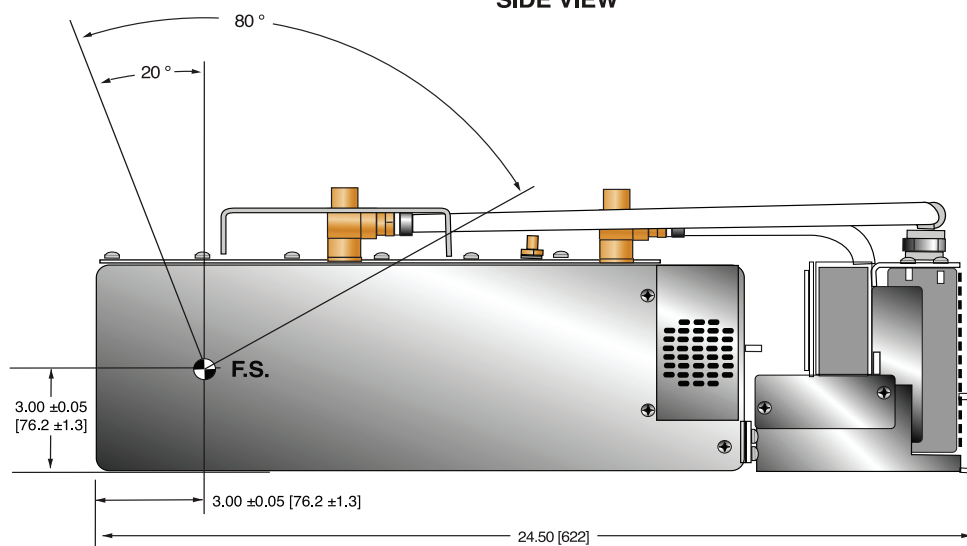

BACK VIEW

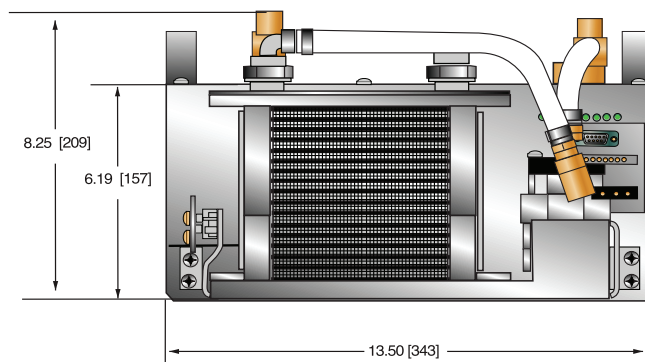



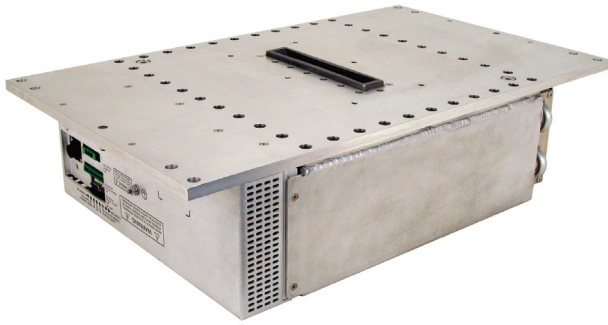

Spellman's XRB200PN400/CT Monoblock® X-Ray source is designed for OEM applications powering its internal X-Ray tube up to 200kV at 400W. Features like universal input, small package size, standard analog monitoring and RS-232 digital interface simplify integrating this unit into your X-Ray system. Standard models are available with fan shaped beam geometry. Proprietary emission control circuitry provides excellent regulation of X-Ray tube current, along with outstanding stability performance.

#### TYPICAL APPLICATIONS

X-Ray Scanning: Food Inspection,  
Fill Level Confirmation, Security Applications

#### SPECIFICATIONS

##### X-Ray Characteristics:

Tube Type: Glass tube, Tungsten target, Be filter  
Focal Spot: 0.8mm x 0.5mm (IEC336)  
Beam Filter: Glass 1.8mm, Oil 10mm, Al 1mm  
Beam Geometry: Symmetrical fan 85° x 10° ±1°

##### Input Voltage:

100Vac-240Vac ±10%, 50/60Hz, 6A maximum

##### X-Ray Tube Voltage:

Nominal X-Ray tube voltage is adjustable between  
100kV to 200kV

##### X-Ray Tube Current:

0.5mA to 2mA over specified tube voltage range

##### X-Ray Tube Power:

400W maximum continuous (350W average without  
external forced air)

##### Voltage Regulation:

Line: ±0.1% for a ±10% input line change  
Load: ±0.1% for a 0.5mA to 2mA load change

##### Voltage Accuracy:

Voltage measured across the X-Ray tube is within  
±1% of the programmed value

##### Voltage Risettime:

<1 second from 10% to 90% of rated output

- **Integrated HV Supply, Filament Supply, X-Ray Tube, Beam Port and Control Electronics**
- **Compact & Lightweight**
- **Universal Input, Power Factor Corrected**
- **Can be Mounted in Any Physical Orientation**
- **Analog Monitoring and Standard RS-232 Digital Interface**

##### Voltage Overshoot:

5% in less than 100ms

##### Voltage Ripple:

≤0.2% pp of rated maximum voltage

##### Current Regulation:

Line: ±0.1% @ 100-200kV, 0.25mA to 2mA  
Load: ±0.5% @ 100-200kV, 0.25mA to 2mA

##### Current Accuracy:

Current measured through the X-Ray tube is within  
±1% of the programmed value

##### Current Risettime:

<1 second from 10% to 90% of rated output

##### Arc Intervention:

4 arcs in 10 seconds = shutdown

##### Filament Configuration:

Internal high frequency AC filament drive with closed loop  
filament emission control

##### Digital Interface:

RS-232 interface.

##### Control Software:

A demo GUI for engineering evaluations will be provided  
for the RS-232 digital interface upon request.

##### Interlock Signals:

A hardware interlock function is provided

##### Operating Temperature:

0°C to +40°C

##### Storage Temperature:

-40°C to +70°C

##### Humidity:

5% to 95% relative humidity, non-condensing

##### Cooling:

Heat exchanger w/fan and oil pump, powered from 24Vdc, 2A  
power supply (customer provided). External forced air cooling  
if needed to keep oil temperature below 55°C

#### Input Line Connector:

3 pin Phoenix Contact 1829167

#### Analog Interface Connector:

10 pin Phoenix Contact 1755503

#### Digital Interface Connector:

9 pin D connector, female

#### Grounding Point:

M5 ground stud provided on chassis

#### Dimensions:

See drawing

#### Weight:

148.0lbs (67.0kg)

#### Orientation:

Can be mounted in any orientation.

#### X-Ray Leakage:

Not to be greater than 5uSv/hr at 5cm outside the external surface

#### AC INPUT POWER 3 PIN PHOENIX CONTACT

PIN	SIGNAL	PARAMETERS
1	Line	Line
2	GND	Ground
3	Neutral	Neutral

#### DC POWER FOR HEAT DISSIPATION UNIT 4 PIN AMP 206061-1 CONNECTOR

PIN	SIGNAL	PARAMETERS
1	+24	+24Vdc
2	RTN	Return
3	+24	+24Vdc
4	RTN	Return

#### ANALOG INTERFACE— 10 PIN PHOENIX CONTACT


PIN	SIGNAL	PARAMETERS
1	X-Ray	+24Vdc = enable X-Ray
2	X-Ray Return	X-Ray Return
3	N/C	N/C
4	kV Monitor Output	0 to 9Vdc = 0 to 100% Rated Voltage
5	SGND	Signal Ground
6	mA Monitor Output	0 to 9Vdc = 0 to 100% Rated Current
7	Fault	Open Collector, Open = No Fault
8	Relay N/O	HV On, 50V @ 1A maximum
9	Relay Common	HV On, 50V @ 1A maximum
10	Relay N/C	HV On, 50V @ 1A maximum

#### RS-232 DIGITAL INTERFACE— 9 PIN FEMALE D CONNECTOR

PIN	SIGNAL	PARAMETERS
1	N/C	No Connection
2	Transmit Data	Conforms to E/A RS-232-C
3	Receive Data	Conforms to E/A RS-232-C
4	N/C	No Connection
5	SGND	Signal Ground
6	N/C	No Connection
7	N/C	No Connection
8	N/C	No Connection
9	N/C	No Connection

DIMENSIONS: in.[mm]


FRONT VIEW

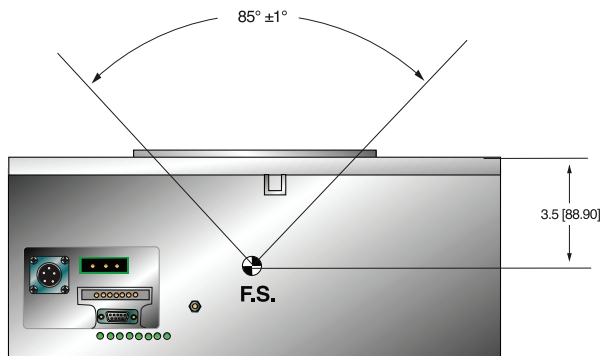


BACK VIEW




TOP VIEW

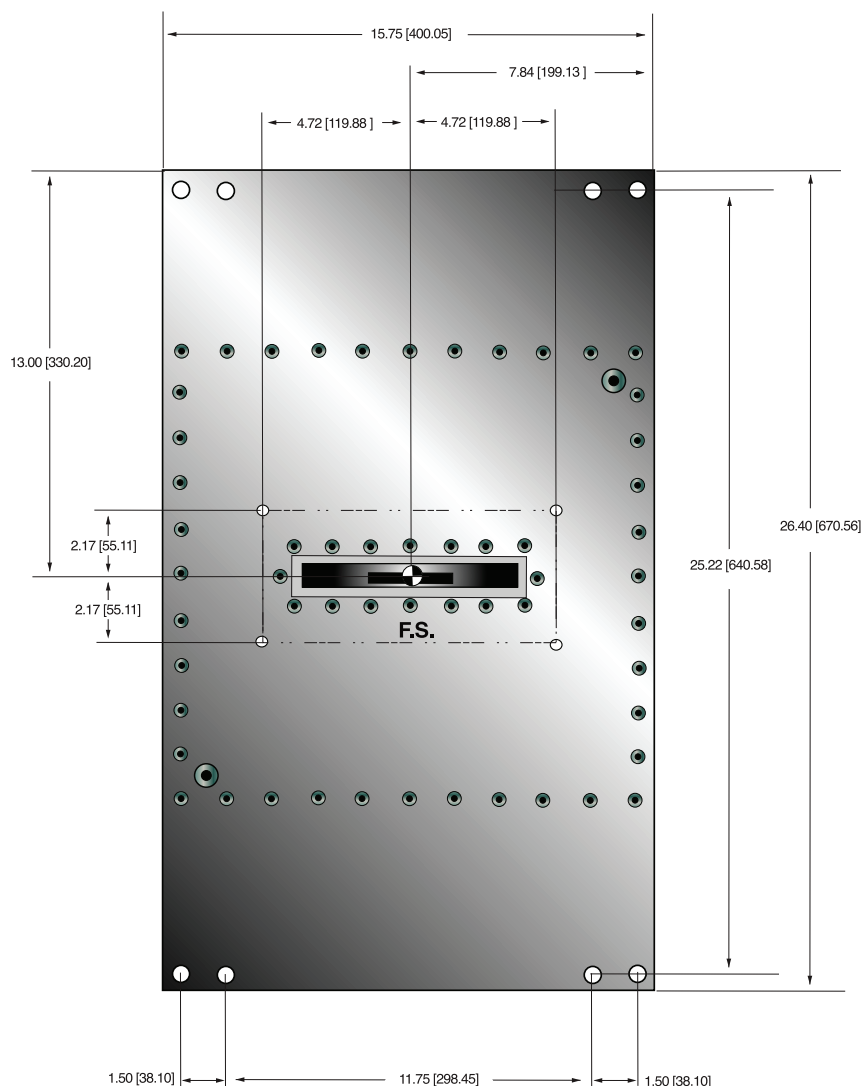

SIDE VIEW

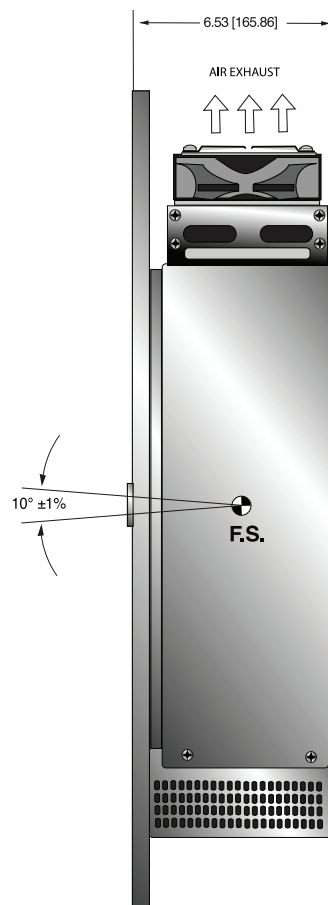

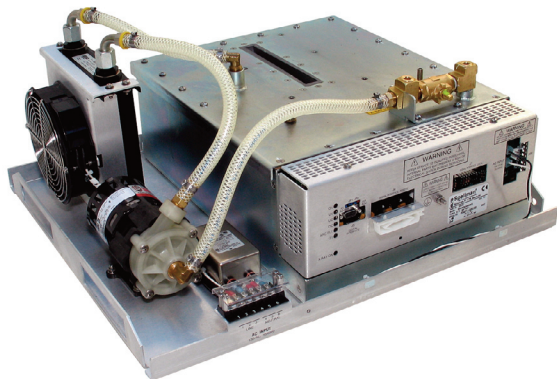

Spellman's XRB160PN480/1 Monoblock® X-Ray source is designed for OEM applications powering its internal X-Ray tube up to 160kV at 480W. Features like power factor correction, small package size, standard analog monitoring and RS-232 digital interface simplify integrating this Monoblock® into your X-Ray system. Standard models are available with fan shaped beam geometry. Proprietary emission control circuitry provides excellent regulation of X-Ray tube current, along with outstanding stability performance.

#### TYPICAL APPLICATIONS

X-Ray Scanning: Food Inspection, Fill Level Confirmation and Security Applications

#### SPECIFICATIONS

##### X-Ray Characteristics:

Tube Type: Glass tube, Tungsten target, Be filter  
Focal Spot: 0.8mm x 0.8mm (IEC336)  
Beam Filter: Curved 1mm Al  
Beam Geometry: Asymmetrical fan 80° x 10° ±2°

##### Input Voltage:

220Vac, ±10%, 50/60Hz, 6.5A max

##### X-Ray Tube Voltage:

Nominal X-Ray tube voltage is adjustable between 80kV to 160kV

##### X-Ray Tube Current:

0.25mA to 3mA over specified tube voltage range

##### X-Ray Tube Power:

480W maximum continuous

##### Voltage Regulation:

Line: ±0.1% for a ±10% input line change of nominal input line voltage  
Load: ±0.1% for a 0.25mA to 3mA load change

##### Voltage Accuracy:

Voltage measured across the X-Ray tube is within ±2% plus 1.785kV of the programmed value

- **Integrated HV Supply, Filament Supply, X-Ray Tube, Beam Port and Control Electronics**
- **Compact & Lightweight**
- **Power Factor Corrected with Internal EMI Filter**
- **Can be Mounted in Any Physical Orientation**
- **Analog Monitoring and Standard RS-232 Digital Interface**

##### Voltage Risettime:

Ramp time shall be ≤2 seconds from 10% to 90% of rated output

##### Voltage Overshoot:

±1% switching between 90kV to 160kV @ 0.25mA

##### Voltage Ripple:

≤0.1% of rated voltage from 10Hz to 1kHz

##### Current Regulation:

Line: ±0.5% @ 80-160kV, 0.25mA to 3mA

Load: ±0.5%, 0.25mA to 3mA

##### Current Accuracy:

Current measured through the X-Ray tube is within 2% of the programmed value

##### Current Risettime:

≤2 seconds from 10% to 90% of rated output

##### Arc Intervention:

4 arcs in 10 seconds = shutdown

##### Filament Configuration:

Internal high frequency AC filament drive with closed loop filament emission control

##### Analog Interface:

0 to 10Vdc ground referenced signals

##### Digital Interface:

RS-232 interface

##### Control Software:

A demo GUI for engineering evaluations will be provided for the RS-232 digital interface upon request.

##### Interlock Signals:

A hardware interlock function is provided

##### Operating Temperature:

0°C to +40°C

##### Storage Temperature:

-20°C to +70°C

##### Humidity:

5% to 95% relative humidity, non-condensing

**Cooling:**

Heat exchanger w/fan and oil pump,  
powered from AC

**Input Line Connector:**

6 position terminal block

**Analog Interface Connector:**

7 pin Molex 26-60-5070

**Digital Interface Connector:**

9 pin D connector, female

**Grounding Point:**

8-32 ground stud provided on chassis

**Dimensions:**

20" x 22.5" x 10.75" (508mm x 572mm x 273mm)

**Weight:**

125lbs (56.7kg)

**Orientation:**

Can be mounted in any orientation.

**X-Ray Leakage:**

Not to be greater than 0.5mR/hr at 5cm  
outside the external surface

**AC INPUT POWER  
J1 6 POSITION TERMINAL BLOCK**

PIN	SIGNAL	PARAMETERS
1	Line	Line
2	Removed	N/C
3	Neutral	Neutral
4	Removed	N/C
5	Spare	N/C
6	Spare	N/C

**ANALOG INTERFACE CONNECTOR—  
7 PIN MOLEX, 0.156 CENTER**

PIN	SIGNAL	PARAMETERS
1	X-Ray	+12Vdc @16mA = enable X-Ray
2	X-Ray Return	X-Ray Return
3	N/C	N/C
4	kV Monitor Output	0 to 1.6Vdc = 0 to 160kV
5	SGND	Signal Ground
6	mA Monitor Output	0 to 3Vdc = 0 to 3mA
7	Fault	Open Collector, Open = No Fault


**RS-232 DIGITAL INTERFACE—  
9 PIN FEMALE D CONNECTOR**

PIN	SIGNAL	PARAMETERS
1	N/C	No Connection
2	TX	Transmit Data
3	RX	Receive Data
4	N/C	No Connection
5	SGND	Signal Ground
6	N/C	No Connection
7	N/C	No Connection
8	X-Ray Enable	+12Vdc @ 16mA = Enable
9	N/C	No Connection





DIMENSIONS: in.[mm]

TOP VIEW

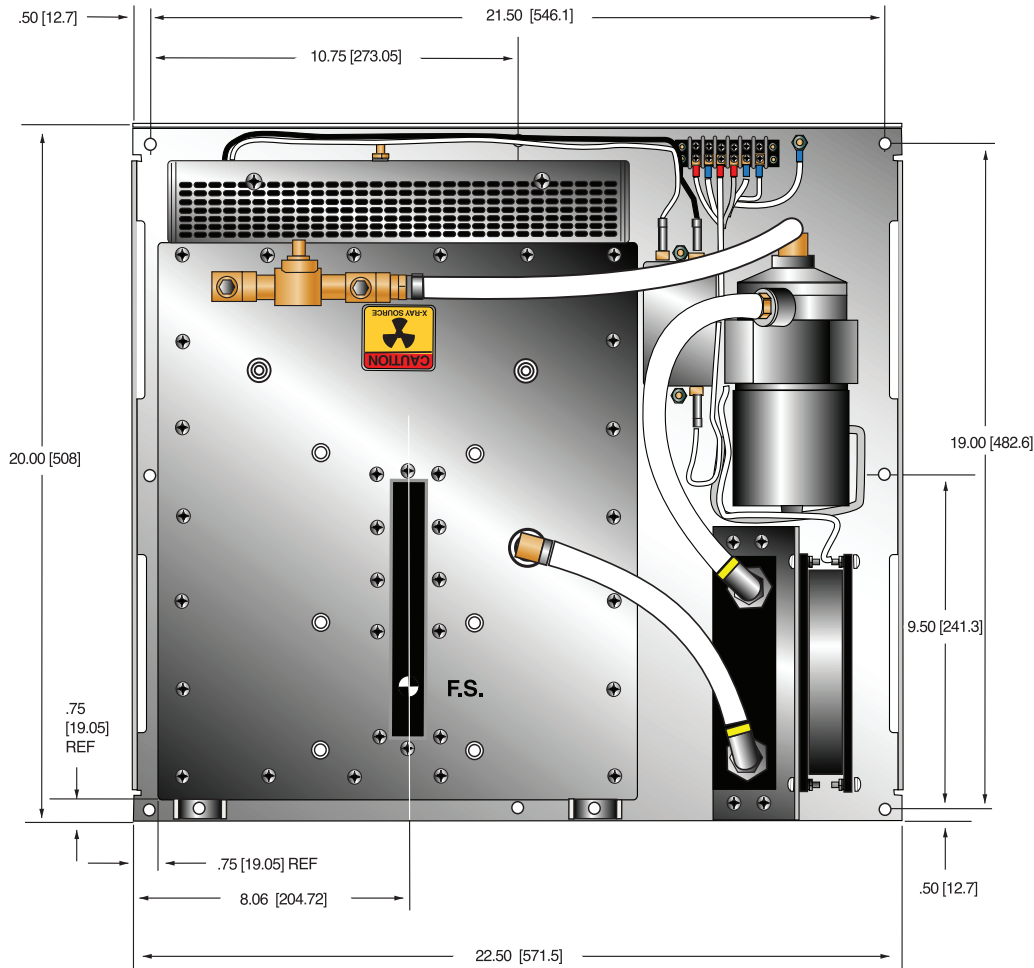

SIDE VIEW

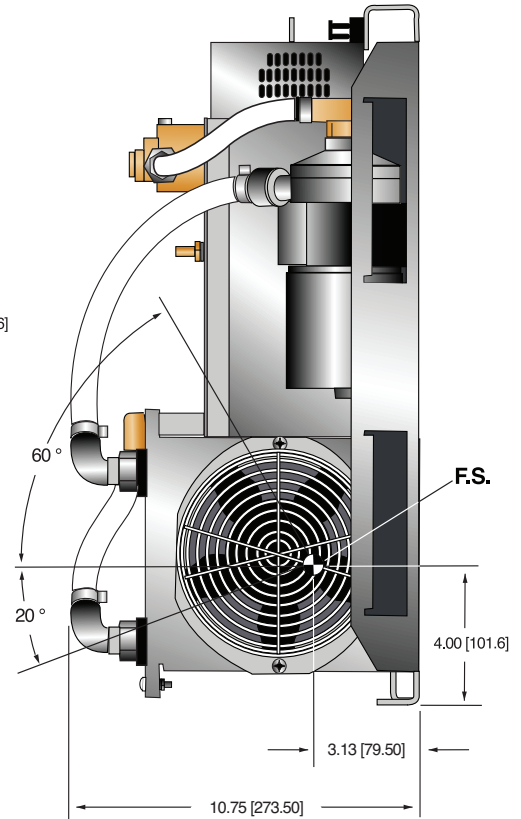

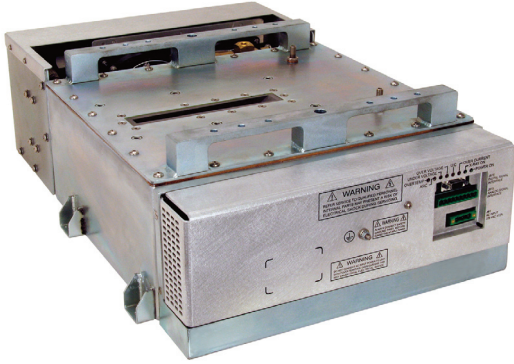

Spellman's XRB160PN480/2 Monoblock® X-Ray source is designed for OEM applications powering its internal X-Ray tube up to 160kV at 480W. Features like universal input, small package size and a standard analog and RS-232 digital interface simplify integrating this Monoblock® into your X-Ray system. Standard models are available with fan shaped beam geometry. Proprietary emission control circuitry provides excellent regulation of X-Ray tube current, along with outstanding stability performance.

#### TYPICAL APPLICATIONS

X-Ray Scanning: Food Inspection, Fill Level Confirmation and Security Applications

#### SPECIFICATIONS

##### X-Ray Characteristics:

Tube Type: Glass tube, Tungsten target, Be filter  
Focal Spot: 0.8mm x 0.8mm (IEC336)  
Beam Filter: 1mm curved window  
Beam Geometry: Asymmetrical fan 80° x 10° ±2°

##### Input Voltage:

100-240Vac ±10%, 50/60Hz, 6.5A max; 12Vdc @ 5A

##### X-Ray Tube Voltage:

Nominal X-Ray tube voltage is adjustable between 80kV to 160kV

##### X-Ray Tube Current:

0.25mA to 3mA over specified tube voltage range

##### X-Ray Tube Power:

480W maximum

##### Voltage Regulation:

Line: ±0.1% for a ±10% input line change of nominal input line voltage  
Load: ±0.1% for a 0.3mA to 3mA load change

##### Voltage Accuracy:

Voltage measured across the X-Ray tube is within ±1% of the programmed value

##### Voltage Risettime:

Ramp time shall be <1 second from 10% to 90% of rated output

- **Integrated HV Supply, Filament Supply, X-Ray Tube, Beam Port and Control Electronics**
- **Compact & Lightweight**
- **Universal Input, Power Factor Corrected**
- **Can be Mounted in Any Physical Orientation**
- **Analog Control Interface and Standard RS-232 Digital Interface**

##### Voltage Overshoot:

Within 5% of rated voltage in <10ms

##### Voltage Ripple:

0.1% pp of rated voltage @ ≤1kHz

##### Current Regulation:

Line: ±0.1% for a ±10% input line change of nominal input line voltage  
Load: ±0.5% @ 80-160kV, 0.3mA to 3mA

##### Current Accuracy:

Current measured through the X-Ray tube is within ±1% of the programmed value

##### Current Risettime:

<1 second from 10% to 90% of rated output

##### Arc Intervention:

4 arcs in 10 seconds with a 200ms quench = Shutdown

##### Filament Configuration:

Internal high frequency AC filament drive with closed loop filament emission control

##### Analog Interface:

0 to 10Vdc ground referenced signals

##### Digital Interface:

RS-232 interface.

##### Control Software:

A demo GUI for engineering evaluations will be provided for the RS-232 digital interface upon request.

##### Interlock Signals:

A hardware interlock functions in both analog and digital programming modes.

##### Operating Temperature:

0°C to +40°C

##### Storage Temperature:

-40°C to +70°C

##### Humidity:

95% relative humidity, non-condensing

##### Cooling:

Heat exchanger w/fan and oil pump, powered from DC input

#### Input Line Connector:

3 pin, Phoenix Contact 1829167

#### Analog Interface Connector:

10 pin, Phoenix Contact 1755503

#### Digital Interface Connector:

9 pin D connector, female

#### Heat Exchanger Power Connector:

4 pin AMP part no. 206061-1

#### Grounding Point:

8-32 ground stud provided on chassis

#### Dimensions:

See outline drawing

#### Weight:

125lbs (56.7kg)

#### Orientation:

Can be mounted in any orientation.

#### X-Ray Leakage:

Not to be greater than 0.5mR/hr at 5cm outside the external surface

#### AC INPUT POWER 3 PIN PHOENIX CONTACT

PIN	SIGNAL	PARAMETERS
1	Line	Line
2	GND	Ground
3	Neutral	Neutral

#### DC POWER FOR HEAT DISSIPATION UNIT 4 PIN AMP 206061-1 CONNECTOR

PIN	SIGNAL	PARAMETERS
1	+12	+12Vdc
2	RTN	Return
3	+12	+12Vdc
4	RTN	Return

#### ANALOG INTERFACE— JB15 10 PIN PHOENIX CONTACT

PIN	SIGNAL	PARAMETERS
1	X-Ray Signal	+24Vdc =Enable X-Ray, 0Vdc/open = Disable X-Ray, Zin=2.2kΩ
2	X-Ray Signal Return	Signal Return
3	N/C	N/C
4	kV Monitor	0-10Vdc = 0 to 178kV, Zout = 10kΩ
5	Signal Ground	Signal Ground
6	mA Monitor	0-10Vdc = 0 to 3.4mA, Zout = 10kΩ
7	Fault Signal	Open collector, High (Open) = No Fault, 35Vdc @10mA maximum
8	HV ON Lamp Relay n/o	Relay Normally Open, 50Vdc @ 1A maximum
9	HV ON Lamp Relay common	Relay Common, 50Vdc @ 1A maximum
10	HV ON Lamp Relay n/c	Relay Normally Closed ,50Vdc @ 1A maximum

#### LED INDICATORS


INDICATOR	SIGNAL NAME	CONDITION Illuminated When...
LED 1	OT	Over temperature occurs
LED 2	ARC FLT	Arc fault occurs
LED 3	UV	Low kV occurs
LED 4	OV	High kV occurs
LED 5	UC	Low mA occurs
LED 6	OC	High mA occurs
LED 7	X-RAY ON	X-Rays are enabled
LED 8	PWR	Power is ON

#### RS-232 DIGITAL INTERFACE— 9 PIN FEMALE D CONNECTOR


PIN	SIGNAL	PARAMETERS
1	N/C	No Connection
2	Transmit Data	Conforms to E/A RS-232-C
3	Receive Data	Conforms to E/A RS-232-C
4	N/C	No Connection
5	SGND	Signal Ground
6	N/C	No Connection
7	N/C	No Connection
8	N/C	No Connection
9	N/C	No Connection

DIMENSIONS: in.[mm]


FRONT VIEW

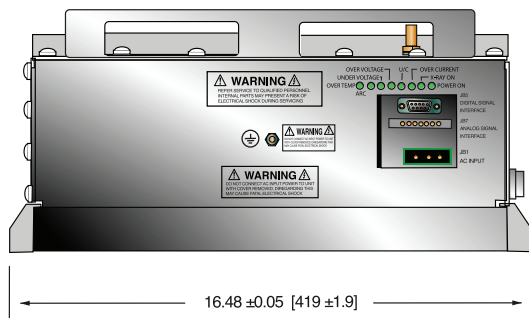


BACK VIEW

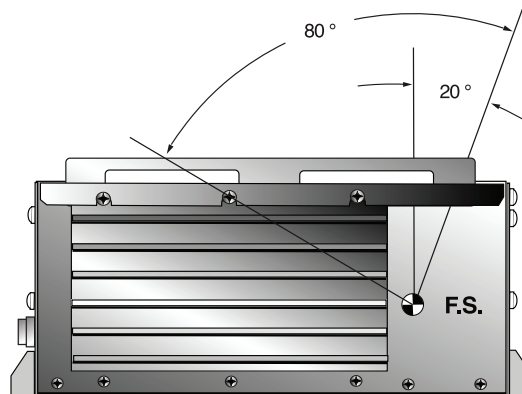

TOP VIEW

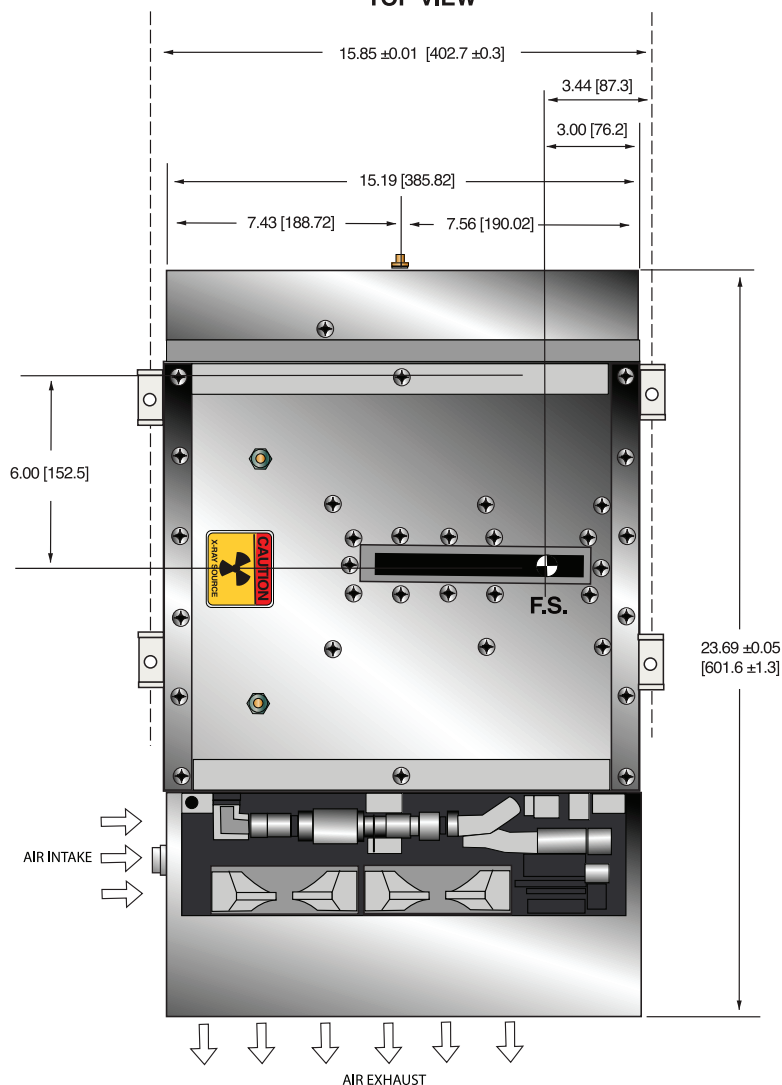

SIDE VIEW

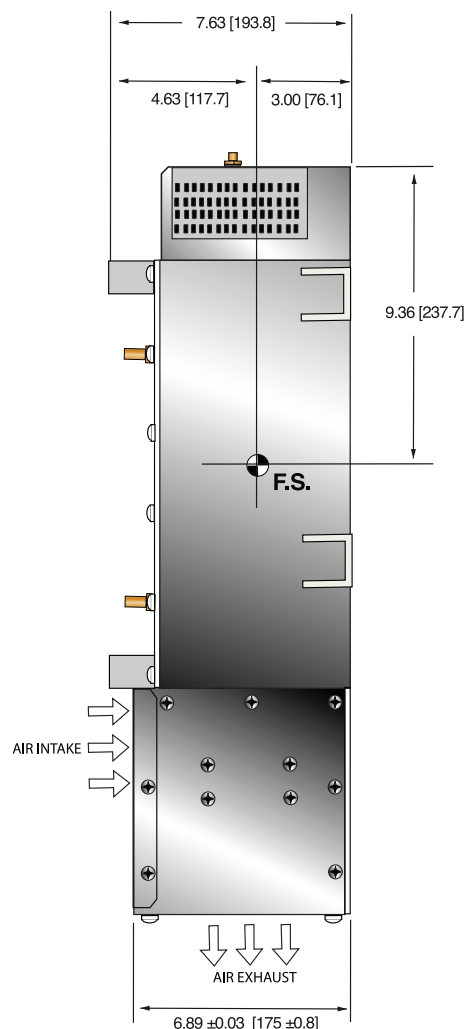



Spellman's XRB160PN480/CT Monoblock® X-Ray source is designed for OEM applications powering its internal X-Ray tube up to 160kV at 480W. Features like small package size and RS-232 digital interface simplify integrating this Monoblock® into your X-Ray system. Standard models are available with fan shaped beam geometry. Proprietary emission control circuitry provides excellent regulation of X-Ray tube current, along with outstanding stability performance.

### TYPICAL APPLICATIONS

X-Ray Scanning: Food Inspection, Fill Level Confirmation and Security Applications

### SPECIFICATIONS

#### X-Ray Characteristics:

Tube Type: Glass tube, Tungsten target, Be filter  
Focal Spot: 0.8mm x 0.8mm (IEC336)  
Beam Filter: 1.7mm of glass, 1mm of Al, and 10mm of oil  
Beam Geometry: Symmetrical fan 105° ±3° x 4° ±1°

#### Input Voltage:

Monoblock®: 100-240Vac ±10%, 50/60Hz, 6.5A max  
Heat Dissipation Unit: 24Vdc, 3A

#### X-Ray Tube Voltage:

Nominal X-Ray tube voltage is adjustable between 20kV to 160kV

#### X-Ray Tube Current:

0.3mA to 6mA over specified tube voltage range

#### X-Ray Tube Power:

320W continuous, 480W peak

#### Voltage Regulation:

Line: ±0.1% for a ±10% input line change of nominal input line voltage  
Load: ±0.1% for a 0.3mA to 6mA load change

- **Integrated HV Supply, Filament Supply, X-Ray Tube, Beam Port and Control Electronics**
- **Compact & Lightweight**
- **Can be Mounted in Any Physical Orientation**
- **Standard RS-232 Digital Interface**

#### Voltage Accuracy:

Voltage measured across the X-Ray tube is within ±1% of the programmed value

#### Voltage Risetime:

Ramp time shall be <1 second from 1% to 90% of rated output

#### Voltage Overshoot:

Within 5% of rated voltage

#### Voltage Ripple:

0.1% pp of rated voltage @ ≤1kHz

#### Current Regulation:

Line: ±0.5%  
Load: ±0.5%

#### Current Accuracy:

Current measured through the X-Ray tube is within ±1% of the programmed value

#### Current Risetime:

<1 second from 1% to 90% of rated output

#### Arc Intervention:

4 arcs in 10 seconds = Shutdown

#### Filament Configuration:

Internal high frequency AC filament drive with closed loop filament emission control

#### Digital Interface:

RS-232

#### Control Software:

A demo GUI for engineering evaluations will be provided for the RS-232 digital interface upon request.

#### Interlock Signals:

A hardware interlock functions in digital programming modes.

#### Operating Temperature:

0°C to +40°C

#### Storage Temperature:

-40°C to +70°C

#### Humidity:

5% to 90% relative humidity, non-condensing

#### Cooling:

Heat exchanger w/fan and oil pump, powered from customer provided 24Vdc @ 3A



**Input Line Connector:**

3 pin Phoenix Contact part no. 1829167

**Digital Interface Connector:**

9 pin D, female

**Analog Signal Connector:**

10 pin Phoenix Contact part no. 1755503

**Cooler Power Connector:**

4 pin AMP part no. 206061-1

**Grounding Point:**

8-32 ground stud provided on chassis

**Dimensions:**

24.00" x 16.00" x 6.50"  
(609.60mm x 406.40mm x 165.10mm)

**Weight:**

125lbs (49.5kg) ±10lbs (±4.5kg)

**Orientation:**

Can be mounted in any orientation.

**X-Ray Leakage:**

Not to be greater than 0.5mR/hr at 5cm  
outside the external surface

**Special Features:**

Stationary or rotating CT application up to 90rpm  
at a max. radius of 24.75" (629mm)

**AC INPUT POWER  
3 PIN PHOENIX CONTACT**

PIN	SIGNAL	PARAMETERS
1	Line	Line
2	GND	Ground
3	Neutral	Neutral

**ANALOG INTERFACE—  
10 PIN PHOENIX CONTACT**


PIN	SIGNAL	PARAMETERS
1	X-Ray	+24Vdc = enable X-Ray
2	X-Ray Return	X-Ray Return
3	N/C	No Connection
4	kV Monitor Output	0 to 9Vdc = 0 to 100% Rated Voltage
5	SGND	Signal Ground
6	mA Monitor Output	0 to 9Vdc = 0 to 100% Rated Current
7	Fault	Open Collector, Open = No Fault
8	Relay N/C	HV On, 50V @ 1A maximum
9	Relay Common	HV On, 50V @ 1A maximum
10	Relay N/O	HV On, 50V @ 1A maximum

**RS-232 DIGITAL INTERFACE—  
9 PIN FEMALE D CONNECTOR**


PIN	SIGNAL	PARAMETERS
1	N/C	No Connection
2	Transmit Data	Conforms to E/A RS-232-C
3	Receive Data	Conforms to E/A RS-232-C
4	N/C	No Connection
5	SGND	Signal Ground
6	N/C	No Connection
7	N/C	No Connection
8	N/C	No Connection
9	N/C	No Connection

DIMENSIONS: in.[mm]


FRONT VIEW

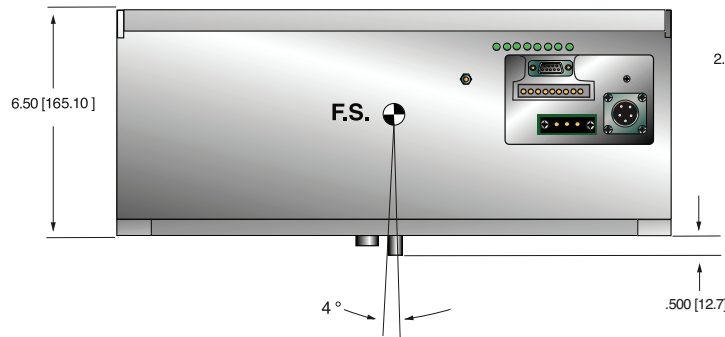


BACK VIEW

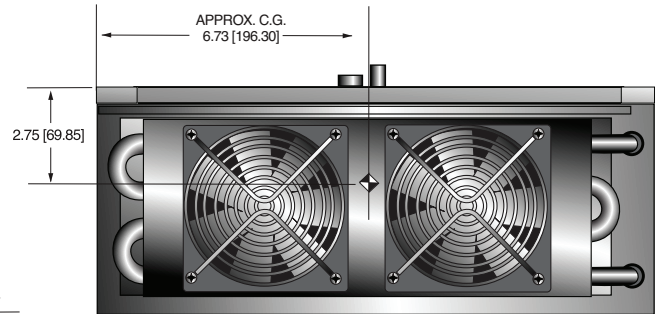


TOP VIEW

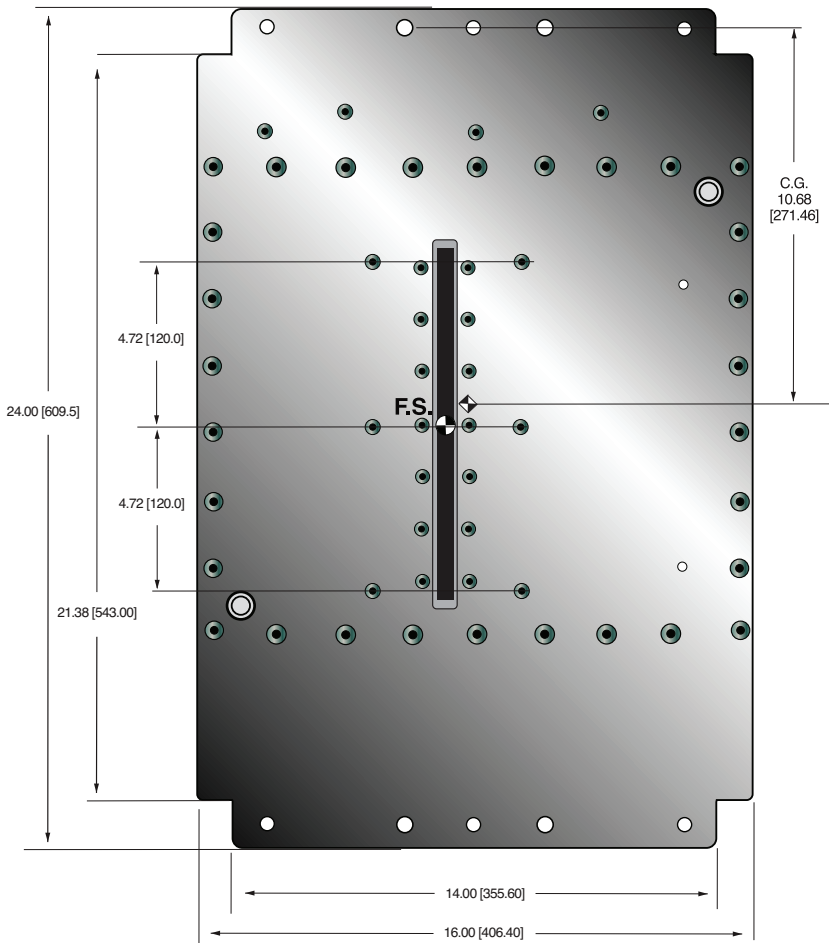

SIDE VIEW

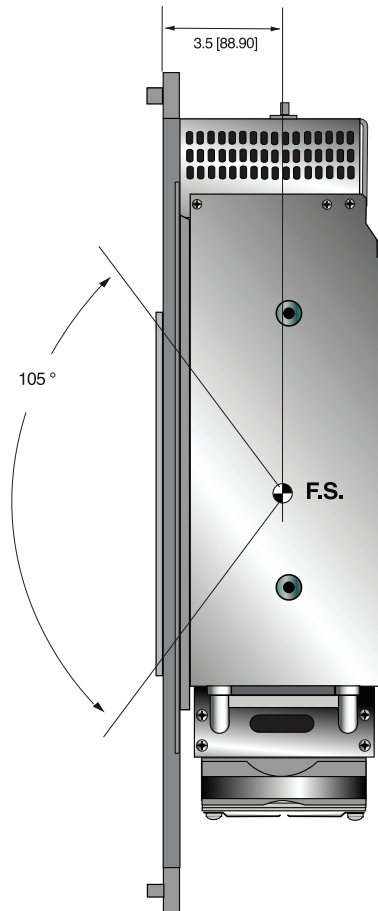

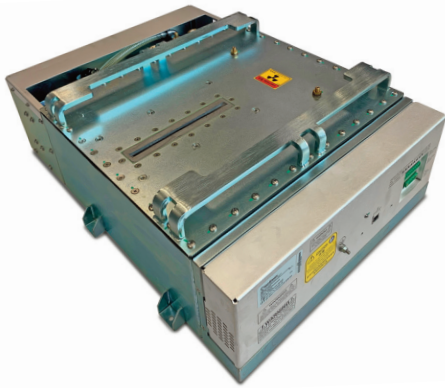

Spellman's XRB200PN500 is an integrated X-Ray source operating up to 200kV and 500W, providing OEM users a compact plug-and-play Monoblock® for critical inspection and screening applications. The unit incorporates a 15° angle stationary anode X-Ray tube offering a symmetrical fan beam of 85° X 4°. Proprietary emission control circuitry provides excellent regulation of X-Ray tube current, with industry leading dose stability and image quality. This compact model comes with standard analog and RS-232 digital control. Spellman can provide customized versions of this platform for specific OEM system requirements.

## TYPICAL APPLICATIONS

Aviation Security Screening: Checked Baggage/EDS  
Vehicle Inspection, Cargo Inspection, General NDT

## SPECIFICATIONS

### X-Ray Characteristics:

Tube Type:	Stationary Anode, tungsten target
Focal Spot:	0.8 x 0.5mm nominal (IEC60336)
Beam Filter:	Glass 2.1mm, maximum. Oil 18mm.
Beam Geometry:	Symmetrical fan of 85° X 4°, ±1%
Anode Angle:	15°

### Input Voltage:

Power factor corrected input to 0.98. 100Vac to 240Vac, ±10%, 50/60 Hertz. 6 Amps, maximum

### X-Ray Tube Voltage:

Nominal X-Ray tube voltage is adjustable between 100kV to 200kV

### Voltage Accuracy:

The high voltage measured at the X-ray tube will be within ±1% of the selected value.

### Voltage Ripple:

Ripple will be 1% of maximum rated voltage for frequencies ≤1kHz.

### Voltage Regulation:

< ±0.1% for ±10% of nominal input line change  
< ±0.1% for 0.5mA to 2.5mA load change

### Voltage Overshoot:

kV overshoot will return within 5% of full voltage in less than 100ms.

### Risetime:

The voltage and current risetime is controlled by a ramping circuit. Ramp time is less than 1.0 second from 10% to 90% of output voltage and current.

- **200kV and 500W**
- **X-Ray Tube Current: 0.5mA to 2.5mA @ 200kV**
- **Focal Spot 0.8 x 0.5mm Nominal (IEC60336)**
- **Symmetrical Fan Beam of 85° X 4°, ±1%**
- **Power Factor Corrected Input to 0.98**
- **100Vac to 240Vac, ±10%**
- **Logging and Firmware Controlled X-Ray Tube Seasoning**

### X-Ray Tube Current:

0.5mA to 2.5mA @ 200kV <±1% of the selected value.  
500 watts maximum

### Current Regulation:

<0.5% at 100 - 200 kV, 0.5mA to 2.5mA

### Arc Intervention:

Unit will detect a single arc but HV will not shut down. If multiple arcs occur (4 in 10 seconds) then the unit will shut down.

### Filament Configuration:

Isolated high frequency AC filament drive operated in current mode with closed loop thermionic filament emission control.

### Digital Interface:

The RS-232 and Ethernet interfaces allow for programming of the voltage, current and X-Ray Enable. Provides monitoring for voltage, current and oil temperature. Tolerance is 3%.

### Control Software:

A demo GUI is available for engineering evaluation.

### Operating Temperature:

0°C to +40°C

### Storage Temperature:

-40°C to +70°C

### Humidity:

10% to 95% relative humidity, non-condensing.

### Cooling:

Heat exchanger with fan and oil pump. Customer provided +24Vdc @ 3A is required. In certain situations, external cooling fans of 250CFM may be required to maintain tank/oil temperature below 55°C.

### Input Line Connector:

3 pin Phoenix Contact, p/n 1829167.  
Mating connector provided with unit.

### Analog Interface Connector:

10 pin Phoenix Contact, p/n 1755503.  
Mating connector provided with unit.

### RS-232 Connector:

9 pin female D connector. Mating connector provided with unit.

### Ethernet Connector:

8 pin RJ45 connector.

### Heat Dissipation Unit Connector:

4 pin AMP connector, TE Connectivity (206061-1)  
Mating connector provided with unit.

## Grounding Point:

M4 grounding stud provided on chassis.

## Dimensions:

See outline drawing.

## Weight:

181 pounds (80kg).

## Orientation:

Can be mounted in any orientation.

## X-Ray Leakage:

Not to be greater than .5mR/hr at 5cm from any surface of the Monoblock® when measured at 200kV @ 2.5mA.

## Regulatory Approvals:

Compliant to EEC Low Voltage Directive. Designed to meet EEC EMC Directive with customer provided external line filter, Corcom p/n 6EU1F or equivalent.

## AC INPUT POWER 3 PIN PHOENIX CONTACT P/N 1829167

PIN	SIGNAL	PARAMETERS
1	Line	100-240Vac, ±10%, 50/60 Hertz @ 6 amps
2	GND	Ground
3	Neutral	100-240Vac, ±10%, 50/60 Hertz @ 6 amps

## DC POWER FOR HEAT DISSIPATION UNIT 4 PIN AMP 206061-1 CONNECTOR

PIN	SIGNAL	PARAMETERS
1	+24Vdc	+24Vdc @ 3A*
2	24Vdc Return	Return
3	+24Vdc	+24Vdc @ 3A*
4	24Vdc Return	Return

\*Both +24V supplies are required for pump and fans

## RS-232 DIGITAL INTERFACE— 9 PIN MALE D CONNECTOR

PIN	SIGNAL	PARAMETERS
1	N/C	No Connection
2	Transmit Data	Conforms to EAI RS-232-C
3	Receive Data	Conforms to EAI RS-232-C
4	N/C	No Connection
5	SGND	Signal Ground
6	N/C	No Connection
7	N/C	No Connection
8	N/C	No Connection
9	N/C	No Connection

## ETHERNET INTERFACE— 8 PIN FEMALE RJ45 CONNECTOR

PIN	SIGNAL	PARAMETERS
1	TX+	Transmit Data +
2	TX-	Transmit Data -
3	RX+	Receive Data +
4	N/C	No Connection
5	N/C	No Connection
6	RX-	Receive Data -
7	N/C	No Connection
8	N/C	No Connection

## ANALOG INTERFACE— 10 PIN PHOENIX CONTACT P/N 1755503

PIN	SIGNAL	PARAMETERS
1	X-Ray On	+24Vdc = Enable X-Ray, Low or open = Disable X-Ray
2	X-Ray On Return	X-Ray on Return
3	N/C	No Connection
4	kV Monitor	0 to 10Vdc = 0 to 200kV, Zout = 10kΩ
5	SGND	Signal Ground
6	mA Monitor	0 to 10Vdc = 0 to 2.5mA, Zout = 10kΩ
7	Fault	Open Collector, High (Open) = No Fault, 35Vdc @ 10mA, maximum
8	HV On Lamp N/O	Relay dry contact, normally open, 30Vdc @ <1A, nominal 50mA DC load
9	HV On Lamp Common	Relay dry contact, common, 30Vdc @ <1A, nominal 50mA DC load
10	HV On Lamp N/C	Relay dry contact, normally closed, 30Vdc @ <1A, nominal 50mA DC load

## FRONT PANEL LED INDICATORS

INDICATOR	SIGNAL NAME	CONDITION Illuminated When...	LED COLOR
LED 1	OT	OverTemperature occurs	Red
LED 2	ARC	Arc fault occurs	Red
LED 3	UV	Low kV occurs	Red
LED 4	OV	High kV occurs	Red
LED 5	UC	Low mA occurs	Red
LED 6	OC	High mA occurs	Red
LED 7	X-RAY ON	X-Rays are enabled	Green
LED 8	PWR ON	Power is ON	Green

## SMART XRB

The XRB200PN500 features data logging and firmware controlled seasoning.

### Data Logging:

Think of this as an "airplane black box". The data logging captures data on fault events and non-fault events. Fault events will turn off the high voltage.

### FAULT EVENTS

Temperature, Arc, High Current, High Voltage, Low Voltage, Watchdog, Power Fault, Interlock

The XRB200PN500 stores data 620ms before the event, the event itself and for 620ms after the event. Data is recorded every 20ms (62 samples total) showing: Anode kV, Cathode kV, Total kV, Total mA, Filament, Temperature

We also log non-fault events, these are changes in set points or state of the unit.

### NON FAULT EVENTS

HV On, HV Off, kV Set point, mA Set point, Low Current, Filament Limit Set point, Pre Heat Set point, Line Dip


Fault event data is actual graphical data. Non fault event data is just stored as event type, data and timestamp. We also have a preventative maintenance fault, which throws a non-shutdown fault if the X-Ray tube has been factory installed over 4 years ago or if over 15,000 hours of HV ON is logged.

### Firmware Controlled Seasoning:


Every unit comes with an initial seasoning table, or customers can set their own. The XRB200PN500 knows when the unit has been on, when it has been off, hours on the X-Ray tube, etc. As a preventative maintenance feature upon turn on, we review the data and suggest that a particular seasoning protocol be run based upon the actual usage history of the unit. Proper seasoning compliance of the X-Ray tube will help get the longest lifetime.

DIMENSIONS: in.[mm]


**TOP VIEW**

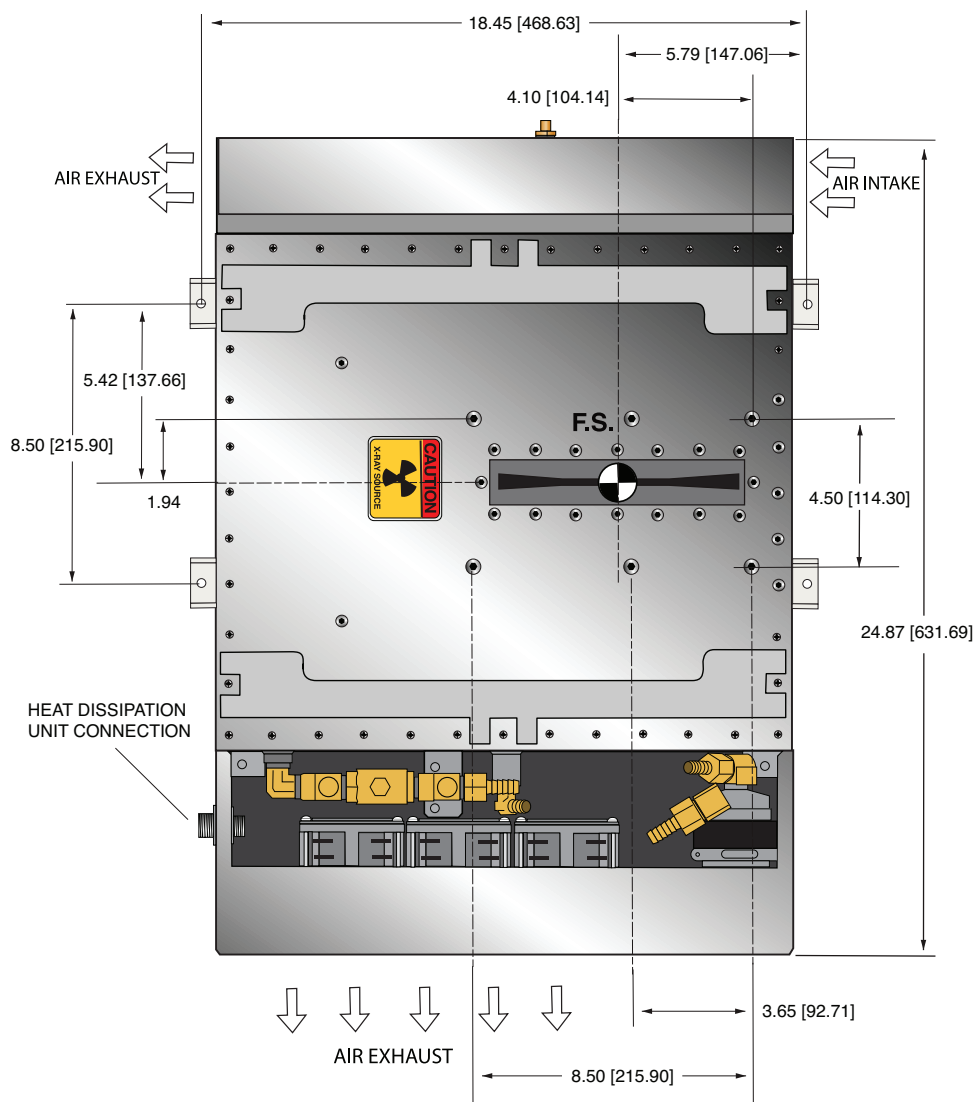


### SIDE VIEW

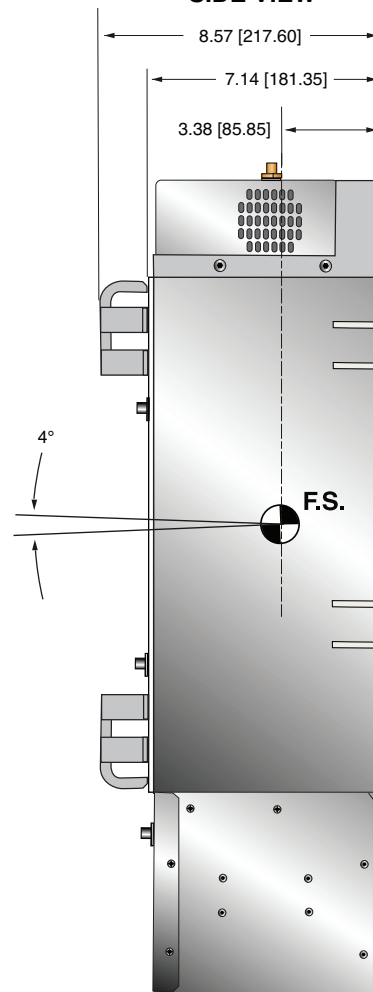

**FRONT VIEW**

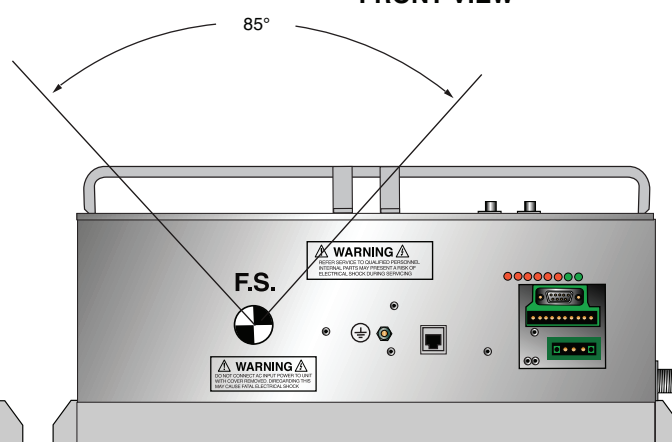

### BACK VIEW

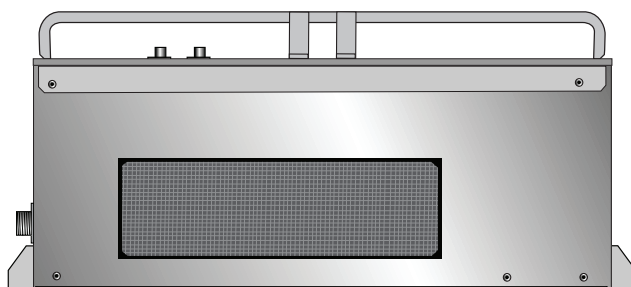





- **Integrated HV Supply, Filament Supply, X-Ray Tube, Beam Port and Control Electronics**
- **Compact & Lightweight**
- **Power Factor Corrected**
- **Can be Mounted in Any Physical Orientation**
- **Analog Monitoring and Standard RS-232 Digital Interface**

Spellman's XRB150PN600 Monoblock® X-Ray source is designed for OEM applications powering its internal X-Ray tube up to 150kV at 600W. Features like power factor correction, small package size and a standard analog and RS-232 digital interface simplify integrating this unit into your X-Ray system. Standard models are available with cone shaped beam geometry. Proprietary emission control circuitry provides excellent regulation of X-Ray tube current, along with outstanding stability performance.

## TYPICAL APPLICATIONS

X-Ray Scanning: Bone Densitometry,  
Food Inspection, Security

## SPECIFICATIONS

### X-Ray Characteristics:

Tube Type: Glass tube, Tungsten target, Be filter  
Focal Spot: 0.5mm x 0.5mm (IEC 336)  
Beam Filter: 0.06" Utem  
Beam Geometry: Cone, 18° ±1°

### Input Voltage:

200-240Vac ±10%, 50/60Hz, 6.5A maximum

### X-Ray Tube Voltage:

Nominal X-Ray tube voltage is adjustable between  
70kV to 150kV

### X-Ray Tube Current:

1.0mA to 4.0mA over specified tube voltage range

### X-Ray Tube Power:

160W continuous, 600W peak  
Duty Cycle: 30 seconds on, 300 seconds off  
@ 600W peak

### Voltage Regulation:

Line: ±0.1% for a ±10% input line change of  
180 to 264Vac  
Load: ±0.1% for a 1.0mA to 4.0mA load change.  
600W maximum

### Voltage Accuracy:

Voltage measured across the X-Ray tube is within  
±2% of the programmed value

### Voltage Risettime:

±1% in less than 300ms

### Voltage Overshoot:

±10% during 300ms risetime

### Voltage Ripple:

1% rms of rated voltage @ 10Hz to 1MHz

### Current Regulation:

Line: ±0.1% from 180-264Vac  
Load: ±0.5% @ 70kV-150kV, 1.0mA to 4.0mA

### Current Accuracy:

Current measured through the X-Ray tube is within  
±2% of the programmed value

### Current Risettime:

±1% in less than 300ms

### Arc Intervention:

4 arcs in 10 seconds with a 200ms quench = Shutdown

### Filament Configuration:

Internal high frequency AC filament drive with closed loop  
filament emission control

### Analog Interface:

0 to 5Vdc ground referenced signals

### Digital Interface:

RS-232 interface.

### Control Software:

A demo GUI for engineering evaluations will be provided  
for the RS-232 digital interface upon request.

### Interlock/Signals:

A hardware interlock function is provided

### Operating Temperature:

0°C to +40°C

### Storage Temperature:

-40°C to +70°C

### Humidity:

10% to 95% relative humidity, non-condensing

### Cooling:

External fan required. 250cfm minimum to maintain  
an oil temperature of 55° C

## Input Line Connector:

3 pin Phoenix Contact P/N 1829167

## Analog Interface Connector:

10 pin Phoenix Contact P/N 1755503

## Digital Interface Connector:

9 pin D connector, female

## Grounding Point:

8-32 ground stud provided on chassis

## Dimensions:

13.46" x 13.38" x 6.24"

(341.89mm x 339.85mm x 158.50mm)

## Weight:

66lbs (30kg)

## Orientation:

Can be mounted in any orientation.

## X-Ray Leakage:

Less than 100mR/hr at 1m distance,  
measured at 140kV, 3mA

## AC INPUT POWER JB1 3 PIN PHOENIX CONTACT

PIN	SIGNAL	PARAMETERS
1	Line	Line
2	GND	Chassis Ground
3	Neutral	Neutral

## RS-232 DIGITAL INTERFACE— JB16 9 PIN FEMALE D CONNECTOR

PIN	SIGNAL	PARAMETERS
1	Spare	N/C
2	Transmit	RS-232
3	Receive	RS-232
4	Spare	N/C
5	Signal Ground	Ground
6	Spare	N/C
7	Spare	N/C
8	Spare	N/C
9	Spare	N/C

## ANALOG INTERFACE— JB15 10 PIN PHOENIX CONTACT


PIN	SIGNAL	PARAMETERS
1	X-Ray Signal	+12Vdc =Enable X-Ray, 0Vdc/open = Disable X-Ray, Zin=1kΩ
2	X-Ray Signal Return	Signal Return
3	N/C	N/C
4	kV Monitor	0 to 5Vdc = 0 to 175kV, Zout= 10kΩ
5	Signal Ground	Signal Ground
6	mA Monitor	0 to 5Vdc = 0 to 4.5mA, Zout= 10kΩ
7	Fault Signal	Open collector, High (Open) = No Fault, 35Vdc @10mA maximum
8	HV ON Lamp Relay n/o	Relay Normally Open, 50Vdc @ 1A maximum
9	HV ON Lamp Relay common	Relay Common, 50Vdc @ 1A maximum
10	HV ON Lamp Relay n/c	Relay Normally Closed, 50Vdc @ 1A maximum

## LED INDICATORS


INDICATOR	SIGNAL NAME	CONDITION Illuminated When...
LED 1	OT	Over temperature occurs
LED 2	ARC FLT	Arc fault occurs
LED 3	UV	Low kV occurs
LED 4	OV	High kV occurs
LED 5	UC	Low mA occurs
LED 6	OC	High mA occurs
LED 7	X-RAY ON	X-Rays are enabled
LED 8	PWR	Power is ON

DIMENSIONS: in.[mm]


FRONT VIEW TANK

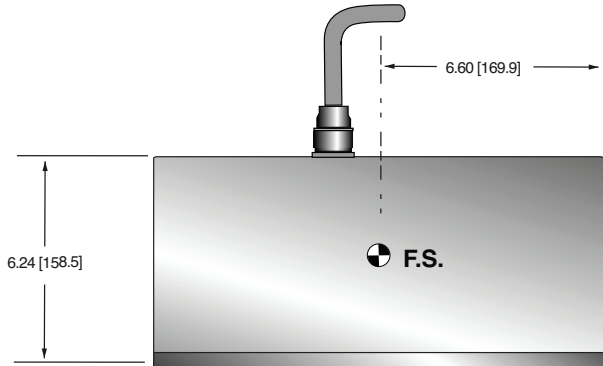

FRONT VIEW CONTROL ASSEMBLY

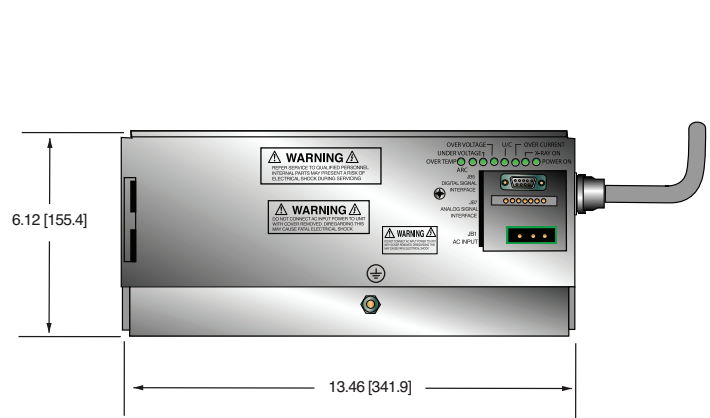


SIDE VIEW TANK

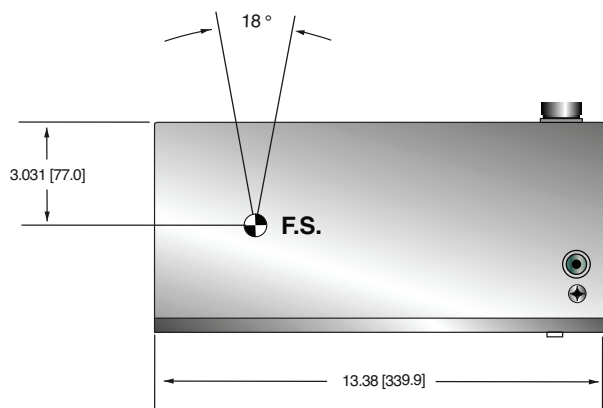


SIDE VIEW CONTROL ASSEMBLY

AIR EXHAUST

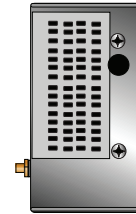



TOP VIEW TANK

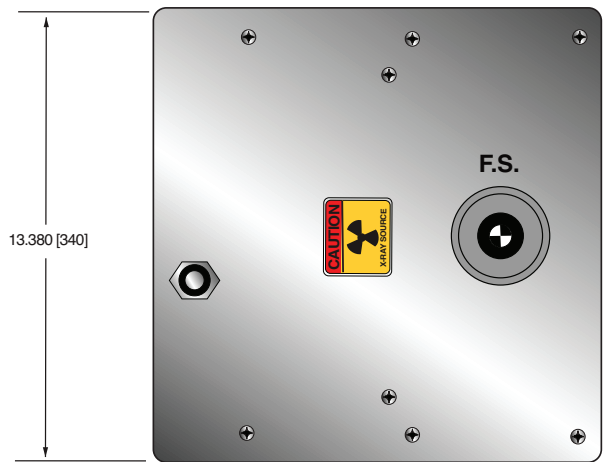

SIDE VIEW CONTROL ASSEMBLY

AIR INTAKE

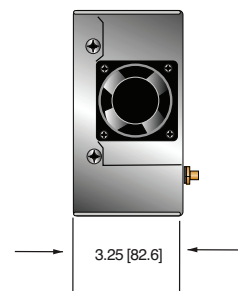

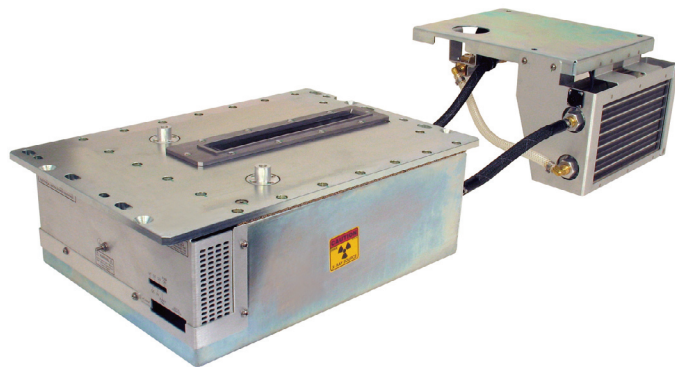

- **Integrated HV Supply, Filament Supply, X-Ray Tube, Beam Port and Control Electronics**
- **Compact & Lightweight**
- **Power Factor Corrected**
- **Can be Mounted in Any Physical Orientation**
- **Standard RS-232 Digital Interface**

Spellman's XRB160PN688/CT Monoblock® X-Ray source is designed for OEM applications powering its internal X-Ray tube up to 160kV at 688W. Features like small package size and RS-232 digital interface simplify integrating this unit into your X-Ray system. Proprietary emission control circuitry provides excellent regulation of X-Ray tube current, along with outstanding stability performance.

#### TYPICAL APPLICATIONS

X-Ray Scanning: Food Inspection, Fill Level Confirmation and Security Applications

#### SPECIFICATIONS

##### X-Ray Characteristics:

Tube Type: Glass tube, Tungsten target, Be filter  
Focal Spot: 2.5mm x 2.5mm (IEC 60336)  
Beam Filter: 1.5mm glass, 9-26mm oil, 0.4mm Al  
Beam Geometry: Asymmetrical fan 93° x 15° ±2°

##### Input Voltage:

230Vac, ±15%, 50/60Hz, 5A max

##### X-Ray Tube Voltage:

Nominal X-Ray tube voltage is adjustable between 50kV to 160kV

##### X-Ray Tube Current:

0.25mA to 4.3mA over specified tube voltage range

##### X-Ray Tube Power:

688W maximum continuous

##### Voltage Regulation:

Line: ±0.1% ±10%  
Load: ±0.1% 0.25 to 4.3mA

##### Voltage Accuracy:

Voltage measured across the X-Ray tube is within 1% of the programmed value

##### Voltage Risetime:

Ramp time shall be 500ms nominal, 1 second maximum from 10% to 90% of rated output

##### Voltage Overshoot:

Within 5% of rated voltage

##### Voltage Ripple:

1% p-p of rated voltage

##### Current Regulation:

Line: ±0.5% ±10%  
Load: ±0.5% 0.25 to 4.3mA

##### Current Accuracy:

Current measured through the X-Ray tube is within 5% of the programmed value

##### Current Risetime:

500ms nominal, 1 second maximum

##### Arc Intervention:

4 arcs in 10 seconds = shutdown

##### Filament Configuration:

Internal high frequency AC filament drive with closed loop filament emission control

##### Digital Interface:

RS-232 interface.

##### Control Software:

A demo GUI for engineering evaluations will be provided for the RS-232 digital interface upon request.

##### Interlock Signals:

A hardware interlock function is provided

##### Operating Temperature:

5°C to +40°C

##### Storage Temperature:

-25°C to +65°C

##### Humidity:

10% to 90% relative humidity, non-condensing

##### Cooling:

Heat exchanger w/fan and oil pump, powered from AC

**Input Line Connector:**

5 pin Molex 26-60-4050

**Heat Exchanger Power Connector:**

4 pin AMP part no. 206061-1

**Digital Interface Connector:**

9 pin D connector, female

**Grounding Point:**

M5 ground stud provided on chassis

**Dimensions:**

See drawing

**Weight:**

140lbs ±10lbs (64kg ±4.5kg)

**Orientation:**

Can be mounted in any orientation.

**X-Ray Leakage:**Less than 300uR/hr at a distance of  
10cm from all surfaces**Special Features:**Stationary or rotating CT application up to 100rpm  
at a maximum radius 20.25" (514mm)**AC INPUT POWER****J1 5 PIN MOLEX 26-60-4050 CONNECTOR**

PIN	SIGNAL	PARAMETERS
1	Line	230Vac Input
2	Line	230Vac Input
3	N/C	No Connection
4	Neutral	230Vac Neutral
5	Neutral	230Vac Neutral

**AC POWER FOR HEAT DISSIPATION UNIT****4 PIN AMP 206061-1 CONNECTOR**

PIN	SIGNAL	PARAMETERS
1	Line	230Vac Input
2	N/C	No Connection
3	Neutral	230Vac Neutral
4	GND	Chassis Ground


**RS-232 DIGITAL INTERFACE—****J5 9 PIN FEMALE D CONNECTOR**

PIN	SIGNAL	PARAMETERS
1	N/C	No Connection
2	TX	Transmit Data
3	RX	Receive Data
4	N/C	No Connection
5	SGND	Signal Ground
6	N/C	No Connection
7	N/C	No Connection
8	N/C	No Connection
9	N/C	No Connection




DIMENSIONS: in.[mm]


TOP VIEW

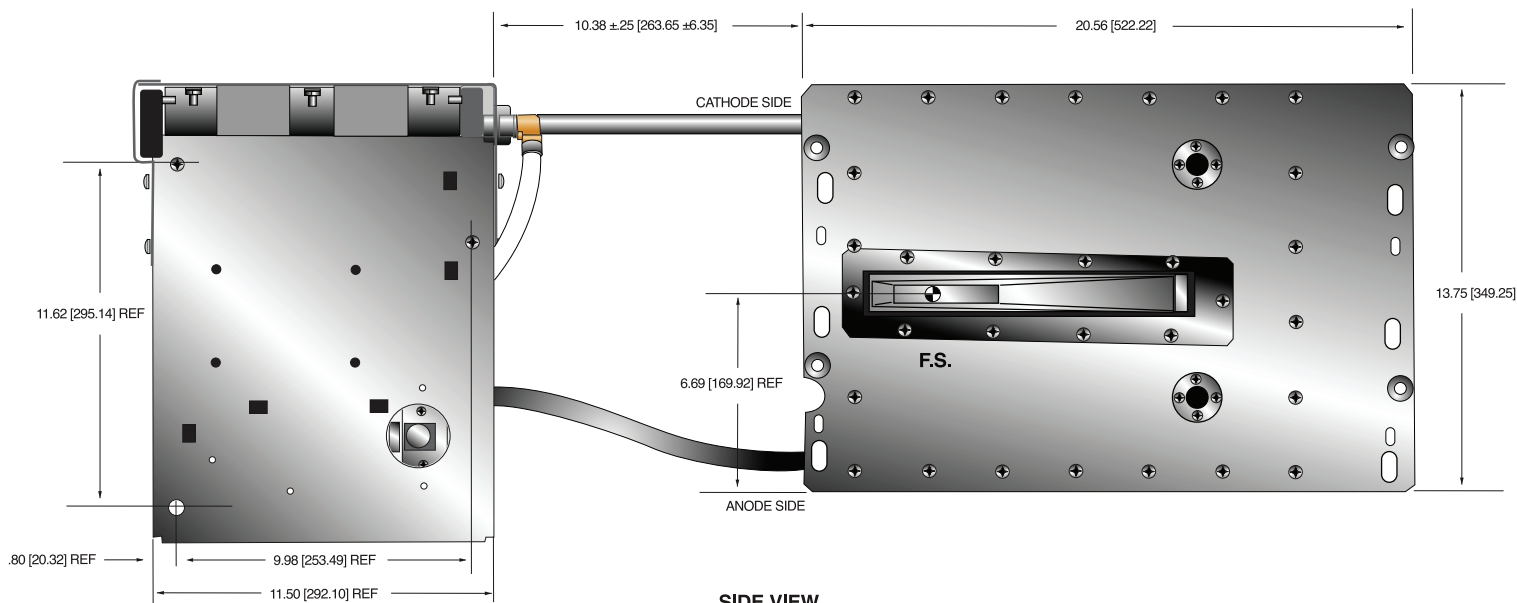

SIDE VIEW

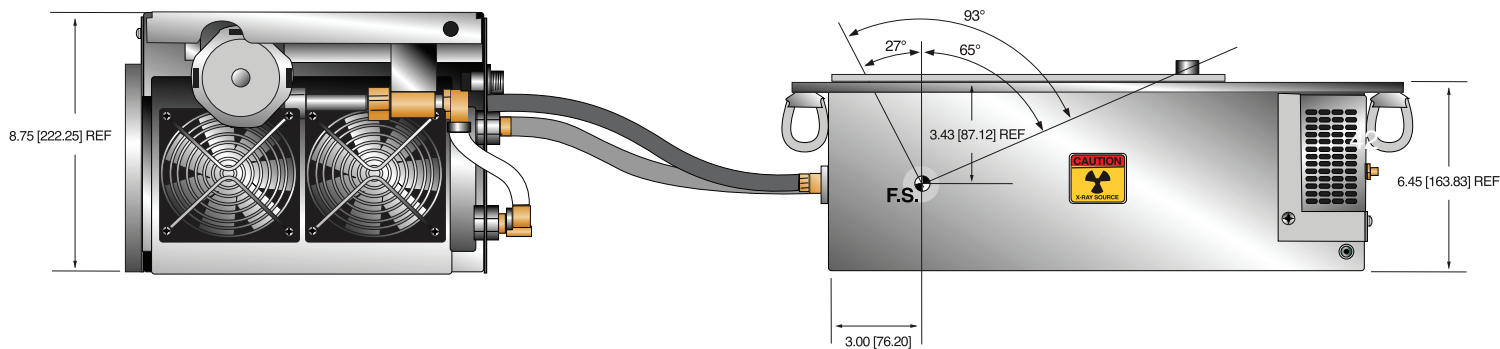

BOTTOM VIEW

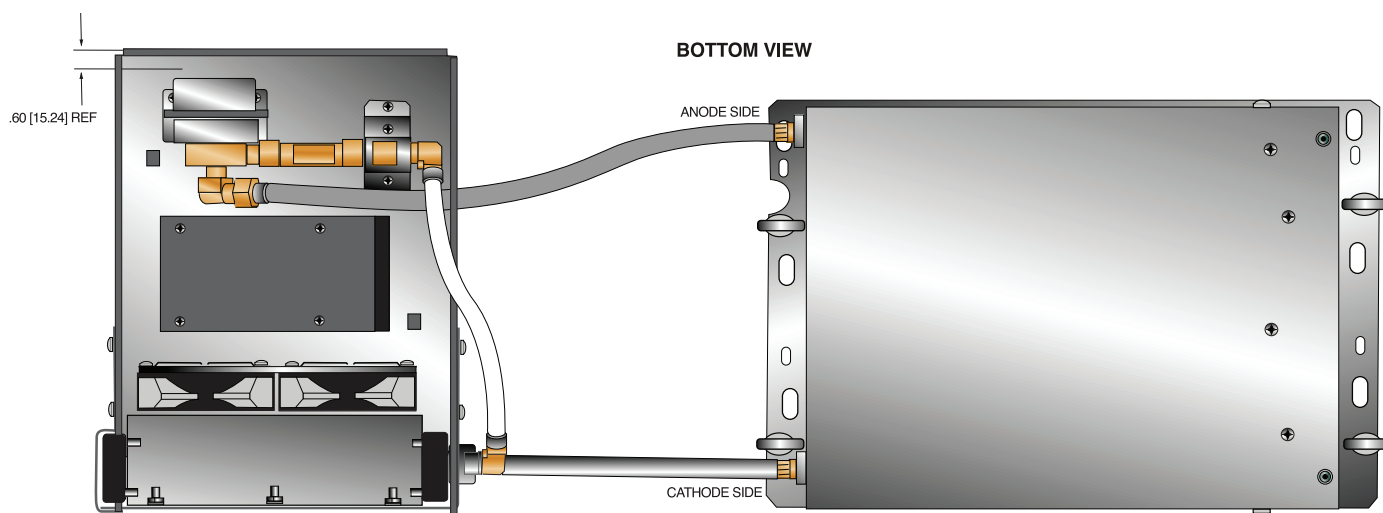



Spellman's new Panoramic Dental Monoblock® consists of an integrated X-Ray tube, dual-output high voltage power supply, and filament supply with control circuitry. The PDM90PN900 is designed for extra oral dental X-Ray applications including CT and Panoramic X-Ray. Features like small package size, standard analog and RS-232 digital interface simplify integrating this Monoblock® into your X-Ray system. Proprietary emission control circuitry provides excellent regulation of X-Ray tube current, along with outstanding stability and performance.

### TYPICAL APPLICATIONS

Dental X-Ray: Panoramic and CT Imaging

### SPECIFICATIONS

#### X-Ray Tube Characteristics:

Target Angle: 5 degrees  
Focal Spot: 0.5mm nominal  
Beam Filtration: 3.0mm of Al equivalent  
Beam Geometry: see page 3

#### X-Ray Tube Voltage:

Nominal X-Ray tube voltage is adjustable between 50kV to 90kV

#### Voltage Regulation:

Line:  $\pm 0.5\%$  for a  $\pm 1V$  change of nominal input line voltage  
Load:  $\pm 0.1\%$  for a load change of 25 $\mu A$  to maximum rated current

#### X-Ray Tube Current:

1mA to 10mA over specified tube voltage range

#### Current Regulation:

Line:  $\pm 0.5\%$  for a  $\pm 1V$  change of nominal input line voltage  
Load:  $\pm 0.5\%$  for a voltage change of 35kV to 80kV

- **Integrated HV Supply, Filament Supply, X-Ray Tube, Beam Port and Control Electronics**
- **Compact & Lightweight**
- **Analog or Digital Control Interface**

#### X-Ray Tube Power:

900W peak power

#### Duty Cycle:

CT (Pulsed):  $\leq 45$  seconds scan time cycle at up to 40 pulses per second available

Panoramic (Continuous): Maximum scan time = 30s, with 60s off-time. Five consecutive scans

#### Input Voltage:

100-240Vac  $\pm 10\%$  50/60 Hz, 10 amps RMS maximum

#### Interface:

The RS-232 serial communications interface will be used to program and monitor output voltage and current, control various functions and report status and faults.

#### Digital Interface Connector:

RS-232: 9 pin D connector, male

#### Operating Temperature:

0°C to +40°C

#### Storage Temperature:

-20°C to +70°C

#### Humidity:

5% to 95% relative humidity, non-condensing

#### Cooling:

Tank: Convection  
Controller: Forced air via provided fan

#### Dimensions:

X-Ray Tank: 9.7"W x 7.7"H x 4.7"D (247mm x 195mm x 119mm)  
Inverter/Controller: 7.10"W x 9.80"H x 3.60"D (180mm x 250mm x 92mm)

#### Weight:

X-Ray Tank: 17lbs (7.7kg)  
Inverter/Controller: 6.5lbs (3kg)

#### X-Ray Leakage:

Less than 100mR/hour (or  $< 1\text{mGy/hr}$ ) @ 1meter from the Monoblock® surface.

#### Regulatory Approvals:

Compliant to EMC 60601-1-2 (external EMC filter and shielding required). UL/CUL recognized file E242584.

## AC INPUT POWER 3 PIN PHOENIX CONTACT

PIN	SIGNAL	PARAMETERS
1	Line	Line
2	GND	Ground
3	Neutral	Neutral

## ANALOG INTERFACE— J2 10 PIN PHOENIX CONTACT

PIN	SIGNAL	PARAMETERS
1	X-Ray Ready/Sync	+5 V Logic
2	X-Ray Enable	+5 V Logic
3	+ X-ray Signal (Exgate)	+5VDC = Enable X-Ray, Low (or Open) = Disable X-Ray
4	Signal Ground	Signal Ground
5	VMTR Signal (KV monitor)	Voltage: 0 to +5.00 V max, Scale Factor: 0 – 5.00 Vdc = 0 to 100 kV
6	Signal Ground	Signal Ground
7	IMTR Signal (mA monitor)	Voltage: 0 to +5.00 V max, Scale Factor: 0 – 5.00 Vdc = 0 – 12.1mA
8	Fault Signal	Output signal: Open Collector, High (Open) = No Fault
9	HV ON Lamp, Relay N/O	Relay Normally Open, Dry contacts rated 1A or less will handle a nominal 50mA DC load.
10	HV ON Lamp, Common	Common

## RS-232 DIGITAL INTERFACE— J5 9 PIN MALE D CONNECTOR

PIN	SIGNAL	PARAMETERS
1	N/C	No Connection
2	TX	Transmit Data
3	RX In	Receive Data
4	N/C	No Connection
5	SGND	Signal Ground
6	N/C	No Connection
7	N/C	No Connection
8	N/C	No Connection
9	N/C	No Connection


## LED INDICATORS

INDICATOR	SIGNAL NAME	CONDITION Illuminated When...
LED 1	OV	High kV occurs
LED 2	UV	Low kV occurs
LED 3	UC	Low mA occurs
LED 4	OC	High mA occurs
LED 5	ARC FLT	Arc fault occurs
LED 6	OT	Over temperature occurs
LED 7	PW (Pulse mode)	Pulse mode selected
LED 8	CW (CW mode)	CW mode selected
LED 9	CW (CW mode)	X-Ray is ON


#### PDM Generator Tank

DIMENSIONS: in.[mm]


##### TOP VIEW

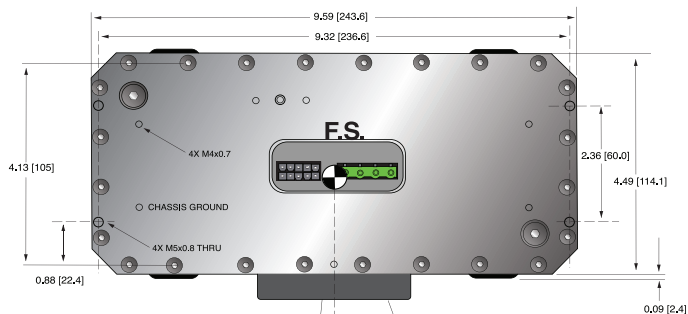

##### FRONT VIEW

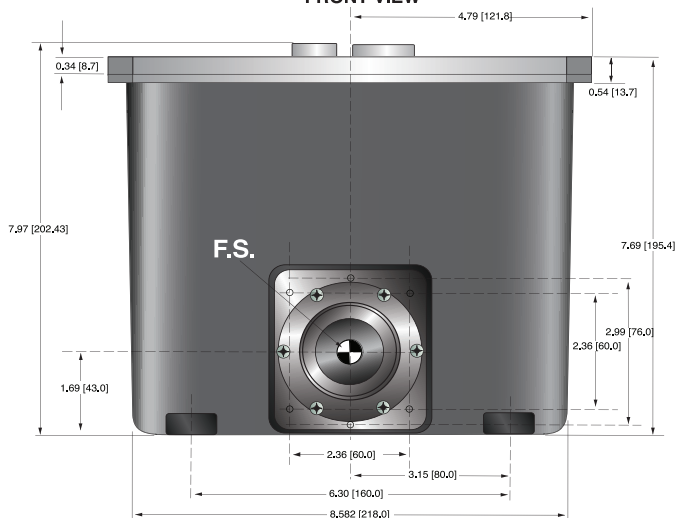


##### SIDE VIEW

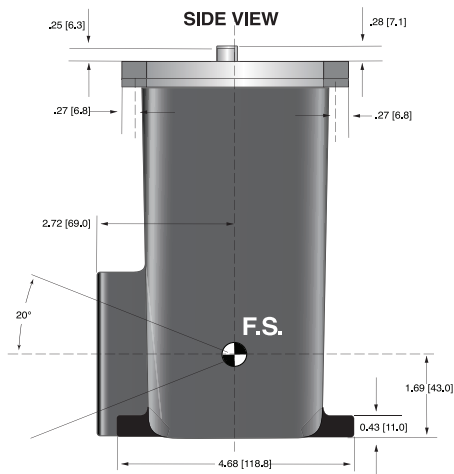


#### PDM Inverter/Controller

DIMENSIONS: in.[mm]


##### TOP VIEW

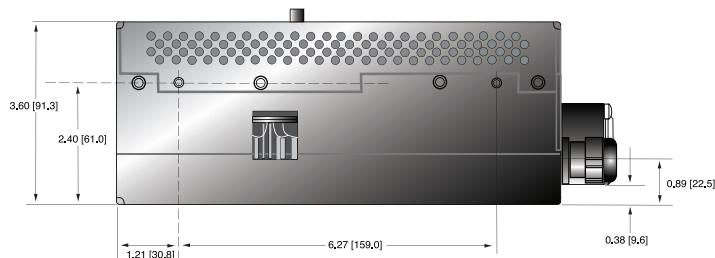

##### FRONT VIEW

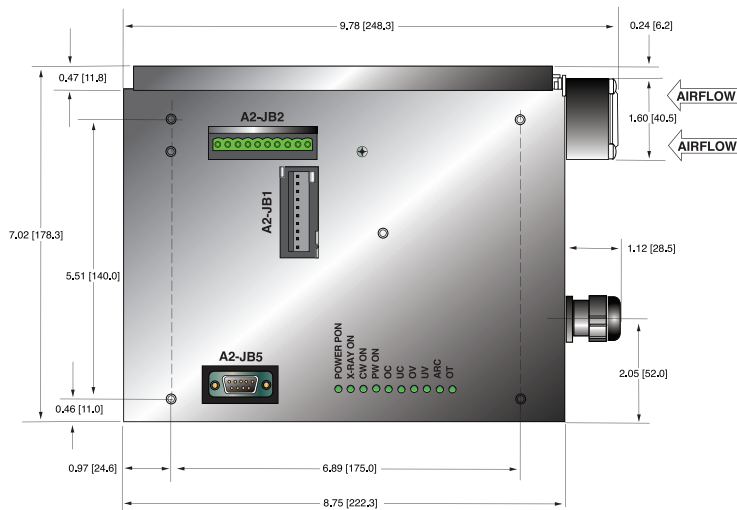

##### SIDE VIEW

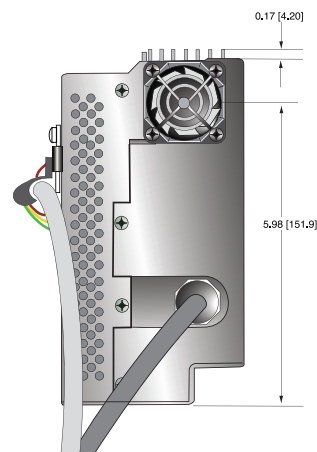



- **Integrated HV Supply, Filament Supply, X-Ray Tube, Beam Port and Control Electronics**
- **Compact & Lightweight**
- **<1ms Rise Time is Ideal for Extremities**
- **Specifically designed for the C-Arm OEM**

Spellman's MMB125PN3.5 Medical Monoblock® with <1ms rise time is ideal for extremities, specialized applications and vascular imaging. Benefit from Spellman's 70 plus years of high voltage innovation with this MMB125PN3.5 Monoblock® X-Ray source specifically designed for the C-Arm OEM. Our advanced technology and design expertise in conjunction with our depth of manufacturing capabilities position Spellman as the wise choice for your Monoblock® requirements.

Spellman's Ultra-Fast MMB Series utilizes our unique technologies that increases the quality of the X-Ray beam and significantly reduces patient dose. Pulsed Fluoroscopy enhances imaging of dense and complex anatomy to further support dose management. With a rise time of <1ms, Spellman's MMB Series is among the fastest in the industry.

### TYPICAL APPLICATIONS

C-Arm OEM

### SPECIFICATIONS

#### X-Ray Characteristics:

Focal Spot:	0.5mm for small focus 1.6mm for large focus
Target Angle:	16°
Target Material:	Tungsten
Beam Filter:	0.8mm Al
Beam Geometry:	Refer to line drawing
X-Ray Leakage:	Less than <1mGy/hour @ 1meter from tank surface.
Maximum Filament Current:	4.3A
Filament Inverter Switching Frequency:	20kHz
Anode Heat Content:	35.5kJ
Maximum Anode Heat Dissipation:	600W
Distance Between Focal Spot to X-Ray Output Window:	45mm
Focal Spot Position:	Refer to outline drawing, additionally it is marked on tank cover.

#### Input Power:

Input Voltage:	190-264Vac, single phase, 50/60 Hz
Continuous Current:	≤9A @ 600W, 220V
Peak Current:	≤34A @ 3500W, 220V

#### X-Ray Tube Voltage:

Operational Range:	40 to 125kV
kV Rise Time:	<1ms (from 10% to 90%)
Reproducibility:	≤0.05 per IEC60601-2-54
kV Ripple:	≤1%
kV Accuracy:	
Fluoroscopy:	±5%
kV Overshoot:	≤5%

#### X-Ray Tube Current:

Fluoro:	0.2mA to 6 mA (small focal spot)
Pulsed Fluoro:	0.5mA to 10 mA (small focal spot)
Radiography:	10mA to 40mA (large focal spot)
mA Accuracy:	±10%

#### Maximum Operating Conditions:

Continuous Low Level Fluoro:	6 mA for 5 minutes
Continuous High Level Fluoro:	10 mA for 2 minutes
Pulsed Fluoro:	0.5fps, 1fps, 2fps, 4fps, 8fps, 15fps, 25fps, 30fps for 2 minutes
Pulse on time:	the lower value of 40ms or 50% duty cycle
Radiographic:	Single shot large focal spot, 0.1 seconds @ 3500 watts
Maximum Anode Heat Dissipation:	600W
Average Power:	600W for 5 minutes
Tank Heat Content:	No less than 675kHU
Max. Cooling Rate:	150W

#### X-Ray Tube Current Protection:

- Over Current (High mA): Trip point is set at 15% over maximum rated current, or at 15% over programmed output current value for longer than 50ms.
- Under Current (High mA): Trip point is set at 15% under programmed output current value for longer than 50ms.
- Over Current (Low mA): Trip point is set at 20% over maximum rated current, or at 20% over programmed output current value for longer than 50ms.
- Under Current (Low mA): Trip point is set at 20% under programmed output current value for longer than 50ms.



#### X-Ray Tube Voltage Protection:

Over Voltage (High kV): Trip point is when the kV output exceeds 137.5kV for more than 10ms or it set is at 10% over programmed output voltage value for longer than 30ms.

Under Voltage (Low kV): Trip point is set at 10% under the programmed output voltage value for longer than 30ms.

#### X-Ray Tube Arc Protection:

Arc Intervention: Unit will detect an Arc but HV will not be shut down, but if multiple arcs occur (4 arcs in 10 seconds) the unit will shut down.

#### Over Temperature Protection:

Over Temperature: Over temperature of tank cover trip point shall be within 60°C ±5°C. Over temperature of tank oil trip point shall be set 65°C.

**Operating Temperature:** 0 to +40 °C.

**Storage Temperature:** -20 to +70 °C

**Altitude:** 0 to 8000 feet (0 to 2438 meters)

**Humidity:** 5 to 95%, non-condensing.

#### Dimensions:

X-Ray Tank: 12.2" x 6.2" x 5.7" (310mm x 158mm x 145mm)  
Refer to outline drawing.

Controller: 14.9" x 10.6" x 3.2" (380mm x 270mm x 83mm)  
Refer to outline drawing.

#### Weight:

X-Ray Tank: 27.5 pounds (13kg)  
Controller: 9.9 pounds (4.5kg)

#### Regulatory Approvals:

Designed to be compliant to:

IEC 60601-1:2005+A

Medical electrical equipment Part 1: General requirements for basic safety and essential performance.

IEC 60601-1-2

2007 Medical electrical equipment Part 1-2: General requirements for basic safety and essential performance- Collateral standard: Electromagnetic compatibility—Requirements and tests.

IEC 60601-1-3

2008 Medical electrical equipment Part 1-3: General requirements for basic safety and essential performance- Collateral standard: Radiation protection in diagnostic X-Ray equipment.

IEC 60601-2-54

2009 Medical electrical equipment Part 2: Particular requirements for the basic safety and essential performance of X-Ray equipment for radiography and radioscopy.

#### EMC

Designed to meet IEC requirements for medical components. (Note: External EMI filter may be required)

#### RoHS

Controller and Tank Assembly are RoHS compliant.

#### AC LINE POWER CONNECTOR— TE: 1-350943-0

PIN	SIGNAL	PARAMETERS
1	Ground	Earth Ground
2	AC Input 1	190 - 264Vac, single phase, 50/60Hz, 34A max.
3	AC Input 2	190 - 264Vac, single phase, 50/60Hz, 34A max.

Note: Ground stud is provided on chassis

#### DIGITAL INTERFACE—9 PIN FEMALE D CONNECTOR TE: 5747844-5

PIN	SIGNAL	PARAMETERS
1	NC	No Connection
2	RS-232 TX Out	RS-232 Transmit
3	RS-232 RX In	RS-232 Receive
4	NC	No Connection
5	RS-232 Ground	Ground from RS-232 transceiver IC
6	NC	No Connection
7	NC	No Connection
8	NC	No Connection
9	NC	No Connection


#### ANALOG INTERFACE—15 PIN FEMALE D CONNECTOR TE: 5747845-5

PIN	SIGNAL	PARAMETERS
1	GND	Signal Ground
2	+5Vdc Out	+5Vdc, 100mA max.
3	Prep	User signal (Contact Closure) to alert the generator that exposure sequence will begin. Once this signal is active, exposure parameters are locked in and cannot be changed. Contact connection to pin 14. Closed = PREP, the filament is placed in preheat mode
4	Ready	The generator is ready for X-Ray exposure. Open Collector. Low/Active = Ready
5	Exposure	User signal (Contact Closure) to generator to generate X-Rays. Filament is boosted, and high voltage is generated after the boost time. Contact connection to pin 14. Closed = Exposure
6	X-Ray ON 75% Status	Transistor output to indicate X-Ray ON status synchronized with 75% of kV set point
7	X-Ray ON Status	Transistor output to indicate X-Ray ON status synchronized with kV start up
8	X-Ray Shutdown	User signal to generator to rapidly turn HV OFF and ON during serial exposure sequence. Low/Active=HV OFF
9	HVG Fault Status	Generator signal indicating generator fault. Open collector transistor output. Low/Active = Fault
10	kV Monitor	Signal from generator. 0-10V = 0-140kV
11	mA Monitor	Signal from generator. Large focus: 0-10V = 0-50mA Small focus: 0-5V=0-10mA
12	Filament Current Monitor	Signal from generator. 0-10V = 0-6A
13	Monitor GND	Ground for reference of monitor signals
14	+24Vdc Out	For connection to PREP and EXPOSURE control relay coils
15	Shield Ground	For connection of interface cable shield to generator chassis ground


DIMENSIONS: in.[mm]

## GENERATOR TANK


### FRONT VIEW

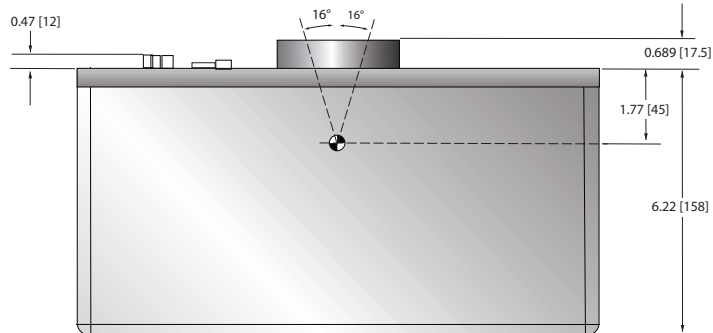

### SIDE VIEW

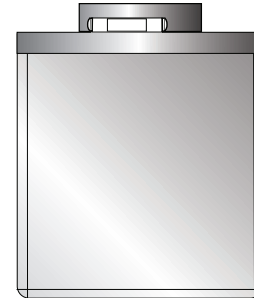

### TOP VIEW

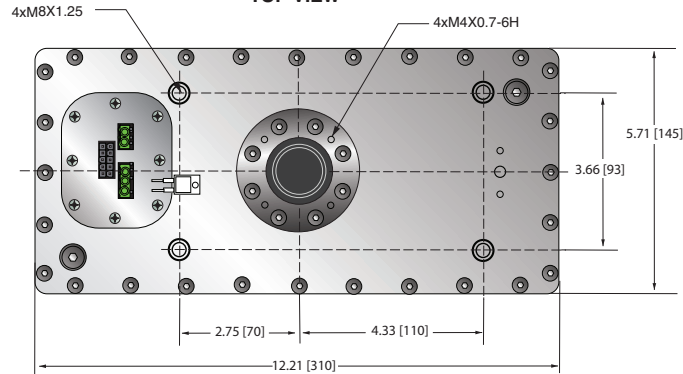


## CONTROL UNIT

### FRONT VIEW



### TOP VIEW

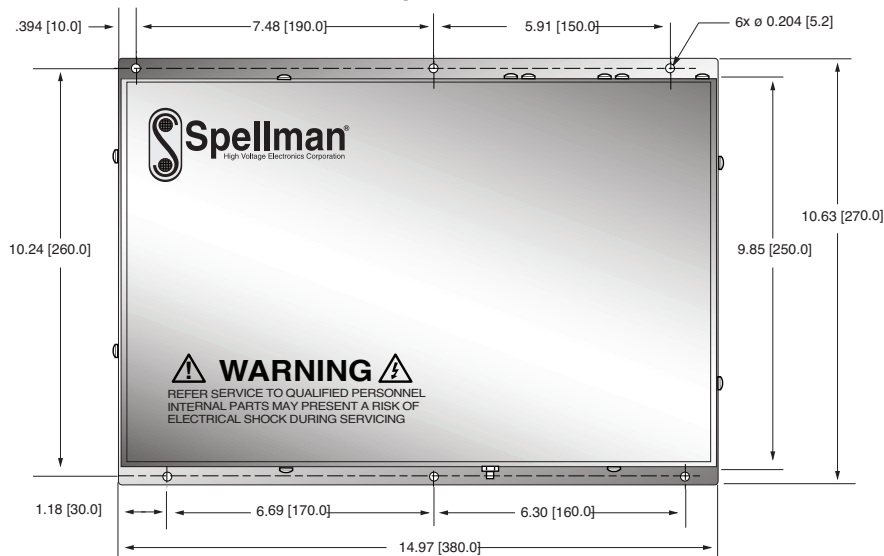

***Spellman USA and Corporate HQ***

475 Wireless Blvd.  
Hauppauge, NY 11788  
United States  
tel: +1 631-630-3000  
fax: +1 631-435-1620  
email: sales@spellmanhv.com

***Spellman Valhalla NY USA***

One Commerce Park  
Valhalla, NY 10595  
United States  
tel: +1 914-686-3600  
fax: +1 914-686-5424

***Spellman UK***

Broomers Hill Park #14, Broomers Hill  
Pulborough, West Sussex,  
United Kingdom RH20 2RY  
tel: +44 (0) 1798 877000  
fax: +44 (0) 1798 872479

***Spellman Japan***

Kano Bldg. 5F, 1-26-7 Nishigotanda,  
Shinagawa-ku, Tokyo 141-0031 Japan  
tel: +81 (0) 3-5436-9810  
fax: +81 (0) 3-5436-9811

***Spellman China***

Spellman High Voltage Electronics (SIP) Co Ltd.  
No. 86 Jinjiang Road,  
Suzhou Industrial Park 215217 China  
tel: +86-512-67630010  
fax: +86-512-67630030

***Spellman High Voltage Korea Co.,Ltd.***

#B-720, BRC Smart Valley,  
Song Do Mirae-ro 30,  
Yeonsu-Gu, Incheon, Korea 406-081  
tel: +82 32-719-2300  
fax: +82 32-720-4300

***Spellman de Mexico – Plant 2***

Avenida Pedregal # 2 Esquina  
Avenida Chapultepec  
Parque Industrial FINSA Oriente  
Matamoros, Tamps., Mexico 87340  
tel. +52 868 150-1200

***Spellman de Mexico – Plant 3***

Avenida Chapultepec # 101 Esquina  
Avenida Horizonte  
Parque Industrial FINSA Oriente  
Matamoros, Tamps., Mexico 87340  
tel. +52 868 150-1200

***Spellman High Voltage GmbH***

Josef-Baumann-Straße 23  
44805 Bochum  
Germany  
tel: +49 (0) 234 87906-0

