



Tel: +44 (0)1798 873986
Fax: +44 (0)1798 872479
E-mail : hvsales@spellmanhv.co.uk

Broomers Park, Broomers Hill Lane
Pulborough, W. Sussex, RH20 2RY

High Voltage Power Supply XMPG10P10/24

SAFETY AND INSTALLATION INSTRUCTIONS

Document Number: 81233-4.

Issue	A		
Date	23/01/18		
Issuing Authority	I-5650		
Checked			
Approved			



INVESTOR IN PEOPLE

USA

EUROPE

JAPAN


MEXICO

Broomers Park Broomers Hill Lane Pulborough West Sussex RH20 2RY UK
Tel:+44 (0) 1798 877000 Fax:+44 (0) 1798 872479 www.spellmanhv.co.uk



Certificate No. 1042/96

SAFETY

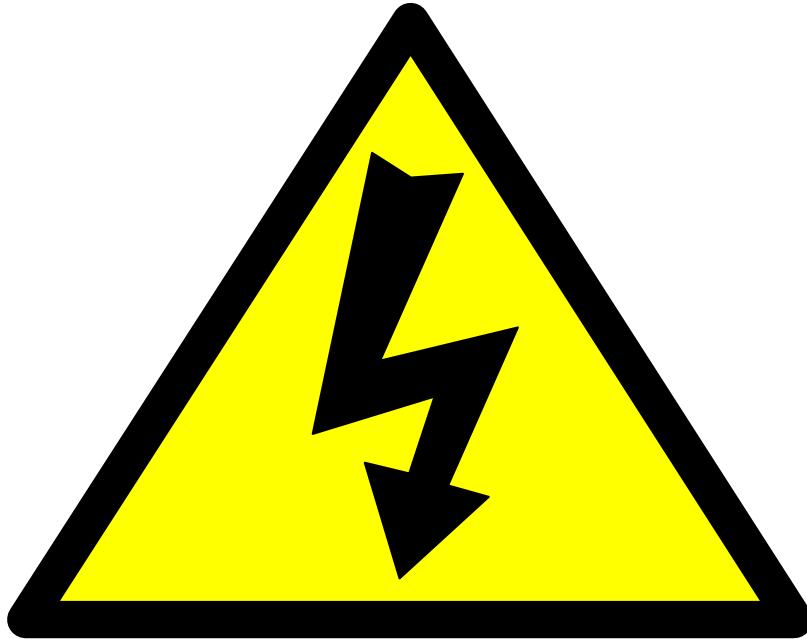

DANGER HIGH VOLTAGE RISK OF ELECTROCUTION

Observe extreme caution when working with this equipment

- ♦ **High voltage power supplies must always be connected to protective earth**
- ♦ **Do not touch connections unless equipment is turned off and the capacitance of both the load and power supply are grounded**
- ♦ **Allow adequate time for discharge of internal capacitance of the power supply**
- ♦ **Do not ground yourself or work under wet or damp conditions**

Servicing Safety

- ♦ **Maintenance may require removing the Instrument cover with the power on**
- ♦ **Servicing should only be done by qualified personnel aware of the hazards**
- ♦ **If in doubt, return to supplier for servicing**

Contents

1 Unit Description	3
2 Safety	3
3 Installation.....	4
4 Input and Output Connections	5

1 Unit Description

The XMPF10N5/24 unit consists of one chassis containing the high voltage power supply.
The dimensions are 185mm x 105mm x 33.5mm

The unit is designed for operation from 24Vdc \pm 10%. The maximum rated input current is 2A.

The unit provides an HV Cathode output rated at 10kV, 10W. Intended to drive an X-ray tube with a grounded filament, rated at 0V to 3Vdc 5A max.

All control and monitoring is accomplished via a 15 way 'D' connector which also provides input power to the unit.

Operating Temperature is 5°C to +40°C ambient for normal operation.

The mass of the module is nominally 2kg.

2 Safety

The HV output of the unit is hazardous and the conditions of this manual must be complied with to maintain safety. Operating the unit in a manner not specified in this manual may impair the protection against electric shock provided by the unit.

The unit is contained in an earthed case, the system protective earth shall be provided to the chassis. The case of the unit shall be properly bonded to the main protective earth termination in the end product.

The unit has been evaluated for use in a Pollution Degree 2, Installation Category II environment.

Consideration should be given to conducting the following tests with the unit installed in the end product:

- Dielectric Voltage Withstand Test, between live parts of the unit and the end product chassis.
- Permissible Limits Tests with the unit installed in the end product.
- Temperatures on power electronic components, transformer windings and accessible surfaces.

There is no relevance to a risk assessment carried out as part of the CE testing on the HV unit. It is recommended that a full assessment is carried out in the end application.



This symbol on the unit means “read the manual before powering the equipment”.



This symbol on the unit means “Caution; risk of electric shock”.

3 Installation

3.1 Initial Inspection

Inspect the package exterior for evidence of damage due to handling in transit. Notify the carrier and Spellman immediately if damage is evident. Do not destroy or remove any of the packing material used in a damaged shipment.

After unpacking, inspect the panel and chassis for visible damage.

Note: Failure to comply with the above could compromise the safe operation of the unit and invalidate the warranty.

3.2 Mechanical Installation

The unit should only be used in a Pollution Degree 2 Installation Category II environment.

The input and output connectors are not intended for field connections and should only be connected to internal wiring in the end product. The unit is intended for use as a component and no surface of the unit should be accessible in the end product.

3.3 Electrical Installation

The unit must be terminated safely before operation. Hazardous voltages will be exposed if the connector is removed whilst the unit is enabled.

The 24Vdc input shall be provided by a double insulated, or SELV, UL recognised power supply.

Circuits connected to the unit shall be provided with rated insulation to IEC/UL61010-1.

The unit must be switched off for at least one minute before disconnecting any of the connectors.

4 Input and Output Connections

4.1 The low voltage signal connections are made by a 15 way 'D' connector; the pin out is shown below:-

Pin #	Signal Name	Range
1	+24V input	
2	Power Ground	
3	Preheat (set value)	0 – 5V from internal pre set
4	Test (Filament Current Direct Program)	Do not connect
5	HV enable	Digital input
6	Filament stable	Digital output
7	High voltage program output	0 – 10V from internal pre set
8	High voltage program input	0 – 10V input
9	High voltage monitor	0 – 10V output
10	Emission current monitor	0 – 10V output
11	Filament current monitor	0 – 10V output
12	Emission current program input	0 – 10V input
13	Emission current program output	0 – 10V from internal pre set
14	Signal ground	
15	Pre-set maximum filament current set value	0 – 10V from internal pre set

4.2 Filament Output

The filament output is via two tri rated 16/02 conductor wires:-

Colour	Name
Red	Filament+
Black	Filament-

4.3 HV output

The HV output is via a 500mm long un-terminated URM76 LSF screened cable.